

Fresh Grillo 60x90

Fresh Grillo 60x90 Gas Cooker User Manual

Model: 500006210

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Fresh Grillo 60x90 Gas Cooker. Please read this manual thoroughly before using the appliance and keep it for future reference. Proper use ensures optimal performance and extends the lifespan of your cooker.

2. SAFETY INSTRUCTIONS

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information, consult a qualified installer, service agency, or the gas supplier.

- Ensure adequate ventilation in the kitchen when the cooker is in use.
- Do not store flammable materials near the appliance.
- Keep children away from the cooker during operation and cooling. Surfaces can become extremely hot.
- In case of a gas leak, immediately shut off the gas supply, open windows, and do not operate any electrical switches or appliances. Contact a qualified technician.
- Always use oven mitts when handling hot cookware or oven racks.
- Do not use the oven for heating the room.
- Ensure all controls are in the 'OFF' position after use.

3. PRODUCT OVERVIEW

The Fresh Grillo 60x90 Gas Cooker is a freestanding range designed for versatile cooking. It features a spacious cooktop with multiple burners and a large oven with grilling capabilities.



Figure 1: Front view of the Fresh Grillo 60x90 Gas Cooker. This image displays the six cooktop burners, the control panel with knobs and digital display, and the full glass oven door.

3.1 Cooktop

- **Burners:** Equipped with 4 gas burners and 2 electric burners for diverse cooking needs.
- **Grates:** Durable grates designed to support various cookware sizes.

3.2 Control Panel

- **Control Knobs:** Individual knobs for each burner, oven, and grill, allowing precise flame and temperature adjustment.
- **Digital Touch Timer:** An integrated digital display for setting cooking times and other functions.
- **Self-Ignition Button:** For convenient ignition of gas burners.

3.3 Oven

- **Full Glass Door:** Provides clear visibility of food during cooking.
- **Oven Racks:** Adjustable racks for flexible placement of dishes.
- **Warming Drawer:** Located at the bottom, suitable for keeping food warm.

4. SETUP AND INSTALLATION

IMPORTANT: Installation of this appliance must be performed by a qualified technician in accordance with local codes and regulations.

4.1 Unpacking

- Carefully remove all packaging materials.
- Inspect the cooker for any damage. Report any damage to your retailer immediately.
- Retain packaging materials for potential future transport or service.

4.2 Location and Ventilation

- Install the cooker in a well-ventilated area.
- Ensure proper clearances from adjacent combustible surfaces as per local building codes.

4.3 Gas Connection

- Connect the cooker to the gas supply using an approved flexible gas connector.
- Check for gas leaks using a soapy water solution; never use an open flame.

4.4 Electrical Connection

- Plug the cooker into a properly grounded electrical outlet. This powers the self-ignition, digital timer, and electric burners.
- Ensure the voltage and frequency match the appliance's requirements.

4.5 Leveling

- Adjust the leveling feet at the bottom of the cooker to ensure it is stable and level. This prevents spills and ensures even cooking.

5. OPERATING INSTRUCTIONS

5.1 Using the Gas Burners

1. Place cookware centrally on the burner grate.
2. Push and turn the corresponding burner knob counter-clockwise to the 'MAX' position while simultaneously pressing the self-ignition button.
3. Once the flame ignites, hold the knob for a few seconds to activate the safety device.
4. Adjust the flame size by turning the knob between 'MAX' and 'MIN' settings.
5. To turn off, turn the knob clockwise to the 'OFF' position.

5.2 Using the Electric Burners

1. Place cookware on the electric burner.
2. Turn the corresponding electric burner knob to the desired heat setting. The burner will heat up gradually.
3. To turn off, turn the knob to the 'OFF' position. Allow the burner to cool completely before touching.

5.3 Using the Oven

1. Open the oven door and place food on the desired rack level.
2. The oven and grill share a double knob. Push and turn the oven knob to the desired temperature setting.
3. The oven will begin to preheat. A light inside the oven may indicate operation.
4. Monitor cooking through the full glass door.
5. To turn off, turn the oven knob to the 'OFF' position.

5.4 Using the Grill

1. Place food on the grill rack, typically on the top rack position.
2. Push and turn the grill knob to activate the grill function.
3. Always keep the oven door slightly ajar when using the grill, unless specified otherwise by the appliance.

design, to prevent overheating.

4. Monitor food closely to prevent burning.
5. To turn off, turn the grill knob to the 'OFF' position.

5.5 Using the Digital Touch Timer

- Refer to the specific instructions printed near the digital display or on a separate quick guide for detailed timer functions (e.g., setting current time, cooking duration, alarm).
- Typically, touch the 'Mode' button to cycle through functions and '+' / '-' buttons to adjust values.

6. CLEANING AND MAINTENANCE

CAUTION: Always ensure the cooker is cool and disconnected from the power supply before cleaning.

6.1 Exterior Cleaning

- Wipe exterior surfaces with a soft cloth dampened with mild detergent and warm water.
- Avoid abrasive cleaners or scouring pads, which can scratch the polished finish.

6.2 Cooktop and Burners

- Remove burner grates and caps. Wash them in warm soapy water, rinse, and dry thoroughly.
- Clean the cooktop surface with a non-abrasive cleaner.
- Ensure burner ports are clear of food debris. Use a small brush or needle if necessary.
- Reassemble burners and grates only when completely dry.

6.3 Oven Interior

- Remove oven racks and clean them separately.
- Wipe the oven interior with a damp cloth and mild oven cleaner (follow cleaner instructions).
- For stubborn stains, a specialized oven cleaner may be used, ensuring proper ventilation.
- Clean the full glass oven door with glass cleaner or soapy water.

7. TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Gas burner does not ignite.	No gas supply, power outage, clogged burner port, ignition electrode dirty.	Check gas valve, ensure power, clean burner ports, clean ignition electrode.
Oven not heating.	Power outage, incorrect temperature setting, oven door not closed properly.	Check power supply, verify temperature setting, ensure door is fully closed.
Digital timer not working.	Power outage, incorrect setting.	Check power, reset timer according to instructions.
Uneven cooking in oven.	Cooker not level, improper rack placement, overloaded oven.	Level the cooker, use appropriate rack, avoid overcrowding.

If the problem persists after attempting these solutions, please contact Fresh customer service or a qualified service technician.

8. SPECIFICATIONS

- **Brand:** Fresh
- **Model:** Grillo 60x90 (500006210)
- **Dimensions (Cooktop):** 60 x 90 cm
- **Fuel Type:** Gas (with electric burners)
- **Number of Burners:** 6 (4 Gas, 2 Electric)
- **Control Console:** Knobs, Digital Touch Timer
- **Oven Door Material:** Full Glass
- **Safety Features:** Full Safety (e.g., flame failure device)
- **Ignition:** Self-ignition Function
- **Weight:** Approximately 45 kg
- **Finish Type:** Polished
- **Drawer Type:** Warming

9. WARRANTY AND SUPPORT

Your Fresh Grillo 60x90 Gas Cooker comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage duration and what is covered.

For technical support, service requests, or to purchase genuine spare parts, please contact Fresh customer service. Contact details can typically be found on the Fresh official website or on your purchase documentation.

When contacting support, please have your model number (500006210) and serial number ready.