

[Manuals.plus](#) /

› [Travelwey](#) /

› Travelwey Digital Travel Alarm Clock User Manual

Travelwey 8541847728

Travelwey Digital Travel Alarm Clock User Manual

Model: 8541847728 | Brand: Travelwey

PRODUCT OVERVIEW

The Travelwey Digital Travel Alarm Clock (Model: 8541847728) is designed for simplicity and portability, making it an ideal companion for travelers and anyone seeking a straightforward timekeeping device. It focuses on essential functions, avoiding unnecessary complexities to ensure ease of use for all ages. This compact and lightweight alarm clock features a clear digital display, a loud alarm with snooze, and a convenient on/off switch for battery conservation during travel.



Figure 1: Front view of the Travelway Digital Travel Alarm Clock, showcasing its clear digital display and control buttons.

SETUP

Battery Installation

The Travelway Digital Travel Alarm Clock requires two AAA batteries (not included). To install or replace batteries:

1. Locate the battery compartment on the back of the clock.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+ and - ends).
4. Close the battery compartment cover securely.



Figure 2: Rear view of the clock, showing the battery compartment and the ON/OFF switch. The clock requires two AAA batteries.

OPERATING INSTRUCTIONS

Setting the Time

To set the current time on your Travelwey alarm clock:

- Press and hold the "Clock" button.

- While holding "Clock", press "Hour" to adjust the hour.
- While holding "Clock", press "Min" to adjust the minutes.
- Release the "Clock" button to save the time. The clock supports both 12-hour (AM/PM) and 24-hour formats.

Setting the Alarm

To set your desired alarm time:

- Press and hold the "Alarm" button.
- While holding "Alarm", press "Hour" to adjust the alarm hour.
- While holding "Alarm", press "Min" to adjust the alarm minutes.
- Release the "Alarm" button to save the alarm time.
- To activate or deactivate the alarm, press the "ALARM ON/OFF" button. A bell icon will appear on the display when the alarm is active.

Snooze Function

When the alarm sounds, press any button (except the "ALARM ON/OFF" button) to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes.

Display Light

To illuminate the display for a few seconds, press the "Light" button located on the top of the clock. This is useful for checking the time in low-light conditions.

Travel ON/OFF Switch

For travel, the clock features a physical ON/OFF switch on the back. Switching it to "OFF" will turn off the display and disable the light switch, conserving battery life. The internal time is retained, so you do not need to reset it upon arrival at your destination.

Your browser does not support the video tag.

Video 1: Official overview of the Travelwey Digital Travel Alarm Clock, demonstrating its compact design, simple controls, and key features like the display light and ON/OFF switch.

MAINTENANCE

Cleaning

To clean the clock, gently wipe it with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the display or casing.

Battery Replacement

Replace the two AAA batteries when the display becomes dim or the clock stops functioning. Refer to the "Battery Installation" section for instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are low or incorrectly installed. ON/OFF switch is in the "OFF" position.	Replace batteries with fresh AAA batteries, ensuring correct polarity. Switch the ON/OFF button on the back to "ON".

Problem	Possible Cause	Solution
Alarm does not sound.	Alarm is not activated. Alarm volume is too low (not applicable for this model as it has a fixed loud alarm).	Press the "ALARM ON/OFF" button to ensure the bell icon is displayed. Verify alarm time is correctly set.
Buttons are unresponsive.	ON/OFF switch is in the "OFF" position.	Switch the ON/OFF button on the back to "ON".

SPECIFICATIONS

- Brand:** Travelwey
- Model:** 8541847728
- Color:** Black
- Display Type:** Digital
- Power Source:** 2 AAA batteries (required)
- Product Dimensions:** 2.76"W x 3.15"H
- Item Weight:** 0.64 ounces
- Material:** Acrylonitrile Butadiene Styrene (Plastic)
- Special Features:** Alarm, Snooze, Backlight, Travel ON/OFF Switch

WARRANTY AND SUPPORT

The Travelwey Digital Travel Alarm Clock comes with a Limited Warranty. For any product inquiries, troubleshooting assistance, or warranty claims, please contact Travelwey customer support directly. You can find contact information on the official Travelwey website or through your purchase platform.

For more information, visit the official [Travelwey Brand Page](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I switch the Travelwey 8541847728 Digital Travel Alarm Clock to 12-hour time format?

Based on the manual for the Travelwey Digital Travel Alarm Clock (Model 8541847728), the device supports both 12-hour (AM/PM) and 24-hour formats. While the manual confirms both formats are available, it does not explicitly...

[Read full answer](#)

How do I set the temperature on the Travelwey 8541847728 Digital Travel Alarm Clock?

Based on the manual for the Travelwey Digital Travel Alarm Clock (Model: 8541847728), this device does not include a temperature display or thermometer function. The clock is designed as a "simple and basic" device focusing...

[Read full answer](#)

How do I set the temperature on the Travelwey 8541847728 Digital Travel Alarm Clock?

Based on the manual for the Travelwey Digital Travel Alarm Clock (Model 8541847728), this specific model does not have a temperature display or a thermometer function. It is designed as a simple, basic alarm...

[Read full answer](#)