

[Manuals.plus](#) /

› [Nespresso](#) /

› Nespresso VertuoLine Evoluo Deluxe Coffee and Espresso Maker GCC1-US-GM-NE Instruction Manual

Nespresso GCC1-US-GM-NE

Nespresso VertuoLine Evoluo Deluxe Coffee and Espresso Maker Instruction Manual

MODEL: GCC1-US-GM-NE

INTRODUCTION

The Nespresso VertuoLine Evoluo Deluxe Coffee and Espresso Maker, model GCC1-US-GM-NE, provides a versatile brewing experience for both coffee and espresso. This machine utilizes Centrifusion technology for optimal extraction and features automatic capsule recognition. This manual provides essential information for the proper setup, operation, and maintenance of your appliance.

Key Features:

- Centrifusion technology for gentle brewing of coffee and espresso.
- Automatic capsule recognition and code reading for blend-specific brewing parameters.
- Accommodates two capsule sizes: large for Coffee and small for Espresso.
- Easy insertion and ejection of Nespresso VertuoLine capsules (not compatible with Original Line capsules).
- Fast heat-up time of 15 seconds.
- Removable 54 oz. water tank.
- Used capsule container holds up to 17 capsules.
- Movable cup support.
- Automatic off mode after 9 minutes of inactivity.

SETUP

1. **Unpacking:** Carefully remove the machine from its packaging. Ensure all components, including the water tank, drip tray, and capsule container, are present and undamaged.
2. **Placement:** Place the machine on a flat, stable, and heat-resistant surface, away from water splashes and heat sources. Ensure adequate space around the machine for ventilation and access to the water tank and capsule

container.

3. **Rinsing the Water Tank:** Before first use, wash the water tank, drip tray, and cup support with clean water.

4. **Filling the Water Tank:** Fill the water tank with fresh drinking water. Do not exceed the maximum fill line.

5. **First Use / Rinsing Cycle:**

- Plug the machine into a grounded power outlet.
- Place a container (at least 0.5 liters) under the coffee outlet.
- Press the button on top of the machine to turn it on. The button will blink while heating up (approximately 15 seconds).
- Once the button is steady, press it three times quickly to start the rinsing cycle. The machine will dispense hot water.
- Repeat the rinsing cycle if desired. The machine is ready for use when the button is steady.



Figure 1: Nespresso VertuoLine Evoluo Deluxe Coffee and Espresso Maker. This image shows the machine with its water tank and used capsule container, ready for use on a kitchen counter.

OPERATING INSTRUCTIONS

1. **Power On:** Ensure the machine is plugged in and the water tank is filled. Press the button on top to turn on the machine. Wait for the button to become steady (approximately 15 seconds).
2. **Open Head:** Unlock the machine head by rotating the lever counter-clockwise to the "unlock" position and lifting the head.
3. **Insert Capsule:** Place a Nespresso VertuoLine capsule into the machine, ensuring it is correctly seated.
4. **Close Head:** Close the machine head and lock it by rotating the lever clockwise to the "lock" position.
5. **Place Cup:** Position a cup of appropriate size under the coffee outlet.
6. **Brew Coffee/Espresso:** Press the button once. The machine will automatically read the barcode on the capsule and brew the coffee or espresso according to the specific blend. The button will blink during brewing.
7. **Enjoy:** Once brewing is complete, the button will become steady. Remove your cup.
8. **Automatic Capsule Ejection:** When the head is opened after brewing, the used capsule will automatically be ejected into the used capsule container.

Your browser does not support the video tag.

Video 1: Nespresso VertuoLine Evoluo Deluxe in Action. This video demonstrates the process of inserting a capsule, closing the machine head, and brewing coffee, showing the frothy output.

Your browser does not support the video tag.

Video 2: Nespresso VertuoLine Evoluo Deluxe Water Tank and Capsule Container. This video illustrates how to fill the water tank and where used capsules are stored, highlighting the ease of use.

MAINTENANCE

- **Cleaning the Water Tank:** Regularly clean the water tank with mild detergent and rinse thoroughly. Refill with fresh water daily.
- **Emptying the Used Capsule Container:** Empty and clean the used capsule container and drip tray regularly. The container holds approximately 17 used capsules.
- **Cleaning the Machine Exterior:** Wipe the exterior of the machine with a damp cloth. Do not use abrasive cleaning agents or immerse the machine in water.
- **Descaling:** Descale your machine periodically to ensure optimal performance and coffee quality. Refer to the full Nespresso user manual for detailed descaling instructions and recommended descaling solutions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee flow.	Water tank empty; machine not heated; clogged nozzle.	Fill water tank; wait for steady light; perform a rinsing cycle.
Coffee is cold.	Machine not preheated; cup not preheated.	Allow machine to fully heat; preheat cup with hot water.
Machine leaks.	Water tank not properly seated; drip tray full.	Ensure water tank is correctly positioned; empty and clean drip tray.

Problem	Possible Cause	Solution
Button blinking irregularly.	Error state; descaling needed.	Refer to the full user manual for specific error codes or perform descaling.

For more detailed troubleshooting, please consult the comprehensive user manual included with your Nespresso machine or visit the Nespresso support website.

SPECIFICATIONS

Feature	Detail
Brand	Nespresso
Model Number	GCC1-US-GM-NE
Capacity	54 oz. (water tank)
Color	Graphite Metal
Special Feature	Milk Frother (Note: This model may not include an integrated frother, but Nespresso offers separate frothers.)
Coffee Maker Type	Espresso Machine
Operation Mode	Fully Automatic
Wattage	1350 watts
Coffee Input Type	Capsules (Nespresso VertuoLine only)
Item Weight	11 Pounds
Material	Plastic
Automatic Off Mode	After 9 minutes of inactivity

WARRANTY INFORMATION

For detailed warranty information regarding your Nespresso VertuoLine Evoluo Deluxe Coffee and Espresso Maker, please refer to the warranty card or information folder included with your product packaging. You may also visit the official Nespresso website or contact Nespresso Club Services for specific warranty terms and conditions.

SUPPORT

The Nespresso Club offers a range of services to assist you with your machine. For personalized advice, technical support, or to order Nespresso capsules, you can contact them:

- **Telephone:** 877.964.6299
- **Online:** Visit the official Nespresso website.
- **Boutiques:** Visit a Nespresso Boutique for in-person assistance.

Nespresso capsules are 100% recyclable. Information on capsule recycling locations (e.g., UPS locations and Nespresso

Boutiques) can be obtained by contacting the Nespresso Club.

