

BLACK+DECKER BXVC30PTDE

BLACK+DECKER BXVC30PTDE Wet and Dry Vacuum Cleaner Instruction Manual

1. INTRODUCTION

Thank you for choosing the BLACK+DECKER BXVC30PTDE Wet and Dry Vacuum Cleaner. This powerful 1600W appliance is designed for versatile cleaning tasks, capable of handling both solid debris and liquids. It features a robust 30-liter tank, a blowing function for clearing areas, and an integrated power tool socket for synchronized dust extraction. Please read this manual carefully before operating the appliance to ensure safe and efficient use.

2. SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. Keep this manual for future reference.

- Ensure the power supply voltage matches the rating plate on the appliance.
- Do not use the vacuum cleaner to pick up flammable or combustible liquids, hot ashes, or sharp objects.
- Never immerse the appliance in water or other liquids.
- Always unplug the appliance before cleaning, maintenance, or when not in use.
- Keep children and unauthorized persons away from the appliance during operation.
- Do not operate the appliance with a damaged cord or plug.
- Ensure filters are correctly installed for the intended use (dry or wet vacuuming).

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x BLACK+DECKER BXVC30PTDE Wet and Dry Vacuum Cleaner unit

- 1 x Flexible suction hose (1.5 m)
- 2 x Plastic suction tubes (47 cm each)
- 1 x Foam filter (for wet vacuuming)
- 1 x Textile filter bag (for dry vacuuming)
- 1 x Dry and wet floor brush
- 1 x Crevice nozzle
- Wheels and mounting hardware



Image 1: The BLACK+DECKER BXVC30PTDE wet and dry vacuum cleaner shown with its main unit, flexible hose, two extension tubes, floor brush, crevice nozzle, foam filter, and textile filter bag.

4. SETUP

4.1 Assembling the Wheels

1. Turn the tank upside down.

2. Insert the wheels into the designated slots on the base of the tank until they click into place.

4.2 Filter Installation

The correct filter must be installed for the type of cleaning you intend to perform.

- **For Dry Vacuuming:** Install the textile filter bag over the filter cage. Ensure it covers the cage completely and is securely fastened.
- **For Wet Vacuuming:** Remove the textile filter bag. Install the foam filter over the filter cage. Ensure it fits snugly to prevent liquid from entering the motor.

4.3 Attaching the Hose and Accessories

1. Connect the flexible suction hose to the suction inlet on the front of the tank by twisting it clockwise until secure.
2. Attach the desired accessory (e.g., floor brush, crevice nozzle) directly to the end of the hose or to the plastic suction tubes for extended reach.
3. For the blowing function, connect the hose to the exhaust outlet located on the rear of the motor head.

5. OPERATING INSTRUCTIONS

5.1 Dry Vacuuming

1. Ensure the textile filter bag is correctly installed.
2. Plug the power cord into a suitable electrical outlet.
3. Switch the vacuum cleaner ON using the power switch.
4. Begin vacuuming dry debris.

5.2 Wet Vacuuming

1. Ensure the foam filter is correctly installed and the textile filter bag is removed.
2. Plug the power cord into a suitable electrical outlet.
3. Switch the vacuum cleaner ON.
4. Begin vacuuming liquids. The internal float will automatically interrupt suction when the tank is full to prevent overflow.
5. Once the float activates, switch OFF the vacuum cleaner and empty the tank.

5.3 Blower Function

1. Connect the flexible suction hose to the exhaust outlet on the motor head.
2. Switch the vacuum cleaner ON.
3. Use the airflow to clear leaves, dust, or other light debris from surfaces.

5.4 Power Tool Synchronization

The BXVC30PTDE features an integrated power outlet for power tools, allowing for synchronized dust extraction.

1. Plug your power tool into the integrated power outlet on the vacuum cleaner.
2. Connect the vacuum hose to the dust extraction port of your power tool (if applicable).
3. When you operate the power tool, the vacuum cleaner will automatically activate suction.

4. After switching off the power tool, the vacuum cleaner will continue to run for a few seconds to ensure all residual dust is collected.



Image 2: The BLACK+DECKER BXVC30PTDE in operation, demonstrating its use for cleaning vehicle interiors, highlighting its portability and effectiveness.

6. MAINTENANCE

6.1 Emptying the Tank

For dry debris, unclip the motor head and empty the contents. For liquids, use the drain plug located at the bottom of the tank to facilitate emptying.

6.2 Cleaning the Filters

Regularly clean both the textile and foam filters to maintain optimal suction performance. Both filters can be removed, washed under running water, and allowed to air dry completely before reinstallation.

6.3 Storage

The BXVC30PTDE features an integrated accessory holder and a cable hook for convenient storage. Use the parking function to lock the wheels when storing the unit.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common troubleshooting steps:

- **No Power:** Check if the power cord is securely plugged into the outlet and the vacuum cleaner. Ensure the power switch is in the 'ON' position. Check the circuit breaker.
- **Reduced Suction:** Check if the tank is full and needs emptying. Inspect the hose, tubes, and accessories for blockages. Clean or replace the filters if they are clogged. Ensure the motor head is securely fastened to the tank.
- **Motor Stops During Wet Vacuuming:** This is normal. The internal float has activated, indicating the tank is full. Empty the tank.
- **Unusual Noise:** Check for blockages in the hose or accessories. Ensure filters are correctly installed.

If problems persist, contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	BLACK+DECKER
Model Number	BXVC30PTDE
Power Consumption	1600 W
Capacity	30 Liters
Item Weight	7.4 Kilograms
Product Dimensions	38 x 63.5 x 38 cm
Power Source	Corded Electric
Voltage	220 Volt, 240 Volt
Filter Type	Cartridge (Foam and Textile)
Special Features	Integrated Power Tool Socket, Blower Function, Accessory Holder, Cable Hook
Surface Recommendation	Upholstery, Carpet

9. WARRANTY AND SUPPORT

BLACK+DECKER products are manufactured to high-quality standards. In the unlikely event of a defect due to faulty materials or workmanship, your product is covered by the BLACK+DECKER warranty. Please retain your proof of purchase. For warranty claims, technical support, or spare parts, please refer to the contact information provided with your purchase or visit the official BLACK+DECKER website for your region.

