

DIGITNOW 190835033202

DIGITNOW Bluetooth Record Player User Manual

Model: 190835033202

Brand: DIGITNOW

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your DIGITNOW Bluetooth Record Player. Please read this manual thoroughly before using the product to ensure proper function and longevity.

SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury.

- Do not expose the unit to rain or moisture.
- Do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Verify that all items are present in the package:

- DIGITNOW Bluetooth Record Player Unit
- Built-in Stereo Speakers
- Dust Cover
- 45RPM Adapter
- Remote Control
- Power Adapter
- User Manual

SETUP

Follow these steps to set up your record player:

1. **Placement:** Place the unit on a flat, stable surface away from direct sunlight, heat sources, or excessive dust.
2. **Power Connection:** Connect the power adapter to the DC input jack on the back of the unit, then plug the adapter into a wall outlet.
3. **Dust Cover:** Carefully place the clear dust cover onto the hinges at the back of the unit.



Image: Front view of the DIGITNOW Bluetooth Record Player.

OPERATING INSTRUCTIONS

Power On/Off

To power on the unit, press and hold the 'POWER/VOL' knob for approximately 5 seconds. The LCD screen will illuminate. To power off, press and hold the same knob again for 5 seconds.



Warm prompt : Long press around 5 seconds to power on

Image: Front panel with Power/Volume knob.

Selecting Source

Press the 'SOURCE' button repeatedly to cycle through available modes: PHONO (Vinyl), TAPE (Cassette), FM/AM Radio, BLUETOOTH, and AUX IN.

Vinyl Playback

1. Lift the dust cover.
2. Place a vinyl record on the turntable platter. Use the 45RPM adapter for 7-inch records if needed.
3. Select 'PHONO' mode using the 'SOURCE' button.
4. Gently lift the tonearm and position the stylus over the desired track on the record.
5. Carefully lower the tonearm onto the record. Playback will begin automatically.

Cassette Playback

1. Insert a cassette tape into the cassette deck on the side of the unit. Ensure the correct side is facing up.
2. Select 'TAPE' mode using the 'SOURCE' button.
3. Press the 'PLAY/PAUSE' button to start playback.
4. Use the 'EJECT' button to remove the cassette. The unit also features a fast forward function.

Cassette Tape Playing

Play your collected tapes
with eject and fast forward function.
You could enjoy old days with family and friends.



Image: Cassette tape playing feature.

Bluetooth Connection

The turntable features Bluetooth for wireless audio streaming from external devices.

1. Select 'BLUETOOTH' mode using the 'SOURCE' button. The LCD screen will display 'BLUE' and the Bluetooth indicator will flash.
2. On your external device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
3. Select 'M36' (or similar device name) from the list to pair. Once connected, the Bluetooth indicator will stop flashing.
4. You can now play music from your external device through the record player's speakers.

Bluetooth

Playing the audio files from your mobile phones, MP3, laptop and other bluetooth-enabled audio.



Image: Bluetooth pairing process.

USB/SD Encoding (Recording)

Convert your vinyl records or cassette tapes directly to MP3 format on a USB flash drive or SD card.

1. Insert a USB flash drive into the USB port or an SD card into the SD/MMC card slot.
2. Select the desired source (PHONO or TAPE).
3. Press the 'REC' button to start recording. The 'REC' indicator will light up.
4. Play the audio you wish to record.
5. Press the 'STOP' button to end recording. The recorded file will be saved to your USB drive or SD card.

Vinyl - to - MP3 Recording

Transform audio from vinyl records
into MP3 format files
for later playback on mobile devices

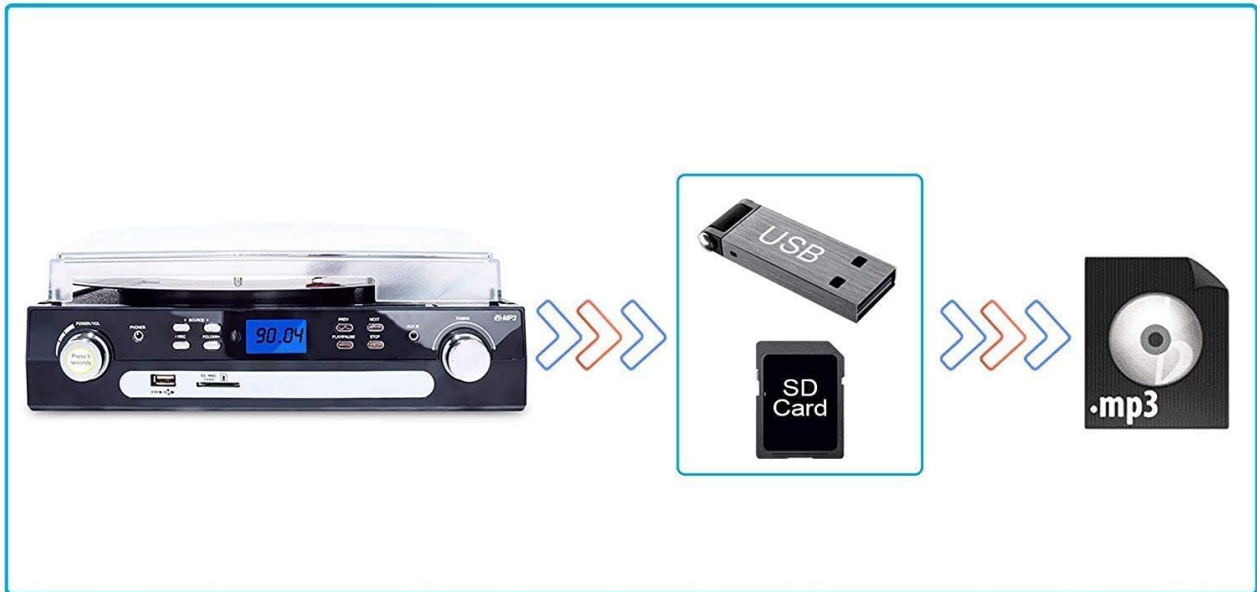


Image: Vinyl to MP3 recording process.

Official Product Video: Key Features Demonstration

Your browser does not support the video tag.

Video: A demonstration of the DIGITNOW Bluetooth Record Player's features, including USB/SD encoding and Bluetooth connectivity.

MAINTENANCE

Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.

Stylus Care

- Gently clean the stylus tip with a soft brush, brushing from back to front.
- Replace the stylus approximately every 200-300 hours of play time to maintain sound quality and prevent record damage.

Dust Cover Care

- Clean the dust cover with a soft, damp cloth.

- Avoid using harsh chemicals that may scratch or cloud the plastic.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power button not pressed long enough.	Ensure power cord is securely plugged in. Press and hold the Power/Vol knob for 5 seconds.
No sound	Volume too low; Incorrect source selected; Stylus damaged.	Increase volume. Select correct source. Check stylus for damage.
Bluetooth not connecting	Unit not in Bluetooth mode; Device not discoverable.	Ensure unit is in 'BLUE' mode. Make sure your device's Bluetooth is on and discoverable.
Poor sound quality from vinyl	Dirty record; Worn stylus; Incorrect speed.	Clean record. Replace stylus. Ensure correct RPM (33, 45, or 78) is selected.

SPECIFICATIONS

- **Product Dimensions:** 6.26 x 12.87 x 6.26 inches
- **Item Weight:** 5.28 pounds (2.4 Kilograms)
- **Model Name:** B10A
- **Item Model Number:** 190835033202
- **Brand:** DIGITNOW
- **Connectivity Technology:** Wired, Bluetooth
- **Maximum Rotational Speed:** 78 RPM (Supports 33, 45, 78 RPM)
- **Material:** Plastic
- **Color:** Black
- **Special Features:** Bluetooth Function, USB Direct Encoding, Cassette Play, AM/FM Radio, Aux In, Headphone Jack
- **Included Components:** Built-in stereo speakers, dust cover, 45RPM adapter

WARRANTY AND SUPPORT

For warranty information or technical support, please contact DIGITNOW customer service through their official website or the retailer where the product was purchased. Please have your model number (190835033202) and purchase details ready.

