

Pifco P28033

Pifco P28033 Cordless Rechargeable Vacuum Cleaner User Manual

Model: P28033

1. INTRODUCTION

Thank you for purchasing the Pifco P28033 Lightweight Cordless Rechargeable Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for domestic use only.

- Do not immerse the vacuum cleaner, battery, or charger in water or any other liquid.
- Do not use the appliance outdoors or on wet surfaces.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Turn off the appliance before connecting or disconnecting the battery pack, or before performing any maintenance.
- Store the appliance indoors in a cool, dry place.

3. PACKAGE CONTENTS

Carefully unpack your Pifco P28033 vacuum cleaner and check that all items are present and in good condition. The package should contain the following:

- 1 x Cordless Rechargeable Vacuum Cleaner Unit
- 1 x Aluminium Telescopic Tube

- 1 x Dust Agitation Brush
- 1 x Upholstery Brush
- 1 x Crevice Tool
- 1 x Floor Brush
- 1 x Charging Adapter



Image: All components of the Pifco P28033 vacuum cleaner, including the main unit, telescopic tube, floor brush, crevice tool, and other brushes.

4. SETUP

4.1 Charging the Battery

1. Ensure the vacuum cleaner is switched off.
2. Connect the charging adapter to the charging port on the vacuum cleaner.
3. Plug the adapter into a suitable wall outlet. The charging indicator light will illuminate.
4. Allow approximately 4-5 hours for a full charge. A full charge provides up to 30 minutes of run time.

5. Once fully charged, disconnect the adapter from the wall outlet and the vacuum cleaner.

4.2 Assembling Attachments

The Pifco P28033 comes with various attachments for different cleaning tasks. To attach an accessory, align it with the nozzle of the main unit or the telescopic tube and push firmly until it clicks into place. To remove, press the release button (if present) and pull the accessory off.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

To turn the vacuum cleaner on, press the power button located on the handle. Press it again to turn the appliance off.

5.2 Using Attachments

- **Crevice Tool:** Ideal for reaching tight spaces, corners, and edges.



Image: The Pifco P28033 handheld vacuum cleaner with the crevice tool attached, ready for use.

- **Dust Agitation Brush:** Suitable for delicate surfaces, curtains, and removing dust from furniture.



Image: The Pifco P28033 handheld vacuum cleaner with the dust agitation brush attached.

- **Upholstery Brush:** Designed for cleaning sofas, chairs, and other upholstered surfaces.



Image: The Pifco P28033 vacuum cleaner being used to clean upholstery on a sofa.

- **Aluminium Telescopic Tube & Floor Brush:** Combine these for floor cleaning or reaching high areas.



Image: A person using the Pifco P28033 vacuum cleaner with the telescopic tube and floor brush to clean a tiled floor.



Image: The Pifco P28033 vacuum cleaner with the telescopic tube extended to clean a high window frame.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

6.1 Emptying the Dustbin

Empty the dustbin regularly, especially when the 'MAX' fill line is reached, to maintain suction power.

1. Ensure the vacuum cleaner is switched off.
2. Locate the dustbin release button, usually near the nozzle.
3. Press the button to detach the dustbin from the main unit.
4. Hold the dustbin over a waste bin and open the bottom flap to release the collected debris.
5. Close the flap and reattach the dustbin to the main unit until it clicks securely.



Image: A hand holding the dustbin of the Pifco P28033 vacuum cleaner, emptying collected dust and debris into a trash can.

6.2 Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly to prevent clogging and maintain suction efficiency. It is recommended to clean the filter after every few uses, or when suction power decreases.

1. Ensure the vacuum cleaner is switched off and the dustbin is empty.
2. Remove the dustbin and carefully extract the HEPA filter.
3. Tap the filter gently over a waste bin to remove loose dust.
4. For a more thorough clean, rinse the filter under cold running water. Do not use detergents or hot water.
5. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum cleaner. Do not use the vacuum cleaner with a wet filter.



Image: A hand rinsing the HEPA filter of the Pifco P28033 vacuum cleaner under a running faucet.

6.3 General Cleaning

Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

If you encounter issues with your Pifco P28033, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is not charged.	Charge the battery for 4-5 hours.
Low suction power.	Dustbin is full.	Empty the dustbin.
	Filter is clogged.	Clean or replace the HEPA filter.
	Nozzle or hose is blocked.	Check and clear any blockages in the nozzle or telescopic tube.
Battery run time is short.	Battery not fully charged or aging.	Ensure battery is fully charged. If battery life significantly degrades, consider battery replacement (contact support).

8. SPECIFICATIONS

Feature	Specification
Model Number	P28033
Brand	Pifco
Power	90 Watts
Voltage	22.2 Volts
Battery Type	Lithium Ion
Battery Life (Full Charge)	Up to 30 Minutes
Charging Time	4-5 Hours
Dustbin Capacity	0.6 Litres
Filter Type	HEPA Filter
Product Dimensions (LxWxH)	112 x 26 x 21.5 cm
Item Weight	1.2 kg
Noise Level	60 Decibels

9. WARRANTY AND SUPPORT

The Pifco P28033 Cordless Rechargeable Vacuum Cleaner comes with a **3-year quality guarantee** from the date of purchase. Please retain your proof of purchase for warranty claims.



Image: The Pifco 3 Years Quality Guarantee logo displayed on the product.

For technical support, warranty inquiries, or to order replacement parts, please contact Pifco customer service through their official website or the retailer where the product was purchased. Do not attempt to repair the appliance yourself.

© 2023 Pifco. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why is my Pifco P28033 vacuum cleaner not working after being placed on charge?

If your Pifco P28033 is not working after a charging session, please check the following troubleshooting steps based on the user manual: Verify the Charging Connection: Ensure the charging adapter is firmly connected to both...

[Read full answer](#)