

## Total Control URC1785

# Total Control URC1785 Universal Remote Control User Manual

Model: URC1785

## 1. INTRODUCTION

The Total Control URC1785 is an 8-in-1 universal remote control designed to simplify your home entertainment experience by consolidating up to eight different device remote controls into one. This remote is compatible with a wide range of brands and device types, including televisions, DVD/Blu-ray players, VCRs, satellite receivers, cable boxes, DVB-T tuners, home theater systems, audio amplifiers, and auxiliary devices. This manual provides essential information for setting up, operating, and maintaining your URC1785 remote control.

## 2. PRODUCT OVERVIEW

The URC1785 remote control features a user-friendly layout with dedicated buttons for various functions and device selection. Its infrared technology ensures broad compatibility with most electronic devices. The remote is pre-programmed for ease of setup, and a comprehensive code list is typically included with the product for manual programming.



Figure 1: Front view of the Total Control URC1785 Universal Remote Control, highlighting its array of buttons for various functions and device selection.



Figure 2: The Total Control URC1785 Universal Remote Control displayed in its retail packaging, emphasizing its '8-in-1' capability and compatibility with various device types like TV, DVD, SAT, and Audio.

## 3. SETUP

---

### 3.1. Battery Installation

The URC1785 remote control requires two (2) AA batteries for operation. Batteries are not typically included with the product.

1. Open the battery compartment cover located on the back of the remote control.
2. Insert two AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

### 3.2. Device Programming

The URC1785 is pre-programmed for many common devices. For other devices or if the pre-programmed codes do not work, manual programming is required. Refer to the detailed configuration guide included with your remote for specific programming instructions and device codes.

Generally, programming involves:

1. Turning on the device you wish to control.
2. Pressing and holding the 'SETUP' button on the remote until the indicator light illuminates.
3. Pressing the device button (e.g., TV, DVD, SAT) you want to program.
4. Entering the 3 or 4-digit code for your device's brand from the provided code list.
5. Testing the remote's functions. If the device responds, press 'SETUP' again to save the code. If not, try the next code for your brand.

## 4. OPERATING INSTRUCTIONS

---

Once programmed, operating your devices with the URC1785 is straightforward.

### 4.1. Selecting a Device

To control a specific device, press the corresponding device button at the top of the remote (e.g., **TV, VCR, DVD, SAT, AMP, HI-FI, DVB-T, AUX**). The indicator light will briefly flash to confirm the selection.

### 4.2. Basic Functions

- **Power ( )**: Turns the selected device on or off.
- **Volume (+/-)**: Adjusts the volume of the selected audio device or TV.
- **Channel (CH +/-)**: Changes channels on the selected TV, SAT, or DVB-T device.
- **Number Buttons (0-9)**: For direct channel entry or menu navigation.
- **OK / Navigation Arrows**: Used for menu selection and navigation.
- **MENU / GUIDE / INFO / EXIT**: Accesses device menus, program guides, information displays, or exits current menus.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward)**: Controls media playback on DVD/Blu-ray players or VCRs.

## 5. TROUBLESHOOTING

---

If you encounter issues with your URC1785 remote control, consider the following:

- **Remote not responding:**
  - Check if the batteries are correctly inserted and have sufficient charge. Replace them if necessary.

- Ensure there is no obstruction between the remote and the device's infrared receiver.
- **Specific functions not working:**
  - Verify that the correct device mode button (e.g., TV, DVD) is selected for the device you are trying to control.
  - Some advanced functions of original remotes may not be supported by universal remotes.
  - Re-program the device using a different code from the provided list, as some codes may offer better compatibility for certain functions.
- **Device not programming:**
  - Ensure you are following the programming steps precisely as outlined in the configuration guide.
  - Try all available codes for your device's brand.
  - Confirm the device is powered on during the programming process.

## 6. SPECIFICATIONS

|                           |                                                                          |
|---------------------------|--------------------------------------------------------------------------|
| Brand                     | Total Control (Manufacturer), TP-Link (Brand as per some specifications) |
| Model Number              | URC1785                                                                  |
| Color                     | Black                                                                    |
| Product Type              | Universal Remote Control                                                 |
| Connectivity Technology   | Infrared                                                                 |
| Special Features          | Universal Compatibility                                                  |
| Compatible Devices        | TV, Audio, DVD, Blu-ray, VCR, SAT, Cable, DVB-T, Home Theater, AMP, AUX  |
| Maximum Supported Devices | 8                                                                        |
| Maximum Range             | 10 Meters                                                                |
| Batteries Required        | 2 x AA batteries                                                         |

## 7. MAINTENANCE

To ensure the longevity and optimal performance of your URC1785 remote control:

- Clean the remote regularly with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- Do not expose the remote to extreme temperatures, direct sunlight, or high humidity.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

## 8. WARRANTY AND SUPPORT

Information regarding product warranty, technical support, and replacement parts is typically provided within the product packaging or can be found on the official website of the manufacturer, Total Control, or the brand, TP-Link. Please retain your proof of purchase for warranty claims.



## Related Documents - URC1785

|                                                                                     |                                                                                                                                                                                                                                                                                                                                          |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <p><a href="#">Vivitar 4-Device Jumbo Universal Remote Manual and Setup Guide</a></p> <p>Comprehensive guide to programming and using the Vivitar 4-Device Jumbo Universal Remote, including code lists, setup instructions, and troubleshooting tips for various devices like TVs, DVD players, and more.</p>                           |
|   | <p><a href="#">VIZIO XRU300 Universal Remote Quick Start Guide</a></p> <p>Quick start guide for the VIZIO XRU300 Universal Remote Control. Learn how to set up, program, and troubleshoot your remote to control multiple devices like TVs, Blu-ray players, DVRs, and more.</p>                                                         |
|  | <p><a href="#">VIZIO XRU110 Universal Remote Control Quick Start Guide</a></p> <p>Get started quickly with your VIZIO XRU110 Universal Remote Control. This guide provides setup instructions, button descriptions, troubleshooting tips, and a comprehensive code list for controlling your TV, Blu-Ray, DVD, DVR, Cable, and more.</p> |
|  | <p><a href="#">Denon AVC-A110 Remote Control Preset Codes Guide</a></p> <p>A comprehensive guide listing remote control preset codes for the Denon AVC-A110, covering AVR, CBL/SAT, TV, VCR/PVR, BD/DVD, and Audio devices from numerous manufacturers.</p>                                                                              |
|  | <p><a href="#">Sony RM-VLZ620 Manufacturer's Code List</a></p> <p>A comprehensive list of manufacturer codes for the Sony RM-VLZ620 remote control, enabling users to program it for various audio and video devices.</p>                                                                                                                |
|  | <p><a href="#">Shaw Direct IRC600/URC600 Remote Control User Manual</a></p> <p>Comprehensive user manual for Shaw Direct IRC600 and URC600 universal remote controls, covering setup, programming for SAT, TV, DVD, VCR, and other devices, volume control, master power key functions, and troubleshooting tips.</p>                    |

[\[pdf\]](#) User Manual

Opmaak 1 Manual for AR1977 Total Control 8 Device TV Remote Jaycar New Zealand manualMain  
131406 assets jaycar au |||



Total Control 8 \_ **URC1785** \_ 46x178\_Opmaak 1 25-02-16 11:51 Pagina 1 Universal Remote Control 8 Device Instruction Manual Universal Electronics b.v. Colosseum 2, 7521 PT Enschede, The Netherlands **URC1785** 710706/1 RDN-1250216 AAA AAA EN Requires 2 new AAA Batteries DE Bentigt 2 neue AAA Batterien...

lang:en **score:26** filesize: 1.05 M page\_count: 2 document date: 2021-07-22

[\[pdf\]](#) User Manual

Opmaak 1 A Einstellen der Codes ON riverint Accent Ermitteln Sie den Code für Ihr Gerät z B Ac ce nt Fe rns ehgerät in Codeliste Die sind nach Gerätetyp und Marken name aufgelistet URC1785 ONE FOR ALL Manuals |||



Total Control 8 \_ **URC1785** \_ 46x178\_Opmaak 1 25-02-16 11:51 Pagina 1 Universal Remote Control 8 Device Instruction Manual Universal Electronics b.v. Colosseum 2, 7521 PT Enschede, The Netherlands **URC1785** 710706/1 RDN-1250216 AAA AAA EN Requires 2 new AAA Batteries DE Bentigt 2 neue AAA Batterien...

lang:en **score:25** filesize: 1.06 M page\_count: 2 document date: 2016-02-25

[\[pdf\]](#)

ONEFORALLURC1785MANDOUNIVERSALTOTALCONTROL8 River Int

ElmandouniversalTotalControl8eslasoluciónperfectapara losmandosa distanciarotosoperdidos URC1785

ONE FOR ALL riverint Fitxes |||

ONE FOR ALL **URC1785** MANDO UNIVERSAL TOTAL CONTROL 8 El mando universal Total Control 8 es la solucin perfecta para los mandos a distancia rotos o perdidos. Viene preprogramado para una configuracin sencilla y compatible con la mayora de marcas. - Nmero de aparatos que controla: 1. - TV/LCD/LED/Pla...

lang:es **score:24** filesize: 146.41 K page\_count: 1 document date: 2022-02-21

[\[pdf\]](#) Accessories

709012 URC1785 Codelist One For All Documents 710706 2 cl guarantee urc 1785 rdn1250216

universal utomo pim s3 eu west 1 amazonaws 5ae197ae0bfb1 |||



TotalControl 8 \_ **URC1785** \_ CL and Guarantee\_\_709012 25-02-16 13:21 Pagina 1 EN Code List DE Codeliste FR liste des codes ES Lista de Cdigos PT lista de cdigos IT Elenco dei codici NL Codelijst DA Kodeliste NO Kodlista SV Bruksanvisning FI koodiluettelon EL RU TR Kod listesi PL Lista kodw CZ sez...

lang:it **score:20** filesize: 1.16 M page\_count: 4 document date: 2016-02-25