

Arachnid Cricket Pro 450

Arachnid Cricket Pro 450 Electronic Dartboard User Manual

MODEL: CRICKET PRO 450

Brand: Arachnid

[Introduction](#) [Setup](#) [Operation](#) [Games](#) [Maintenance & Support](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)

1. INTRODUCTION

This manual provides comprehensive instructions for the Arachnid Cricket Pro 450 Electronic Dartboard. Designed for both casual and serious players, this dartboard offers a regulation-sized 15.5-inch target area and a wide array of game options. Please read this manual thoroughly before installation and operation to ensure proper use and longevity of your dartboard.



Figure 1: Arachnid Cricket Pro 450 Electronic Dartboard

Key Features:

- Regulation-sized 15.5-inch target area for authentic gameplay.
- Durable PVC construction designed for heavy use.
- 31 games with 178 variations to suit all skill levels and preferences.
- 5 multi-color backlit LCD displays for clear scoring and statistics.
- Two dedicated X/O scoring windows for Cricket games.
- Interactive Heckler feature with adjustable levels to add excitement.
- Includes two sets of soft-tip darts for immediate play.

2. SETUP INSTRUCTIONS

Follow these steps to properly set up your Arachnid Cricket Pro 450 Electronic Dartboard.

2.1 Unpacking

- Carefully remove all components from the packaging.
- Verify that all included items are present: dartboard, 6 soft-tip darts, extra tips, and power adapter.
- Retain packaging for future storage or transport.

2.2 Mounting the Dartboard

1. Choose a suitable location on a sturdy wall, ensuring adequate space around the dartboard for throwing and player movement.
2. The center of the bullseye should be 5 feet 8 inches (1.73 meters) from the floor.
3. Use appropriate mounting hardware (not included) for your wall type to securely fasten the dartboard. Ensure it is level and stable.

2.3 Power Connection

- Connect the included power adapter to the dartboard's power input jack.
- Plug the power adapter into a standard electrical outlet.
- The dartboard should power on, and the display will illuminate.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the controls and functions of your dartboard.



Figure 2: Multi-color backlit LCD scoring displays

3.1 Power On/Off

- Press the **POWER** button to turn the dartboard on or off.

3.2 Game Selection

- Press the **GAME** button to cycle through the available games. The game number and name will appear on the display.
- Once your desired game is displayed, press the **START/NEXT PLAYER** button to confirm.

3.3 Number of Players

- Before starting a game, use the **# OF PLAYERS** button to select the number of participants (up to 8 players).

3.4 Scoring Display

- The 5 multi-color backlit LCD displays show current scores and game statistics.
- Dedicated X/O scoring windows are provided for Cricket games, making tracking easy.

3.5 Heckler Feature

- The interactive Heckler feature provides audio commentary, applauding good throws and reacting to poor ones.
- Press the **HECKLER ON/OFF** button to activate or deactivate this feature.
- Use the **LEVEL** button to adjust the intensity of the Heckler's comments.

3.6 Other Controls

- **SOLO PLAY:** Engage in single-player games against the computer.
- **GAME OPTIONS:** Access additional settings for selected games.
- **BOUNCE OUT AMEND:** Correct scores for darts that bounce out but should have registered.
- **VOLUME CONTROL:** Adjust the sound level of the dartboard.
- **MISS:** Manually register a missed throw.
- **SELECT BULL:** Used in certain games to select the bullseye.

4. GAME LIST

The Arachnid Cricket Pro 450 offers 31 games with 178 variations. Below is a partial list of popular games:



Figure 3: Dartboard highlighting game variety

- 301, 501, 701, 901
- Cricket (Standard, Quick, Cut Throat, Double Only, Low Ball, Wild Card)
- Round the Clock
- Shanghai
- High Score
- Killer
- Count Up
- Golf
- Baseball
- Football
- Bowling
- Big 6

- Forty One
- All Fives
- Nine Dart Century
- Half-It
- By 10's
- By 5's
- G0TCHA!
- League

Refer to the dartboard's display for a complete list of games and their variations.

5. MAINTENANCE

Proper maintenance will ensure the longevity and optimal performance of your dartboard.

5.1 Cleaning

- Wipe the dartboard surface and display with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as they may damage the surface or electronics.
- Ensure the dartboard is unplugged before cleaning.

5.2 Dart Care



The image shows a close-up of the Arachnid Cricket Pro 450 dartboard, which has a black face with yellow and red scoring rings. Three Arachnid darts are shown in the foreground, with their flights and barrels clearly visible. To the right, a grid of 12 extra tips is displayed, arranged in two rows of six. The top row features three red flights and three black flights, while the bottom row consists of six black flights. Each tip is a silver-colored metal barrel with a black grip section.

ALL-INCLUSIVE SET
Includes 6 soft-tip darts, extra tips, and easy setup instructions

Arachnid **CRICKET PRO 450**

Figure 4: Included soft-tip darts and extra tips

- Regularly check dart tips for wear and replace them as needed using the included extra tips.
- Store darts in a safe place to prevent damage to flights and shafts.

6. TROUBLESHOOTING

If you encounter issues with your dartboard, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Dartboard does not power on.	No power or faulty adapter.	Check power connection and outlet. Ensure adapter is securely plugged in.
Darts are not registering.	Worn dart tips or segment malfunction.	Replace worn dart tips. Ensure darts are thrown with sufficient force to register. If problem persists, contact support.

Problem	Possible Cause	Solution
Display is blank or erratic.	Power issue or internal error.	Unplug the dartboard for 30 seconds, then plug it back in. If the issue continues, contact support.
Heckler feature is not working.	Feature is turned off or volume is too low.	Press the HECKLER ON/OFF button. Adjust the VOLUME CONTROL .

7. SPECIFICATIONS

Feature	Detail
Model Number	Cricket Pro 450
Target Area Size	15.5 inches (Regulation)
Dimensions (W x H x D)	Approx. 19 x 23 x 1 inches (48.26 x 58.42 x 2.54 cm)
Weight	6 Pounds (2.72 kg)
Material	Plastic
Color	Black/Red
Games	31 games, 178 variations
Players	Up to 8 players
Display	5 Multi-color backlit LCD displays, 2 dedicated X/O Cricket windows
Included Accessories	6 Soft-tip darts, extra tips, power adapter
Manufacturer	Escalade Sports
Country of Origin	China

8. WARRANTY & SUPPORT

8.1 Warranty Information

The Arachnid Cricket Pro 450 Electronic Dartboard comes with a**90 Day Limited Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact the manufacturer:

Manufacturer Contact Information: EVANSVILLE, IN, 47711 US

Please have your model number (Cricket Pro 450) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question