

[Manuals.plus](#) /

› [LogiLink](#) /

› LogiLink SP0051 Bluetooth Speaker User Manual

LogiLink SP0051

LogiLink SP0051 Bluetooth Speaker User Manual

Model: SP0051 | Brand: LogiLink

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your LogiLink SP0051 Bluetooth Speaker. It covers setup, usage, maintenance, and troubleshooting to ensure you get the most out of your device's Bluetooth, MP3 player, and FM radio functionalities.

Please read this manual thoroughly before using the product and retain it for future reference.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Contact qualified service personnel for any repairs.
- Keep the speaker away from water and other liquids. While it is listed as waterproof, prolonged submersion or exposure to strong jets of water should be avoided.
- Use only the provided charging cable or a certified equivalent.
- Dispose of the battery and speaker according to local regulations.

PACKAGE CONTENTS

Please check that all items are present:

- LogiLink SP0051 Bluetooth Speaker
- USB Charging Cable (Micro USB to USB-A with 3.5mm AUX)
- User Manual (this document)



Image: The included USB charging cable, which also functions as an AUX cable.

PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Image: Front view of the LogiLink SP0051 speaker, showing the speaker grille and the LogiLink logo.



Image: Side view of the speaker displaying control buttons: Previous/Volume Down, Play/Pause/Mode, Next/Volume Up, Bluetooth indicator, and Power/MP3 switch.



Image: Side view of the speaker showing the TF (MicroSD card) slot, DC 5V charging port, and AUX input port.



Image: Another side view highlighting the built-in microphone (MIC) and the TF (MicroSD card) slot.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. The charging time is approximately 2 hours.

1. Connect the Micro USB end of the charging cable to the DC 5V port on the speaker.
2. Connect the USB-A end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. It will turn off or change color when charging is complete.

2. Powering On/Off

- To power on: Slide the "OFF/MP3" switch to the "MP3" position. A blue indicator light will flash.
- To power off: Slide the "OFF/MP3" switch to the "OFF" position.



Image: The speaker with its blue LED indicator light illuminated, signifying power is on or Bluetooth is active.

3. Bluetooth Pairing

The speaker will automatically enter Bluetooth pairing mode when powered on if no MicroSD card is inserted or AUX cable is connected.

1. Ensure the speaker is powered on and the blue indicator light is flashing rapidly, indicating it's in pairing mode.
2. Enable Bluetooth on your smartphone, tablet, or other device.
3. Search for available Bluetooth devices and select "SP0051" from the list.
4. Once paired, the blue indicator light will stop flashing and remain solid.

4. MicroSD Card Usage (MP3 Player)

The speaker supports MicroSD (TF) cards for MP3 playback.

1. Insert a MicroSD card (with MP3 files) into the TF slot on the speaker.
2. The speaker will automatically switch to MP3 mode and begin playing music from the card.

5. AUX Input Usage

Connect non-Bluetooth devices using the 3.5mm AUX cable.

1. Connect one end of the 3.5mm AUX cable (integrated with the charging cable) to the AUX port on the speaker.
2. Connect the other end to the audio output of your device (e.g., laptop, MP3 player).
3. The speaker will automatically switch to AUX mode.

6. FM Radio Setup

To use the integrated FM radio, the USB charging cable acts as an antenna.

1. Connect the Micro USB end of the charging cable to the DC 5V port on the speaker. **Do not connect the USB-A end to a power source if you only intend to use it as an antenna.**
2. Power on the speaker.
3. Press the **Play/Pause/Mode** button repeatedly to cycle through modes until you hear static or an FM station.
4. To perform an automatic station scan: In FM mode, press and hold the **Play/Pause/Mode** button. The speaker will scan and save available stations.

OPERATING THE SPEAKER

Mode Switching

Press the **Play/Pause/Mode** button to switch between Bluetooth, MicroSD (MP3), AUX, and FM Radio modes.

Volume Control

- To increase volume: Press and hold the **Next/Volume Up (+)** button.
- To decrease volume: Press and hold the **Previous/Volume Down (-)** button.

Music Playback (Bluetooth/MicroSD)

- Play/Pause: Press the **Play/Pause/Mode** button.
- Next Track: Press the **Next/Volume Up (+)** button briefly.
- Previous Track: Press the **Previous/Volume Down (-)** button briefly.

Hands-Free Calling (Bluetooth Mode)

When connected via Bluetooth, you can use the speaker for hands-free calls.

- Answer Call: Press the **Play/Pause/Mode** button briefly when a call comes in.
- End Call: Press the **Play/Pause/Mode** button briefly during a call.
- Reject Call: Press and hold the **Play/Pause/Mode** button when a call comes in.

FM Radio Operation

- Change Station: After an automatic scan, press the **Next/Volume Up (+)** or **Previous/Volume Down (-)** buttons briefly to cycle through saved stations.
- Automatic Scan: Press and hold the **Play/Pause/Mode** button to initiate a new scan.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is discharged.	Charge the speaker for at least 2 hours.
Cannot pair via Bluetooth.	Speaker is not in pairing mode; device Bluetooth is off; speaker is already connected to another device.	Ensure speaker is on and blue light is flashing. Turn on Bluetooth on your device. Disconnect from other devices.
No sound from MicroSD card.	MicroSD card not inserted correctly; no MP3 files on card; speaker not in MP3 mode.	Reinsert MicroSD card. Ensure card contains MP3 files. Press Mode button to switch to MP3 mode.
Poor FM radio reception.	Charging cable not connected (acting as antenna); weak signal.	Ensure the USB charging cable is connected to the speaker's DC 5V port. Perform an automatic station scan. Try repositioning the speaker.
Sound distortion.	Volume too high; low battery; interference.	Reduce volume. Charge the speaker. Move speaker away from other electronic devices.

SPECIFICATIONS

Model Name	SP0051
Bluetooth Version	V3.0
Bluetooth Range	Up to 10 meters
Battery Capacity	400mAh
Play Time	Up to 5 hours
Charging Time	Approximately 2 hours
Speaker Maximum Output Power	25 Watts
Audio Output Mode	Stereo
Compatible Devices	MicroSD (TransFlash), MicroSDHC
Dimensions	6 x 6 x 5 cm
Weight	230 g
Special Features	Bluetooth 3.0 + EDR, Volume Control, Built-in Microphone, Micro SD Card Reader, FM Radio, Hands-free Function, Bass Xpansion System (BXS)
Material	Metal
Is Waterproof	True

WARRANTY INFORMATION

LogiLink products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty against defects in materials and workmanship. The specific warranty period and terms may vary by region and retailer. Please retain your proof of purchase for warranty claims.

For detailed warranty information, please refer to the warranty card included with your product or visit the official LogiLink website.

SUPPORT

If you encounter any issues or have questions regarding your LogiLink SP0051 Bluetooth Speaker that are not addressed in this manual, please contact LogiLink customer support or visit our website for further assistance.

Website: www.logilink.eu