

[Manuals.plus](#) /

› [HCDZ](#) /

› HCDZ Replacement Remote Control User Manual for LG Smart 3D HDTVs (Models: 55LA6900, 47LA7400, 55LA7400, 42LW5730, 47LW5730, 32LW5750)

HCDZ HCDZ-X20295

HCDZ Replacement Remote Control User Manual

Model: **HCDZ-X20295**

For LG Smart 3D Plasma LCD LED HDTV TVs

INTRODUCTION

Thank you for choosing the HCDZ Replacement Remote Control. This remote is designed to function as a direct replacement for your original LG Smart 3D Plasma LCD LED HDTV TV remote, offering seamless operation without the need for complex programming. Simply install the batteries, and it's ready to use.



Image: Front view of the HCDZ Replacement Remote Control. This image displays the general layout of the remote, including buttons for channel, volume, power, and navigation.

SETUP

This remote control requires two AAA batteries (not included). No programming or pairing is necessary for operation with

compatible LG TV models.

1. 1. Open the Battery Compartment:

Locate the battery compartment cover on the back of the remote control. Slide the cover downwards or press the latch and lift to open it.



Image: Back view of the HCDZ remote control with the battery compartment cover closed. The cover is located at the bottom section of the remote's back.

2. 2. Insert Batteries:

Insert two new AAA batteries into the compartment, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

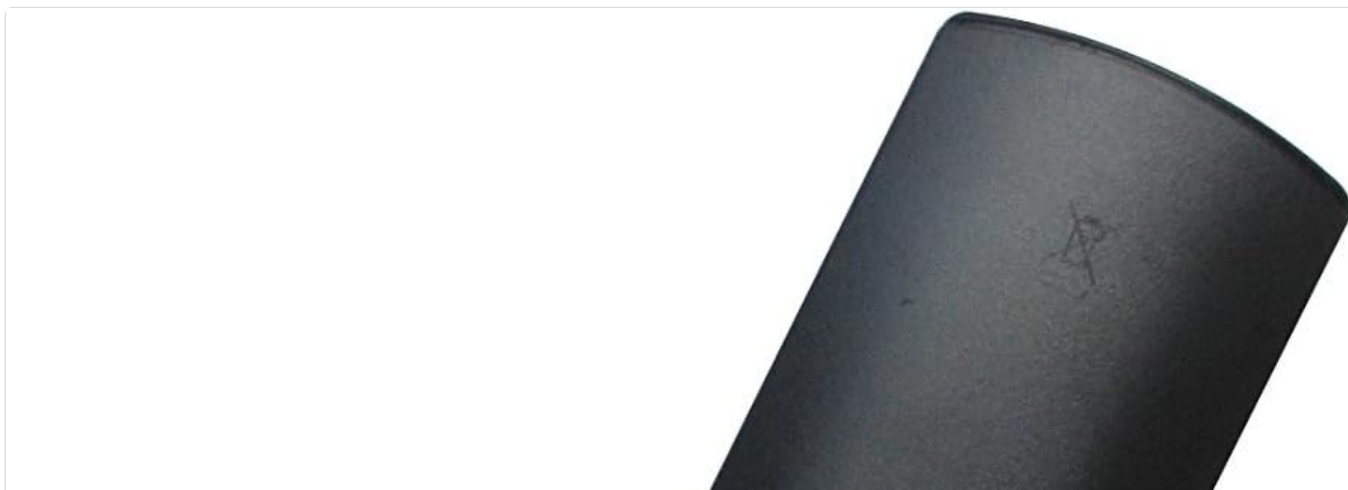




Image: Back view of the HCDZ remote control with the battery compartment open, showing two AAA batteries correctly inserted. The positive and negative terminals are visible.

3. 3. Close the Battery Compartment:

Slide the battery compartment cover back into place until it clicks securely.

Your remote control is now ready for use.

OPERATING INSTRUCTIONS

To operate your television with the HCDZ Replacement Remote Control:

- Ensure there is a clear line of sight between the remote control and your LG TV's infrared (IR) receiver.
- Point the remote control directly at your television.
- Press the desired function button (e.g., Power, Volume Up/Down, Channel Up/Down, Menu) to control your TV.

This remote functions identically to your original LG remote for basic TV operations.

MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's performance diminishes or it stops responding. Always replace both batteries simultaneously with new AAA batteries.
- **Cleaning:** Clean the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none">• Check if batteries are inserted correctly with correct polarity (+/-).• Replace old batteries with new AAA batteries.• Ensure there are no obstructions between the remote and the TV's IR sensor.
Remote has limited range or intermittent response.	<ul style="list-style-type: none">• Replace batteries with new ones.• Ensure you are within the maximum operating range (up to 10 meters).• Verify no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the IR signal.
Remote does not control the TV.	<ul style="list-style-type: none">• Confirm your TV model is listed as compatible.• Ensure the remote is pointed directly at the TV's IR sensor.

SPECIFICATIONS

Brand	HCDZ
Model Number	HCDZ-X20295
Compatible Devices	LG Smart 3D Plasma LCD LED HDTV TVs (e.g., 55LA6900, 47LA7400, 55LA7400, 42LW5730, 47LW5730, 32LW5750)
Connectivity Technology	Infrared (IR)
Maximum Range	10 Meters
Battery Type	2 x AAA (not included)
Special Feature	Ergonomic design

SUPPORT

For further assistance or inquiries regarding your HCDZ Replacement Remote Control, please refer to the retailer where the product was purchased or visit the official HCDZ store online.

Manufacturer: HCDZ

ASIN: B01L6WGDTW

Online Store: [HCDZ Store on Amazon](#)

© 2023 HCDZ. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01L6WGDTW>

More documents and user manuals: <https://manuals.plus/>