

Vremi VRM010011N

Vremi 2-Slice Stainless Steel Toaster Instruction Manual

Model: VRM010011N

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the toaster.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.

14. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
15. Do not attempt to dislodge food when toaster is plugged in.
16. Do not operate unattended.
17. Do not use with foods that have frosting or glaze.

SAVE THESE INSTRUCTIONS

PRODUCT OVERVIEW

The Vremi 2-Slice Stainless Steel Toaster is designed for efficient and consistent toasting of various bread types. It features wide slots, multiple toast settings, and convenient functions like Reheat, Defrost, and Bagel.



Image: Front-side view of the Vremi 2-Slice Stainless Steel Toaster, showcasing its brushed stainless steel finish, two wide toasting slots, control panel with buttons, and browning control dial.

SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials. Ensure all components are present and undamaged.

2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure there is adequate ventilation around the toaster.
3. **First Use:** Before first use, operate the toaster without bread on the highest setting (7) a few times to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate. Ensure the area is well-ventilated.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS



Image: Close-up view of the Vremi Toaster's control panel, showing the 'Cancel', 'Reheat', 'Defrost', and 'Bagel' buttons, along with the browning control dial numbered 1 through 7.

1. **Insert Bread:** Place up to two slices of bread, bagels, or other items into the toasting slots. The self-centering guides will automatically adjust to hold the bread evenly.
2. **Select Browning Level:** Turn the browning control dial to your desired setting, from 1 (lightest) to 7 (darkest). A medium setting (3-4) is recommended for most bread types.
3. **Lower Lever:** Press the toast lever down until it latches. The toasting cycle will begin.
4. **Special Functions:**
 - **Defrost:** Press the **Defrost** button after lowering the lever to toast frozen bread. This function

adds extra time to the toasting cycle to thaw and then toast.

- **Bagel:** Press the **Bagel** button after lowering the lever to toast bagels. This function toasts the cut side of the bagel while gently warming the outer side.
- **Reheat:** Press the **Reheat** button after lowering the lever to warm already toasted bread without further browning.

5. **Cancel Toasting:** To stop the toasting cycle at any time, press the **Cancel** button. The toast will automatically pop up.

6. **Remove Toast:** Once the toasting cycle is complete, the toast will automatically pop up. Use the high-lift lever to safely retrieve smaller items without touching hot surfaces.

MAINTENANCE AND CLEANING

Always unplug the toaster from the electrical outlet and allow it to cool completely before cleaning.

1. Crumb Tray:



Image: View of the Vremi Toaster with its removable crumb tray partially pulled out from the side, labeled with "(PUSH)".

To remove accumulated crumbs, slide out the removable crumb tray located at the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.

Ensure the crumb tray is fully inserted before using the toaster.

2. **Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the surface.
3. **Interior:** Do not insert any objects into the toasting slots to clean. If food becomes lodged, unplug the toaster and carefully remove the food after the toaster has cooled.
4. **Storage:** When not in use, store the toaster in a clean, dry place. You can wrap the power cord around the cord storage area (if available) at the bottom of the toaster.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the toaster is securely plugged into a working electrical outlet. Check your circuit breaker.
Toast does not pop up.	Lever not fully engaged; internal mechanism issue.	Ensure the toast lever is pushed down completely until it latches. If the issue persists, unplug and contact support.
Uneven toasting.	Bread thickness variation; crumb buildup.	Ensure bread slices are of similar thickness. Clean the crumb tray regularly. The self-centering guides should help, but very thin or thick items may toast differently.
Food stuck in slots.	Oversized items; small items.	Unplug the toaster and allow it to cool. Carefully remove the food using non-metallic tongs. Never use metal utensils.
Smoke or burning smell.	Crumb buildup; food lodged in slots; incorrect browning setting.	Immediately press the Cancel button and unplug the toaster. Clean the crumb tray. Remove any lodged food. Reduce the browning setting if toast is consistently burning.

SPECIFICATIONS

- **Model:** VRM010011N
- **Power:** 850 Watts
- **Material:** Stainless Steel
- **Number of Slices:** 2
- **Dimensions (L x W x H):** Approximately 26.8 cm x 15.49 cm x 19 cm (10.5 in x 6 in x 7.5 in)
- **Weight:** 1.66 kg (3.66 lbs)
- **Special Features:** Wide slots, Self-centering rack, Adjustable browning control (1-7), Cancel, Reheat, Defrost, Bagel functions, Removable crumb tray.

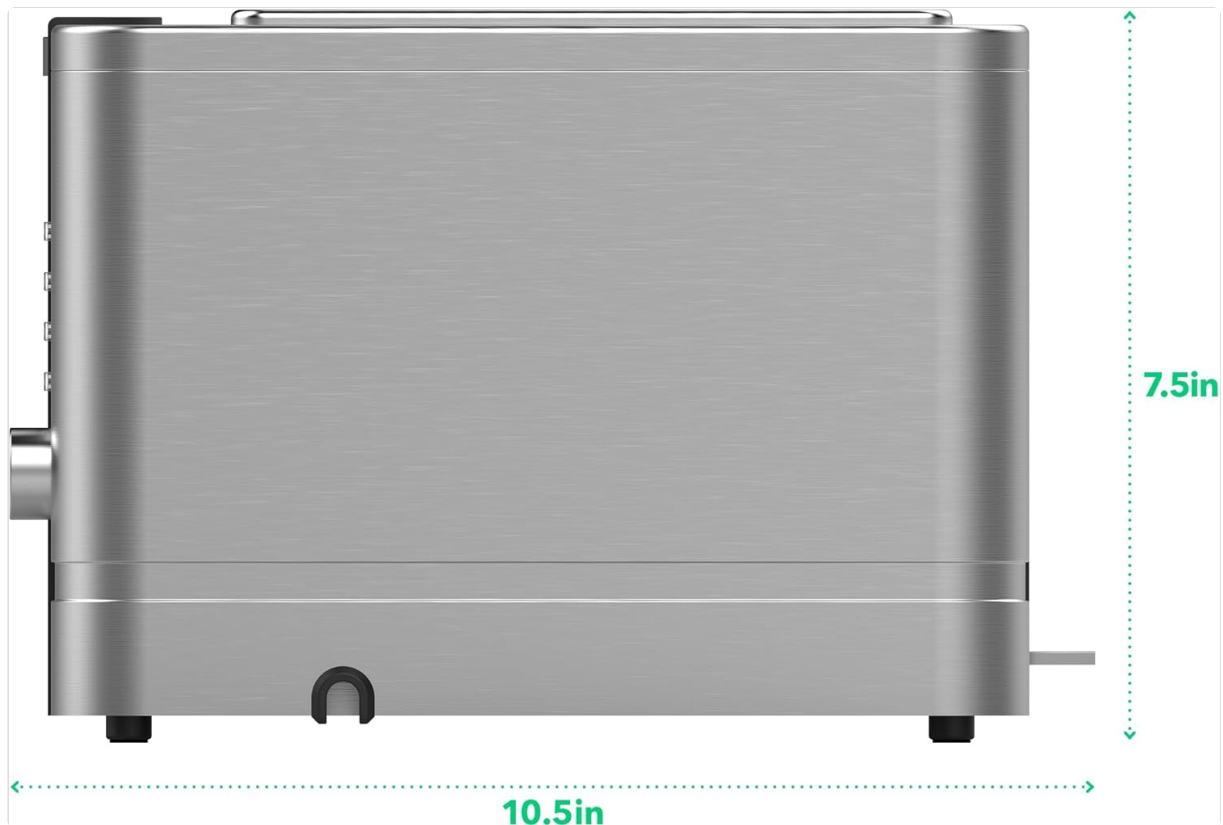


Image: Side view of the Vremi Toaster with approximate dimensions indicated: 10.5 inches in length and 7.5 inches in height.

WARRANTY AND SUPPORT

This Vremi toaster comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage caused by accident, misuse, abuse, or neglect.
- Damage from unauthorized repair or modification.
- Normal wear and tear.

For warranty claims or technical support, please contact Vremi customer service. Please have your model number (VRM010011N) and proof of purchase available.

Contact information for Vremi customer support can typically be found on the product packaging or the official Vremi website.