

## tectake 402181

# tectake® Set of 4 Folding Garden Chairs with Armrests

Model: 402181

## INTRODUCTION

Thank you for choosing the tectake® Set of 4 Folding Garden Chairs. These high-back folding chairs are designed for comfort and versatility, perfect for your garden, patio, balcony, or camping trips. Constructed with a lightweight yet durable aluminum frame and a synthetic mesh fabric, they offer excellent aeration and adjustability for optimal relaxation.

This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your new chairs. Please read it thoroughly before first use and retain it for future reference.

### Key Features:

- **Adjustable Backrest:** 5-position recline for personalized comfort.
- **Durable Construction:** Aluminum frame with weather-resistant coating and synthetic mesh fabric.
- **Comfortable Seating:** Ergonomic design with wide armrests and breathable textile fabric.
- **Foldable Design:** Easy to fold for compact storage and transport.
- **Stability:** Equipped with anti-slip caps for secure placement on various surfaces.
- **UV and Weather Resistant:** Designed to withstand outdoor elements.

## SETUP INSTRUCTIONS

Your tectake® folding garden chairs come pre-assembled and do not require any complex setup. Simply unpack the chairs and unfold them for immediate use.

### Unfolding the Chair:

1. Carefully remove the chair from its packaging.
2. Hold the top of the backrest and the front of the seat.
3. Gently pull the chair open until it locks into its upright position. Ensure all legs are fully extended and stable on the ground.

**Safety Warning: Exercise caution when unfolding or folding the chair to prevent pinching fingers or hands.**



## tectake

travel & outdoor



**Geen opbouw nodig**  
de stoelen worden  
gemonteerd geleverd



**Flexibele rugleuning**  
met 5 standen en zacht  
hoofdkussen



**Weerbestendig frame**  
dankzij een coating van  
roestvrij aluminium



**Slimme vouwfunctie**  
voor eenvoudig transport  
& compacte opslag



**Textieleen-stof**  
is ademend, zeer robuust  
en waterafstotend



**Brede armleuningen**  
met ergonomische vorm  
voor maximaal comfort



**100% stabiliteit**  
vloerbeschermende &  
antislijpdoppen

Figure 1: Key features of the tectake folding garden chair, including its no-assembly design.

## OPERATING INSTRUCTIONS

### Adjusting the Backrest:

The chair features a 5-position adjustable backrest, allowing you to find your preferred reclining angle for maximum comfort.

1. To recline the backrest, slightly lift your weight off the backrest.
2. Gently push the backrest backward to the desired position. The mechanism will click into place at each of the 5 available settings.

3. To bring the backrest forward, lift your weight and pull the backrest forward until it clicks into a more upright position.

**Safety Warning: Ensure the backrest is securely locked into a position before leaning back fully. Avoid sudden movements when adjusting.**

### Folding the Chair for Storage:

To fold the chair for compact storage or transport:

1. Ensure the backrest is in its most upright position.
2. Locate the folding mechanism, typically near the seat and backrest joint.
3. Follow the reverse steps of unfolding, gently collapsing the chair until it is flat.

## SLIM Ontwerp

Dankzij het slimme klapmechanisme kan de stoel met verstelbare rugleuning en voetensteun eenvoudig worden opgevouwen & compact worden opgeborgen.



Figure 2: Illustration of the chair's recline function and compact folding capability.



De **5-voudig verstelbare rugleuning** met hoofdkussen zorgt voor een volledig individueel **zitcomfort**.



Dankzij de **soepele vouwfunctie** is hij compact op te bergen & eenvoudig te vervoeren.



De **ergonomisch gevormde en extra brede armleuningen** zorgen voor nog meer zitcomfort.



De **antislip kunststof doppen** garanderen een enorme stabiliteit op elke ondergrond.

Figure 3: Detailed views of the adjustable backrest, folding function, and ergonomic features.

## MAINTENANCE

Proper maintenance will extend the life and appearance of your tectake® garden chairs.

### Cleaning:

- The chairs are easy to clean. Wipe down the aluminum frame and synthetic mesh fabric with a damp cloth.
- For stubborn dirt, use a mild soap solution and a soft brush, then rinse thoroughly with clean water.
- Allow the chairs to air dry completely before folding and storing.
- Avoid using harsh chemicals, abrasive cleaners, or stiff brushes, as these can damage the materials.

### Storage:

- When not in use, especially during adverse weather conditions or off-season, it is recommended to fold the chairs and store them in a dry, protected area.
- Storing the chairs indoors or under a protective cover will help preserve their condition and extend their

lifespan.

## ABSOLUUT WIND- & Weerbestendig

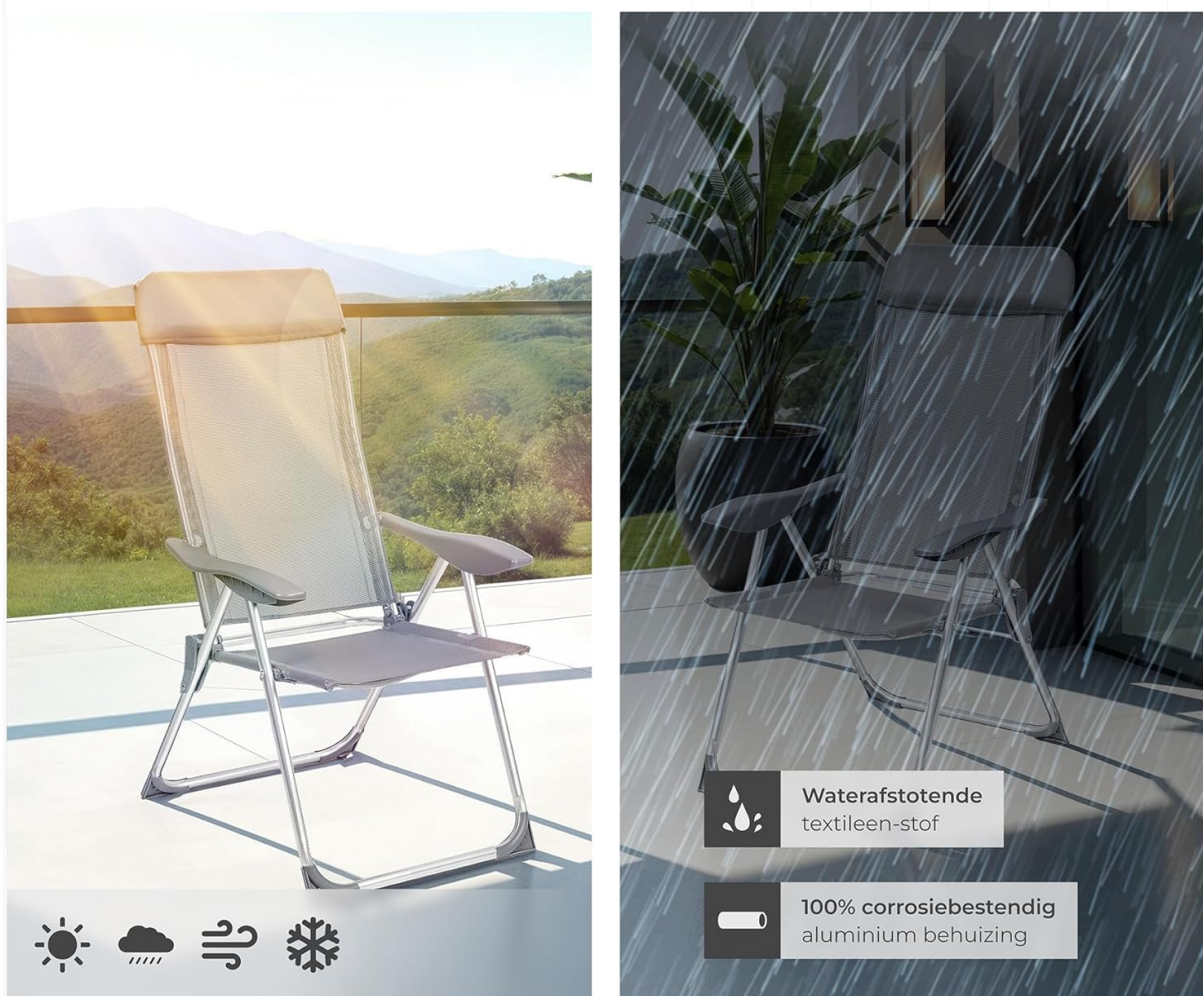


Figure 4: The chairs are designed to be wind and weather resistant, but proper storage is recommended for longevity.

### TROUBLESHOOTING

Most issues with your tectake® garden chairs can be resolved with simple checks.

#### Chair feels unstable:

- Ensure all legs are fully extended and the chair is placed on a flat, even surface.
- Check that the backrest is securely locked into one of the 5 positions.
- Verify that the anti-slip caps on the legs are intact and properly seated.

#### Difficulty adjusting backrest:

- Ensure you are slightly lifting your weight off the backrest before attempting to adjust.
- Check for any obstructions in the recline mechanism.
- Apply gentle, even pressure when adjusting. Do not force the mechanism.

## Chair does not fold flat:

- Ensure the backrest is in its most upright position before attempting to fold.
- Check for any debris or obstructions preventing the frame from collapsing fully.

**Important Safety Note: The maximum weight capacity for this chair is 100 kg (approximately 220 lbs). Do not exceed this limit to prevent damage or injury.**

## SPECIFICATIONS

**tectake**  
travel & outdoor

### Productinformatie

#### AFMETINGEN

**Totale afmetingen**  
59 x 73 x 110 cm

**Afmeting ingeklapt**  
59 x 14 x 99 cm

**Zitvlak** 35 x 41 cm

**Zithoogte** 43 cm

**Hoogte armleuningen** 60 cm

**Hoogte rugleuning** 72 cm

Afmetingen zijn bij benadering

#### TECHNISCHE DETAILS

**Draagkracht** 120 kg  
**Gewicht** ca. 3 kg  
**Materiaal** gepoedercoat staal, aluminium, polypropyleen, 100% polyester, polyurethaan

#### INHOUD

4 klapbare tuinstoelen  
Handleiding

Figure 5: Detailed dimensions and technical data.

Feature	Detail
Model Number	402181

Feature	Detail
Overall Dimensions (L x W x H)	73 x 59 x 110 cm (approx. 28.7 x 23.2 x 43.3 inches)
Folded Dimensions (L x W x H)	14 x 59 x 99 cm (approx. 5.5 x 23.2 x 39 inches)
Seat Surface (L x W)	35 x 41 cm (approx. 13.8 x 16.1 inches)
Seat Height	43 cm (approx. 16.9 inches)
Backrest Height	72 cm (approx. 28.3 inches)
Armrest Height (from ground)	60 cm (approx. 23.6 inches)
Weight per Chair	3.2 kg (approx. 7 lbs)
Maximum Load Capacity	100 kg (approx. 220 lbs)
Materials	Aluminum frame, Plastic components, Polyester fibers with plastic sheath (100% Polyester textile)
Backrest Positions	5
Color	Grey
Assembly Required	No

## WARRANTY INFORMATION

tectake® products are manufactured to high-quality standards. For specific warranty details, please refer to the purchase documentation or contact your retailer. Generally, products are covered against manufacturing defects for a period specified at the time of purchase.

Please retain your proof of purchase for any warranty claims.

## CUSTOMER SUPPORT

If you have any questions, require assistance, or encounter issues not covered in this manual, please contact tectake® customer support or your retailer.

For the fastest service, please have your product model number (402181) and proof of purchase ready when contacting support.

You can often find contact information on the tectake® official website or through your point of purchase.

© 2026 tectake®. All rights reserved.

This manual is subject to change without notice.