

[Manuals.plus](#) /

› [Toysery](#) /

› Toysery Electronic Walking Dancing Robot Toys With Music Lightening For Kids Boys Girls Toddlers, Battery Operated Included 360 Degree Body Spinning User Manual

Toysery 619730116297

Toysery Electronic Walking Dancing Robot User Manual

Brand: Toysery

PRODUCT OVERVIEW

The Toysery Electronic Walking Dancing Robot is an interactive toy designed for children, featuring walking, dancing, music, and lighting functions. It is built with durable, non-toxic materials and includes a 360-degree body spinning capability, promoting hand-eye coordination and providing engaging play.



Figure 1: Front view of the Toysero Electronic Walking Dancing Robot, showcasing its lights and design.

SETUP

1. Unboxing

Carefully remove all components from the packaging. Ensure all parts are present and undamaged before proceeding. Dispose of packaging materials responsibly.

2. Battery Installation

The robot comes with 3 AA batteries for operation. Locate the battery compartment, typically on the back or bottom of the robot. Use a small screwdriver if necessary to open the compartment. Insert the batteries, ensuring correct polarity (+/-). Close the compartment securely.



EDUCATIONAL TOY

This dancing robot toy serves an educational purpose with multiple features that teaches your kids about different parts of the body increasing the knowledge base of your kid


Figure 2: A child interacting with the robot, demonstrating its educational play value.

OPERATING INSTRUCTIONS

Once batteries are installed, locate the ON/OFF switch, usually on the back or bottom of the robot. Flip the switch to the 'ON' position to activate the robot.

Key Features:

- **Walking and Dancing:** The robot is designed to walk and perform various dance movements. Its dual-wheel foot balancing system allows it to navigate surroundings effectively.
- **Music and Lightening:** The robot plays music and features multi-colored LED lights that flash during operation, enhancing the interactive experience.
- **360-Degree Body Spinning:** The robot can spin its body 360 degrees, adding dynamic movement to its play.

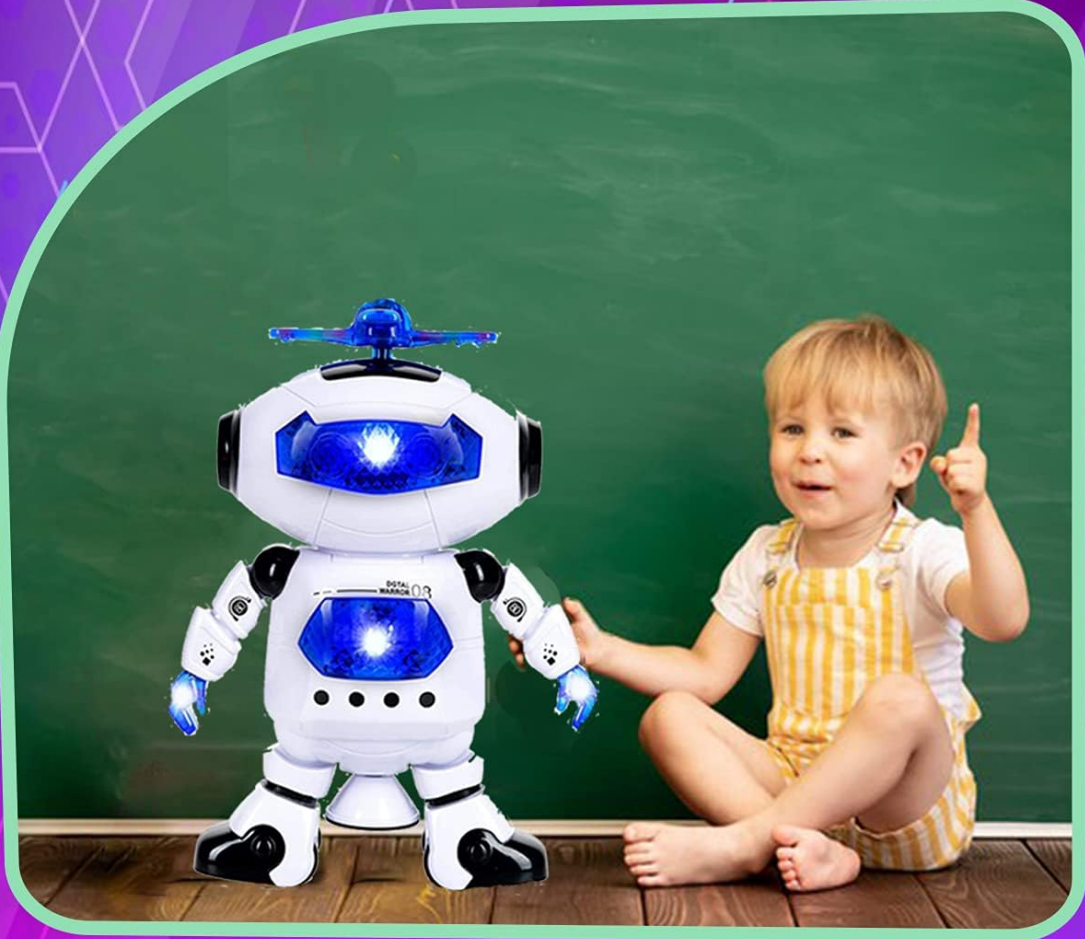

BALANCING ROBOT

Our walking robot toy has dual-wheel foot balancing, which can easily navigate the surroundings. 360-degree spinning of our robot toy hand-eye coordination of your toddler

Figure 3: The robot showcasing its dual-wheel foot balancing capability.



Interactive Robot Toy

Flexible multi-joints in shoulders, elbows and thumbs and high-quality bottom skating wheels enhance the robot toy's flexibility and allows it to carry out various combinations of movement

Figure 4: A child observing the robot's interactive movements, including flexible multi-joints.

MAINTENANCE

1. Cleaning

To clean the robot, gently wipe its surface with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the plastic and electronic components. Do not submerge the robot in water.

2. Battery Care

If the robot will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the toy. Always use fresh batteries for optimal performance.

PREMIUM MATERIALS

This toy robot for boys and girls is made of high-quality non-toxic and BPA-free plastic. The robot's body curves are smooth and round to avoid hurting the soft skin of your baby.



Figure 5: The robot's smooth, burr-free design, emphasizing its premium and safe materials.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Robot does not turn on or move.	Low or incorrectly installed batteries.	Ensure batteries are fresh and inserted with correct polarity. Check if the ON/OFF switch is in the 'ON' position.
Lights or music are not working.	Battery issue or internal malfunction.	Replace batteries. If the issue persists, contact customer support.
Robot falls over frequently.	Uneven surface or rough handling.	Operate the robot on a flat, smooth surface. Avoid forcing movements or rough play, as this can affect its balance and internal mechanisms.

Problem	Possible Cause	Solution
Sound is too loud.	No volume control feature.	This model does not include a volume control. This is a characteristic of the product.

SPECIFICATIONS

- Product Dimensions:** 9.8 x 7.72 x 3.31 inches
- Item Weight:** 13.8 ounces
- Model Number:** 619730116297
- Manufacturer Recommended Age:** 4 years and up
- Power Source:** 3 x AA Batteries (included)
- Material:** High-quality, non-toxic, and burr-free plastic

WARRANTY AND SUPPORT

Toysery is committed to customer satisfaction. If you encounter any issues with your Electronic Walking Dancing Robot, please contact Toysery customer service for assistance. Your satisfaction is our topmost priority, and we are glad to assist you with any concerns.

For support, please visit the official Toysery store or contact their customer service channels as provided on the product packaging or official website.

Note: Specific warranty terms and conditions may apply. Please refer to the product packaging or official Toysery website for detailed warranty information.

