

[Manuals.plus](#) /

› [VINABTY](#) /

› VINABTY RM-YD092 Replacement Remote Control for Sony LED HDTVs Instruction Manual

VINABTY RM-YD092

VINABTY RM-YD092 Replacement Remote Control Instruction Manual

Model: RM-YD092

INTRODUCTION

This manual provides comprehensive instructions for the VINABTY RM-YD092 replacement remote control. This remote is designed to function as a direct replacement for various Sony LED HDTV models, offering immediate usability without complex setup procedures. Please read this manual thoroughly to ensure proper operation and maintenance of your remote control.



Image: Front view of the VINABTY RM-YD092 replacement remote control, showing all buttons and its ergonomic design.

COMPATIBILITY

The VINABTY RM-YD092 remote control is compatible with a wide range of Sony LED HDTV models. Some of the compatible models include:

- KDL-32R300C, KDL-32R330B, KDL-32R420B, KDL-32R421A
- KDL-46R450A, KDL-46R453A, KDL-46R471A
- KDL-48R470B, KDL-50R450, KDL-50R450A
- KDL-32R300B, KDL-32R400A, KDL-40R450A, KDL-40R350B

This list is not exhaustive. If your original remote was RM-YD092, this replacement will function correctly.



RM-YD092 Replaced Remote fits for Sony TV

KDL-32R300C KDL-32R330B KDL-32R420B KDL-32R421A KDL-46R450A
KDL-46R453A KDL-46R471A KDL-48R470B KDL-50R450 KDL-50R450A
KDL-32R300B

Image: The RM-YD092 remote control displayed next to a television screen, illustrating its compatibility with various Sony TV models.

SETUP

Battery Installation

The VINABTY RM-YD092 remote control requires two (2) AAA batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use. No programming or pairing is required.





Image: Rear view of the RM-YD092 remote control, highlighting the battery compartment cover.

OPERATING INSTRUCTIONS

The RM-YD092 remote control features a standard layout for Sony televisions. Below is a general overview of common button functions:



Image: Close-up view of the RM-YD092 remote control, detailing the layout and labels of its 45 buttons.

Common Button Functions

Button	Function
POWER	Turns the TV on or off.
INPUT	Selects the input source (e.g., HDMI 1, AV).
SYNC MENU	Accesses the BRAVIA Sync (HDMI CEC) menu.
Number Buttons (0-9)	Direct channel selection.
VOL +/-	Adjusts the volume level.
CH +/-	Changes TV channels.
MUTING	Mutes or unmutes the TV sound.
HOME	Accesses the TV's Home menu or Smart TV features.
RETURN	Goes back to the previous screen or menu.
OPTIONS	Displays context-sensitive options for the current screen.
Navigation Pad (Up, Down, Left, Right, Enter)	Navigates through menus and confirms selections.
SLEEP	Sets the sleep timer.
DISPLAY	Shows on-screen information (e.g., channel, time).
SUBTITLE CC	Activates or deactivates subtitles/closed captions.
Media Control Buttons (PLAY, PAUSE, STOP, PREV, NEXT)	Controls playback of media content (e.g., USB, streaming apps).

Note: Specific button functions may vary slightly depending on your Sony TV model.

MAINTENANCE

Cleaning the Remote

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture.
- Do not use abrasive cleaners, alcohol, or benzene, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or

different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

Troubleshooting Guide

Problem	Possible Cause / Solution
Remote is not working.	• Batteries: Check if batteries are inserted correctly with the correct polarity (+/-). Replace with fresh AAA batteries. • Line of Sight: Ensure there are no obstructions between the remote control and the TV's infrared sensor. • Distance: Make sure you are within the effective range (up to 33 feet) of the TV. • TV Sensor: Verify that the TV's remote sensor is not blocked or dirty.
Remote works intermittently.	• Low Batteries: Replace batteries with new ones. • Interference: Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the IR signal.
Certain buttons do not work.	• TV Model: Some advanced functions might not be supported by older TV models or specific TV firmware. • Damage: Inspect the button for physical damage or debris.

If troubleshooting steps do not resolve the issue, please refer to the support section.

SPECIFICATIONS

Feature	Detail
Model Name	RM-YD092
Brand	VINABTY
Connectivity Technology	Infrared (IR)
Compatible Devices	Sony LED HDTVs (various models)
Power Source	2 x AAA Alkaline Batteries (not included)
Maximum Range	33 Feet (approx. 10 meters)
Button Quantity	45
Color	Black



Image: The RM-YD092 remote control shown with its length (6.30 inches) and width (1.77 inches) indicated.

WARRANTY INFORMATION

VINABTY replacement remote controls typically come with a standard replacement warranty. For specific warranty terms and conditions, please refer to the product packaging or contact the seller directly. Keep your purchase receipt as proof of purchase.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your VINABTY RM-YD092 replacement remote control that are not covered in this manual, please contact the seller or VINABTY customer support for assistance.

When contacting support, please provide the following information:

- Product Model: RM-YD092
- Your TV Model (e.g., Sony KDL-32R300C)
- A detailed description of the issue
- Date of purchase

For general inquiries or to report a problem, you may also visit the product page on Amazon or contact the seller "Promotion-Shopping store" directly through the Amazon platform.