

RYGHT MOBPOCKET203

RYGHT MOBPOCKET203 Wireless Waterproof Speaker User Manual

Model: MOBPOCKET203

INTRODUCTION

Thank you for choosing the RYGHT MOBPOCKET203 Wireless Waterproof Speaker. This manual provides essential information for the safe and efficient use of your speaker and the included Sport Buds earphones. Please read this manual thoroughly before using the product and retain it for future reference.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Do not disassemble, repair, or modify the device. This will void the warranty.
- Keep the speaker away from strong magnetic fields.
- Use only the specified charging cable.
- Ensure the charging port cover is securely closed when the speaker is exposed to water to maintain its waterproof rating.
- Avoid listening to audio at high volumes for prolonged periods to prevent hearing damage.

PACKAGE CONTENTS

Please check that all items are present in your package:

- RYGHT MOBPOCKET203 Wireless Waterproof Speaker
- USB-C Charging Cable
- Bicycle Mount
- Carabiner
- Sport Buds Earphones (Bonus Accessory)
- Sport Buds Charging Case
- User Manual

PRODUCT OVERVIEW

RYGHT MOBPOCKET203 Wireless Waterproof Speaker

The RYGHT MOBPOCKET203 is a compact, waterproof wireless speaker designed for portability and outdoor use. It features a 5W speaker for clear audio and an 8-hour battery life. Its universal screw thread and included bicycle mount allow for versatile attachment options.

Sport Buds Earphones (Included Accessory)

Your package includes a pair of Sport Buds earphones with their own charging case, ideal for personal listening. Please refer to the images below for visual identification of the Sport Buds earphones and their charging case.



Image 1: Sport Buds earphones and their charging case, shown separately. The earphones are white with a stem design, and the case is a smooth, white rectangular shape with rounded edges.



Image 2: Sport Buds earphones placed inside their open charging case. The case has designated slots for each earbud, and small indicator lights are visible.



Image 3: Sport Buds earphones and their charging case, with a clear view of the USB-C charging port located at the bottom of the case.



Image 4: A close-up view of the Sport Buds earphones, highlighting the speaker grille and microphone openings on the earbud stem.



Image 5: A detailed close-up of a single Sport Buds earphone, showing the ergonomic design and sound output area.



Image 6: An illustration depicting a Sport Buds earphone correctly positioned within a human ear, demonstrating its fit.



Image 7: An array of Sport Buds earphones and their charging cases displayed in various colors (black, white, blue), illustrating the range of available options for this accessory.

SETUP

Speaker Charging

1. Locate the USB-C charging port on the RYGHT MOBPOCKET203 speaker.
2. Connect the provided USB-C cable to the speaker and the other end to a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the light will change or turn off.
4. Ensure the charging port cover is sealed after charging to maintain waterproofing.

Speaker Bluetooth Pairing

1. Press and hold the Power button on the speaker to turn it on. The speaker will enter pairing mode, indicated by a flashing LED light.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "RYGHT MOBPOCKET203" from the list of devices.
4. Once paired, the speaker will emit a confirmation sound, and the LED light will stop flashing.

Sport Buds Earphones Charging

1. Place the Sport Buds earphones into their charging case. Ensure they are correctly seated.
2. Connect the Sport Buds charging case to a USB power source using its dedicated charging cable (if different from the speaker's, or use the same USB-C cable if compatible).
3. Indicator lights on the case will show charging status.

Sport Buds Earphones Bluetooth Pairing

1. Open the charging case and remove the Sport Buds earphones. They will automatically enter pairing mode.
2. On your device, enable Bluetooth and search for available devices.
3. Select "Sport Buds" or a similar name from the list.
4. A confirmation sound will indicate successful pairing.

OPERATING INSTRUCTIONS

RYGHT MOBPOCKET203 Speaker Controls

- **Power On/Off:** Press and hold the Power button.
- **Play/Pause:** Press the Play/Pause button once.
- **Volume Up:** Press the Volume + button.
- **Volume Down:** Press the Volume - button.
- **Next Track:** Press and hold the Volume + button (or double-press, depending on model specifics - refer to product for exact button functions).
- **Previous Track:** Press and hold the Volume - button (or triple-press).
- **Voice Assistant:** Press the dedicated Voice Assistant button (if available) or a specific multi-function button.

Sport Buds Earphones Controls

- **Play/Pause:** Tap either earbud once.
- **Next Track:** Double-tap the right earbud.
- **Previous Track:** Double-tap the left earbud.
- **Answer/End Call:** Tap either earbud once.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant:** Triple-tap either earbud.

MAINTENANCE

- **Cleaning:** Wipe the speaker and earphones with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents. For waterproof speaker, a damp cloth can be used, but ensure ports are sealed.
- **Storage:** Store the devices in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the devices regularly, even if not in use for extended periods.
- **Waterproofing:** Always ensure the charging port cover on the speaker is firmly closed when near water to maintain its waterproof integrity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker/Earphones do not power on.	Low battery.	Charge the device fully.
Cannot pair via Bluetooth.	Device is out of range, not in pairing mode, or previously paired.	Ensure device is within 10 meters. Put device into pairing mode. Forget previous pairing on your source device and re-pair.
No sound from speaker/earphones.	Volume too low, device not connected, or incorrect audio output selected.	Increase volume. Check Bluetooth connection. Ensure correct audio output is selected on your source device.
Poor sound quality.	Weak Bluetooth signal, interference, or low battery.	Move devices closer. Avoid obstacles. Charge the device.

SPECIFICATIONS

RYGHT MOBPOCKET203 Wireless Waterproof Speaker

- **Model:** MOBPOCKET203
- **Connectivity:** Bluetooth
- **Speaker Power:** 5 Watts
- **Battery Life:** Up to 8 hours
- **Power Source:** Electric Cable (USB-C)
- **Waterproof:** Yes
- **Dimensions (L x W x H):** 5 x 3 x 2.5 cm
- **Weight:** 137 grams
- **Special Features:** Voice Assistance, Wireless, Universal Screw Thread, Bicycle Mount Compatible

- **Recommended Use:** Bicycle

Sport Buds Earphones (Accessory)

Specific technical specifications for the Sport Buds earphones are not detailed in this manual. Please refer to any separate documentation provided with the earphones for full specifications.

WARRANTY

The RYGHT MOBPOCKET203 Wireless Waterproof Speaker comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

SUPPORT

For technical support, warranty claims, or further assistance, please contact RYGHT customer service through their official website or the retailer where you purchased the product. Please have your product model number (MOBPOCKET203) and proof of purchase ready.

© 2023 RYGHT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

