

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Anker](#) /
- › [Anker PowerCore Fusion 5000 User Manual](#)

Anker A1621

Anker PowerCore Fusion 5000 User Manual

Model: A1621

INTRODUCTION

The Anker PowerCore Fusion 5000 is a versatile 2-in-1 device that combines a 5000mAh portable power bank with a dual-port USB wall charger. This innovative design allows you to charge your devices and recharge the PowerCore Fusion itself from a wall outlet, then take it on the go as a portable battery. Its compact size and foldable plug make it an ideal companion for travel and daily use. This manual provides essential information for safe operation, setup, and maintenance of your device.

PRODUCT FEATURES

- **Hybrid 2-in-1 Design:** Functions as both a 5000mAh portable power bank and a 2-port USB wall charger.
- **Full-Speed Charging Technology:** Equipped with Anker's exclusive PowerIQ and VoltageBoost technologies to deliver optimized, full-speed charging for a wide range of USB devices. (*Note: Not compatible with Qualcomm Quick Charge.*)
- **Charge and Go Functionality:** When plugged into a wall outlet, it charges your connected devices first, then recharges its internal battery. Once fully charged, it can be unplugged and used as a portable power bank.
- **Compact and Portable:** Features a foldable AC plug for easy storage and transport, making it highly convenient for travel.
- **Dual USB-A Ports:** Allows simultaneous charging of two devices with a total maximum output of 15W when used as a power bank.



Image: The Anker PowerCore Fusion 5000 demonstrating its hybrid functionality, charging devices while plugged into a wall.



Image: The PowerCore Fusion 5000 utilizing its full-speed charging technology to charge multiple devices.

SETUP

- 1. Initial Charge:** Before first use, fully charge your PowerCore Fusion 5000. Plug the device into a wall outlet using its foldable AC plug. The LED indicators will illuminate to show the charging status.
- 2. Connecting Devices:** Use a compatible USB charging cable (Micro USB cable included, others sold separately) to connect your device to one of the USB-A output ports on the PowerCore Fusion.

OPERATING INSTRUCTIONS

Using as a Wall Charger

- Fold out the AC plug and insert the PowerCore Fusion into a wall outlet.
- Connect your devices to the USB-A output ports using their respective charging cables.
- The PowerCore Fusion will prioritize charging your connected devices. Once devices are fully charged, the PowerCore Fusion will begin recharging its internal battery.

充電してそのまま持ち出そう

USB充電器として使用しながら本体を充電でき、そのままモバイルバッテリーとして持ち歩くことができます



Image: The PowerCore Fusion 5000 functioning as a wall charger, providing power to a smartphone.

Using as a Portable Power Bank

- Ensure the PowerCore Fusion is charged. The LED indicators show the remaining battery level.
- Connect your devices to the USB-A output ports. The PowerCore Fusion will automatically begin charging.
- To check the battery level, press the power button once. The LEDs will light up to indicate the charge remaining.

2台同時充電

2つのUSB-Aポートを搭載し、
合計最大15W出力で
2台同時にフルスピード充電できます



※モバイルバッテリーとして使用する場合

Image: The PowerCore Fusion 5000 operating as a portable power bank, charging two devices.

LED Status	Meaning
All LEDs solid	Fully charged (when plugged in) / High battery level (when unplugged)
LEDs blinking	Charging in progress
One LED blinking	Low battery level
No LEDs	Off / Discharged

MAINTENANCE

- **Cleaning:** Use a dry, soft cloth to clean the surface of the device. Do not use corrosive cleaners or sprays.
- **Storage:** Store the PowerCore Fusion in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the device at least once every 3 months if not in regular use. Avoid fully discharging the battery frequently.
- **Safety:** Do not expose the device to water, fire, or high temperatures. Do not disassemble or attempt to repair the device yourself.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not charging	Cable issue, device not properly connected, PowerCore Fusion discharged.	Check cable connection. Try a different cable. Ensure PowerCore Fusion is charged or plugged into a wall outlet.
Slow charging	Cable quality, device input limit, multiple devices charging.	Use original or certified cables. Ensure your device supports faster charging. Charging multiple devices simultaneously may reduce individual charging speed.
PowerCore Fusion not recharging	Wall outlet issue, AC plug not fully extended, internal fault.	Try a different wall outlet. Ensure the foldable AC plug is fully extended and securely inserted. If problem persists, contact customer support.
Device gets warm during use	Normal operation, high power output.	It is normal for the device to get slightly warm during charging. If it becomes excessively hot, disconnect immediately and contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	A1621
Product Weight	189 g
Product Dimensions	7 x 7.2 x 3.1 cm
Battery Capacity	5000 mAh
Battery Type	Lithium-Ion
Voltage	3.7 V

Feature	Detail
Color	Black
AC Input	100-240V=0.5A
Micro USB Input	5V=2.1A
AC Output	5V=2.1A (Max 2.1A per port)
Mobile Battery Output	5V=3A (Max 3A per port)
Certifications	PSE Certified, CE

出張や旅行のお供に

クレジットカードとほぼ同じ大きさで
モバイルバッテリーと充電器を
両方持ち歩く必要がありません



Image: Size comparison of the PowerCore Fusion 5000 with a credit card, illustrating its compact form factor.

WARRANTY AND CUSTOMER SUPPORT

Anker provides a comprehensive warranty for its products. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official Anker website. If you encounter any issues or have questions regarding your Anker PowerCore Fusion 5000, please contact Anker customer support. Contact information can typically be found on the Anker website or on the packaging.

© 2026 Anker Innovations. All rights reserved.