

## LG MH 6565 CPS

# LG MH 6565 CPS Microwave Oven User Manual

Model: MH 6565 CPS

## 1. INTRODUCTION

---

Thank you for purchasing the LG MH 6565 CPS Microwave Oven. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before operation and keep it for future reference. This microwave oven features LG's Smart Inverter technology for precise cooking, a durable glass front, and an EasyClean antibacterial interior for simplified maintenance.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure proper ventilation around the appliance.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Never use metal utensils or containers in the microwave mode, as this can cause arcing.
- Supervise children closely when the appliance is in use.

## 3. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your LG MH 6565 CPS microwave oven.



Figure 1: Front view of the LG MH 6565 CPS microwave oven, showing the sleek stainless steel finish and dark glass door with integrated control panel.

### Main Components:

- **Oven Cavity:** The interior space where food is placed for cooking.
- **Glass Turntable:** Rotates food for even cooking.
- **Turntable Support Ring:** Supports the glass turntable.
- **Door:** Features a durable glass front and a secure latch system.
- **Control Panel:** Digital display and rotary knob for setting cooking functions and time.
- **Ventilation Openings:** Located on the back and sides for proper airflow.



Figure 2: Interior view of the microwave oven, showing the EasyClean antibacterial coating and the glass turntable in place.

### Control Panel:

The control panel allows you to select various cooking modes and settings. It includes a digital display, a rotary knob for adjustments, and touch-sensitive buttons for specific functions.



Figure 3: Detailed view of the control panel, highlighting the digital display, rotary knob, and function icons such as Smart Inverter, Auto Inverter, and EasyClean.

## 4. SETUP

### Unpacking and Placement:

1. Remove all packaging materials from the oven cavity and accessories.
2. Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item

likely to be cooked in it.

3. Ensure there is adequate ventilation space: at least 20 cm (8 inches) above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side. Do not block any ventilation openings.
4. Do not place the oven near a heat source or in a damp environment.
5. Plug the power cord into a grounded electrical outlet.

#### **Initial Setup:**

1. Install the turntable support ring and the glass turntable inside the oven cavity. Ensure the turntable rotates freely.
2. Before first use, wipe the interior and exterior surfaces with a soft, damp cloth.

## **5. OPERATING INSTRUCTIONS**

---

Your LG MH 6565 CPS microwave oven offers various cooking modes for versatile meal preparation.



Figure 4: Internal menu guide visible on the microwave door frame, detailing various cooking modes and their corresponding codes.

### Basic Microwave Cooking:

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Select the desired power level (if applicable) and cooking time using the rotary knob.
4. Press the Start button to begin cooking.

### Cooking Modes:

- **Micro:** Standard microwave heating. Use for reheating, cooking vegetables, etc.
- **Grill:** For browning and crisping food. Ideal for toast, gratins, or small cuts of meat.
- **Combi (Combination):** Combines microwave and grill functions for faster cooking and browning.

### **Inverter Defrost:**

This feature provides precise and even defrosting for various food types.

- **dEF1:** Meat
- **dEF2:** Poultry
- **dEF3:** Fish
- **dEF4:** Bread

Select the appropriate defrost category and enter the weight of the food. The oven will automatically calculate the defrosting time.

### **Healthy Fry:**

This mode allows for healthier frying options with less oil.

- **1:** Chicken Schnitzel
- **2:** Chicken Wings
- **3:** Cutlet
- **4:** Fish Schnitzel
- **5:** French Fries
- **6:** Hamburgers
- **7:** Sausages
- **8:** Wedge Potatoes

### **Inverter Cook (Auto Cook Menu):**

Pre-programmed settings for various dishes, ensuring optimal results.

#### **1. Roast:**

- 1-1: Jacket Potatoes
- 1-2: Roast Beef
- 1-3: Roast Chicken
- 1-4: Roast Lamb
- 1-5: Roast Pork
- 1-6: Roast Vegetables

#### **2. Popular Menu:**

- 2-1: Chicken Legs with Prunes
- 2-2: Aubergine Bun
- 2-3: Pork Fillet in Bacon with Eggplant
- 2-4: Potato Gratin
- 2-5: Ratatouille
- 2-6: Rice/Pasta
- 2-7: Stuffed Tomatoes
- 2-8: Stuffed Zucchini

### 3. **Soften & Melt:**

- 3-1: Soften Cream Cheese
- 3-2: Soften Ice Cream
- 3-3: Melt Butter
- 3-4: Melt Chocolate

### 4. **Defrost & Cook:**

- 4-1: Baguette/Croissant
- 4-2: Chicken Snacks
- 4-3: Chicken Nuggets
- 4-4: Frozen Lasagna
- 4-5: Frozen Pizza (Thick)
- 4-6: Frozen Pizza (Thin)
- 4-7: Salmon Fillets
- 4-8: Shrimps

5. **Yogurt:** For making homemade yogurt.

6. **Keep Warm:** Maintains food at a warm temperature after cooking.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your microwave oven.

### **EasyClean Interior:**

The LG MH 6565 CPS features an EasyClean antibacterial coating, making cleaning simple and convenient. To clean the interior:

1. Unplug the microwave oven before cleaning.
2. Wipe the interior surfaces with a soft, damp cloth and mild detergent.
3. For stubborn stains, place a bowl of water with lemon slices inside and microwave for 2-3 minutes to loosen food particles, then wipe clean.
4. Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can damage the EasyClean coating.

### **Exterior Cleaning:**

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the control panel with a soft, slightly damp cloth. Avoid excessive moisture.

### **Turntable and Support Ring:**

- The glass turntable and support ring can be removed and washed in warm, soapy water or in the dishwasher.
- Ensure they are completely dry before placing them back in the oven.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your microwave oven, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Oven does not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close door firmly; Check household fuse or reset circuit breaker.
Food is not heating.	Cooking time or power level set incorrectly; Metal objects in oven.	Adjust cooking time and power level; Remove any metal utensils or foil.
Turntable does not rotate.	Turntable not properly seated; Obstruction under turntable.	Ensure turntable and support ring are correctly positioned; Remove any debris.
Excessive steam inside oven.	High moisture content in food.	This is normal for foods with high moisture. Wipe interior after use.

## 8. SPECIFICATIONS

Technical specifications for the LG MH 6565 CPS Microwave Oven.



Figure 5: Dimensional diagram of the LG MH 6565 CPS microwave oven, indicating a width of 47.6 cm, depth of 38.9 cm, and height of 27.2 cm.

Feature	Detail
Brand	LG

Feature	Detail
Model Number	MH 6565 CPS (MH6565CPS)
Capacity	25 Litres
Microwave Power	1000 Watts
Grill Power	900 Watts
Product Dimensions (L x W x H)	38.9 x 47.6 x 29.4 cm (10 kg)
Turntable Size	292 mm
Installation Type	Countertop
Interior Coating	EasyClean Antibacterial Stainless Steel
Color	Stainless Steel
Voltage	230 Volts
Components Included	Turntable

## 9. WARRANTY AND SUPPORT

LG provides a 10-year warranty on the Smart Inverter Magnetron component of this microwave oven, as indicated by the "10 YEAR WARRANTY" icon on the product. For specific warranty terms, service, or technical support, please refer to the warranty card included with your product or visit the official LG website for your region.

When contacting support, please have your model number (MH 6565 CPS) and serial number ready.