



Manuals.plus /

› Pressure-Pro /

› Pressure-Pro 4000psi Pressure Washer Hose 50ft Instruction Manual

Pressure-Pro 4000psi Pressure Washer Hose 50ft

Pressure-Pro 4000psi Pressure Washer Hose Instruction Manual

Safety Information

Setup

Operation

Maintenance
Support

Troubleshooting

Specifications

Warranty &

INTRODUCTION

This manual provides essential instructions for the safe and effective use, setup, operation, and maintenance of your Pressure-Pro 4000psi Pressure Washer Hose. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

Always observe the following safety precautions when using your pressure washer hose:

- **High Pressure Hazard:** Pressure washers operate at extremely high pressures. Never direct the spray at people, animals, or electrical equipment.
- **Protective Gear:** Always wear appropriate personal protective equipment, including safety glasses or goggles, gloves, and sturdy footwear.
- **Inspect Before Use:** Before each use, inspect the hose for any signs of damage, cuts, abrasions, or leaks. Do not use a damaged hose.
- **Proper Connections:** Ensure all connections are tight and secure before operating the pressure washer. Loose connections can lead to leaks and injury.
- **Avoid Kinks:** Prevent the hose from kinking during use, as this can weaken the hose structure and lead to premature failure.
- **Pressure Rating:** Ensure the hose's pressure rating matches or exceeds the maximum output pressure of your pressure washer. This hose is rated for 4000psi.
- **Children and Pets:** Keep children and pets away from the work area when the pressure washer is in operation.

SETUP INSTRUCTIONS

1. **Unpack the Hose:** Carefully remove the pressure washer hose from its packaging.

2. **Inspect Couplers:** Verify that the quick-connect couplers are securely installed on both ends of the hose.
3. **Connect to Pressure Washer:** Attach one end of the hose to the high-pressure outlet of your pressure washer. Ensure a tight, leak-free connection.
4. **Connect to Spray Gun:** Attach the other end of the hose to your pressure washer spray gun. Again, ensure the connection is secure.
5. **Lay Out Hose:** Uncoil the hose completely before starting the pressure washer to prevent kinks and ensure even pressure distribution.



Image: The Pressure-Pro 4000psi Pressure Washer Hose, 50 feet in length, gray, non-marking, shown coiled on a hose reel with quick-connect couplers attached.

OPERATING INSTRUCTIONS

1. **Start Pressure Washer:** Follow your pressure washer's manufacturer instructions for starting the unit.
2. **Test Connections:** Before beginning work, briefly activate the spray gun to check for any leaks at the hose connections. Tighten if necessary.
3. **Maintain Hose Path:** During operation, ensure the hose is not dragged over sharp objects, hot surfaces, or areas where it could be pinched or damaged.
4. **Avoid Kinking:** Always work to keep the hose unkinked. Kinks restrict water flow and can cause damage to the hose or pressure washer pump.
5. **Non-Marking Feature:** This hose features a non-marking cover, designed to prevent scuff marks on surfaces. However, always exercise caution when dragging the hose across delicate areas.

MAINTENANCE

- **Cleaning:** After each use, rinse the hose thoroughly with clean water to remove any chemical residues or dirt.
- **Inspection:** Regularly inspect the entire length of the hose for any signs of wear, cuts, bulges, or damage to the outer cover or inner lining. Pay close attention to the areas near the couplers.

- **Coupler Care:** Keep the quick-connect couplers clean and free of debris. Lubricate moving parts with a silicone-based lubricant if needed to ensure smooth operation.
- **Storage:** Coil the hose neatly after use. Store it in a cool, dry place, away from direct sunlight, extreme temperatures, and harsh chemicals. Avoid storing the hose with kinks or sharp bends.
- **Winterization:** In freezing climates, ensure all water is drained from the hose before storage to prevent ice damage.

TROUBLESHOOTING

Issue: Water Leakage at Connections

Possible Cause: Loose connection, worn O-rings, or damaged threads.

Solution: Tighten connections securely. Inspect O-rings and replace if they appear worn or cracked. If threads are damaged, the coupler or hose may need replacement.

Issue: Reduced Pressure Output

Possible Cause: Kink in the hose, internal blockage, or damage to the hose lining.

Solution: Check the entire length of the hose for kinks and straighten them. Disconnect the hose and check for any blockages. If the hose lining is damaged, the hose must be replaced.

Issue: Hose Damage (Cuts, Abrasions)

Possible Cause: Contact with sharp objects, dragging over rough surfaces, or excessive bending.

Solution: A damaged hose can be dangerous and should be replaced immediately to prevent injury or further equipment damage. Do not attempt to repair high-pressure hoses.

SPECIFICATIONS

Brand	Pressure-Pro
Material	Steel (internal reinforcement), Rubber/PVC (cover)
Color	Gray
Length	50 Feet
Maximum Pressure	4000 PSI (Pound per Square Inch)
Item Weight	11 Pounds
Couplers	Installed Quick-Connect Couplers
Non-Marking Cover	Yes
UPC	709257514574
ASIN	B01LBRYE5W

WARRANTY AND SUPPORT

This Pressure-Pro product is covered by the manufacturer's standard warranty. For specific warranty details, claims, or technical support, please refer to the documentation included with your purchase or contact Pressure-Pro customer service directly. Keep your proof of purchase for warranty purposes.

For additional assistance, you may visit the [Pressure-Pro brand page on Amazon](#).

