

[Manuals.plus](#) /

› [DEWALT](#) /

› DEWALT 20V MAX Impact Driver Kit (DCF885C1) User Manual

DEWALT DCF885C1

DEWALT 20V MAX Impact Driver Kit (DCF885C1) User Manual

Model: DCF885C1

INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and care of your DEWALT 20V MAX 1/4-Inch Impact Driver Kit (DCF885C1). Please read all instructions carefully before use and retain this manual for future reference.



Image: The DEWALT 20V MAX Impact Driver Kit (DCF885C1) including the impact driver, battery, and charger.

SAFETY INFORMATION

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury when using power tools. Keep your work area clean and well-lit. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Keep children and bystanders away while operating a power tool. Always wear appropriate personal protective equipment, including eye protection, hearing protection, and gloves.

SETUP

1. Battery Installation and Removal

To install the battery, align the battery with the tool's receptacle and slide it in until it clicks into place. To remove the battery, press the release button on the battery pack and pull the battery out of the tool.

Your browser does not support the video tag.

Video: A user demonstrates the proper method for installing and removing the battery from a DEWALT power tool.

2. Charging the Battery

Connect the fast charger to a standard electrical outlet. Slide the battery pack onto the charger until it is fully seated. The charger's indicator light will show the charging status. Refer to the charger's specific manual for detailed charging instructions and indicator light meanings.



Image: The DEWALT Impact Driver highlighting its 3-LED light ring and one-handed hex chuck.

3. Bit Installation and Removal

This impact driver features a 1/4-inch hex chuck for one-handed bit loading. To install a bit, push the bit firmly into the chuck until it locks. To remove a bit, pull the collar forward and pull the bit out.

OPERATING INSTRUCTIONS

1. Powering On and Off

To turn the tool on, depress the trigger switch. To turn it off, release the trigger switch. The tool's speed is controlled by

the amount of pressure applied to the trigger.

2. Forward/Reverse Control

The forward/reverse button is located above the trigger. Push the button to the left for forward rotation (driving screws) and to the right for reverse rotation (removing screws). Ensure the tool is completely stopped before changing direction.

3. LED Work Light

The impact driver is equipped with three LEDs that illuminate the work area. These lights activate when the trigger is pressed and remain on for 20 seconds after the trigger is released, providing enhanced visibility in dimly lit spaces.



Image: The DEWALT Impact Driver with its three LED lights activated, illuminating the work area.

4. General Usage Tips

- Apply firm, even pressure to the tool to prevent cam-out and ensure efficient driving.
- For optimal performance, use impact-rated bits.
- Avoid over-tightening fasteners. The impact mechanism is designed to deliver high torque efficiently.

Your browser does not support the video tag.

Video: A user demonstrates driving a screw into a wooden surface using the DEWALT Impact Driver.



Image: The compact design of the DEWALT Impact Driver makes it suitable for use in tight spaces on job sites.

MAINTENANCE

1. Cleaning

Regularly clean the tool's ventilation slots to prevent overheating. Use a soft brush or dry cloth to remove dust and debris. Do not use water or chemical cleaning agents.

2. Battery Care

Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. Do not store batteries in a discharged state for extended periods. Always charge batteries fully before storage and periodically during long storage periods.



Image: DEWALT 20V MAX batteries are interchangeable across various tools, providing consistent power.

3. Storage

When not in use, store the impact driver and its components in a secure, dry location, out of reach of children. Remove the battery from the tool before storage.

TROUBLESHOOTING

If your DEWALT Impact Driver is not functioning as expected, consider the following common issues:

- **Tool not starting:** Ensure the battery is fully charged and properly inserted. Check for any obstructions in the trigger mechanism.
- **Reduced power or speed:** The battery may be low on charge. Recharge the battery. If the issue persists, the battery or tool may require service.
- **Bit not holding:** Ensure the 1/4-inch hex chuck is clean and free of debris. Push the bit firmly until it locks into place.
- **Overheating:** Allow the tool to cool down. Ensure ventilation slots are clear. Avoid continuous heavy-duty use without breaks.

For further assistance, refer to the official DEWALT support resources or contact customer service.

SPECIFICATIONS

Feature	Specification
Brand	DEWALT
Model Number	DCF885C1
Power Source	Battery Powered
Voltage	20 Volts MAX
Amperage	1.5 Amps
Maximum Chuck Size	1/4-Inch (6.35 mm) Hex
Maximum Torque	1400 Inch Pounds
Speed	2800 RPM
Item Weight	2.8 Pounds
Product Dimensions	9"L x 5.55"W x 3"H
Included Components	(1) DCF885 Impact Driver, (1) 20V MAX* battery (1.5 Ah), (1) Fast charger

WARRANTY AND SUPPORT

The DEWALT 20V MAX Impact Driver Kit (DCF885C1) is backed by DEWALT's 3-year limited warranty. This warranty covers defects in materials or workmanship for three years from the date of purchase. Additionally, it includes 1 year of free service and a 90-day money-back guarantee.



Image: DEWALT offers a comprehensive warranty package for its tools.

For warranty claims, technical support, or service inquiries, please visit the official DEWALT website or contact their customer service department. Keep your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01LBT3AZU>

More documents and user manuals: **<https://manuals.plus/>**