

Miele TCF630WP

Miele TCF 630 WP Active Plus Heat Pump Dryer User Manual

Model: TCF630WP

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Miele TCF 630 WP Active Plus heat pump dryer. Please read these instructions carefully before using the appliance for the first time to prevent accidents and ensure optimal performance. Keep this manual in a safe place for future reference.

2. SAFETY INSTRUCTIONS

Observe the following safety precautions to ensure safe operation:

- Ensure the appliance is correctly installed and grounded by a qualified person.
- Do not allow children to play with or operate the dryer.
- Never dry items that have been soiled with flammable substances (e.g., cooking oil, petrol).
- Clean the lint filters after every drying cycle to prevent fire hazards and maintain efficiency.
- Do not block the ventilation openings of the dryer.
- In case of a fault, switch off the appliance and disconnect it from the power supply immediately.

3. PRODUCT OVERVIEW

The Miele TCF 630 WP Active Plus is a heat pump dryer designed for efficient and gentle laundry care. It features an 8 kg drum capacity and advanced drying technologies like PerfectDry and FragranceDos.



Figure 1: Front view of the Miele TCF 630 WP Active Plus heat pump dryer, showing the control panel, door, and lower access panels.

3.1 Control Panel

The control panel allows you to select drying programs and adjust settings. It consists of a display, program selection buttons, and a rotary program selector.

- **Display:** Shows the remaining drying time (e.g., 2:35) and indicators like 'Perfect Dry'.
- **Program Selection Buttons:**

- **Extra Dry:** For very dry laundry.
- **Cupboard Dry:** For laundry that can be put directly into the cupboard.
- **Iron Dry:** For laundry that needs to be ironed.
- **Damp Dry:** For laundry that needs to be further air-dried or ironed damp.
- **Gentle +:** Reduces drying temperature for delicate items.
- **Start/Stop:** To begin or pause a drying program.
- **Rotary Program Selector:** Used to choose specific drying programs:
 - **Cotton:** Standard program for cotton items.
 - **Minimum Iron:** For synthetic and mixed fabric items.
 - **Delicates:** For delicate fabrics requiring gentle care.
 - **Finish Wool:** Special program for wool items.
 - **Shirts:** For shirts and blouses.
 - **Express:** Quick drying program.
 - **Jeans:** For denim garments.
 - **Outdoor:** For functional outdoor clothing.
 - **Proofing:** For re-proofing waterproof garments.
 - **Pre-ironing:** Prepares laundry for easier ironing.
 - **Warm Air:** For airing or warming items without drying.

4. SETUP

4.1 Unpacking

Remove all packaging materials and transport restraints. Inspect the dryer for any signs of transport damage. Report any damage immediately to your dealer.

4.2 Installation Location

Place the dryer on a clean, level, and stable surface. Ensure adequate ventilation around the appliance. Do not install the dryer in a room where there is a risk of frost.

4.3 Electrical Connection

Connect the dryer to a properly installed and grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance's rating plate.

4.4 Water Drainage

The dryer collects condensate water in a container. This container must be emptied after each drying cycle. Alternatively, a drain hose can be connected to permanently discharge the condensate water, eliminating the need for manual emptying.

4.5 Initial Use

Before the first drying cycle, wipe the drum with a damp cloth to remove any manufacturing residues. Run a short drying program with a few damp cloths to ensure proper operation.

5. OPERATING INSTRUCTIONS

5.1 Preparing Laundry

Sort laundry by fabric type and desired dryness level. Close zippers, hooks, and buttons. Remove any sharp objects from pockets.

5.2 Loading Laundry

Open the dryer door and load the laundry loosely into the drum. Do not overload the dryer; observe the maximum load capacity of 8 kg. Close the door firmly.

5.3 Selecting a Program

Turn the rotary program selector to the desired drying program (e.g., Cotton, Minimum Iron). Use the program selection buttons to fine-tune the dryness level (e.g., Extra Dry, Cupboard Dry) or activate special options like Gentle +.

5.4 FragranceDos

The FragranceDos system allows you to add a pleasant scent to your laundry. Insert a Miele fragrance flacon into the designated opening. The dryer will dispense the fragrance during the drying cycle.

5.5 PerfectDry

The PerfectDry system automatically detects the mineral content of the water and adjusts the drying process for precise and consistent results, preventing over-drying or under-drying.

5.6 Starting the Program

Press the 'Start/Stop' button to begin the selected drying program. The display will show the estimated remaining drying time.

5.7 End of Program

Once the program is complete, the display will indicate 'End'. Remove the laundry promptly to prevent creasing. Clean the lint filters and empty the condensate container.

6. MAINTENANCE

6.1 Cleaning the Lint Filters

The lint filters are located in the door opening. Clean them after every drying cycle by removing any accumulated lint. This ensures optimal drying performance and energy efficiency.

6.2 Emptying the Condensate Container

If the dryer is not connected to a drain hose, the condensate container must be emptied after each cycle. Pull out the container and pour out the water. Reinsert the container firmly.

6.3 Cleaning the Appliance Exterior

Wipe the exterior surfaces of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions. If the problem persists, contact Miele customer service.

Problem	Possible Cause	Solution
Dryer does not start	No power supply; Door not closed; Start/Stop button not pressed	Check power connection; Close door firmly; Press Start/Stop button
Laundry not dry enough	Lint filters clogged; Overloaded dryer; Incorrect program selected	Clean lint filters; Reduce load size; Select appropriate program
Condensate container full indicator	Condensate container needs emptying	Empty condensate container
Unusual noises	Foreign objects in drum; Appliance not level	Check drum for objects; Adjust leveling feet

8. SPECIFICATIONS

- **Brand:** Miele
- **Model Number:** TCF630WP
- **Type:** Heat Pump Dryer
- **Capacity:** 8 Kilograms
- **Energy Efficiency Class:** A+++ (171 kWh/year)
- **Dimensions (W x D x H):** 59.6 x 63.6 x 85 cm
- **Weight:** 59 Kilograms
- **Form Factor:** Front-loading
- **Color:** Lotus White
- **Global Trade Item Number (GTIN):** 04002515755310

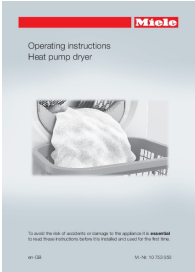 
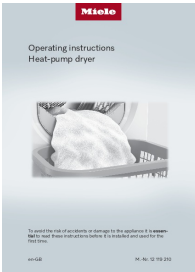 
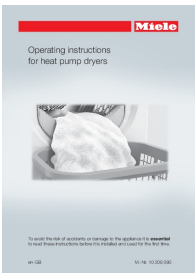 
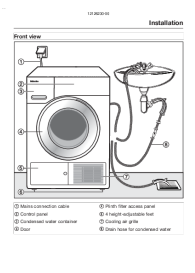 
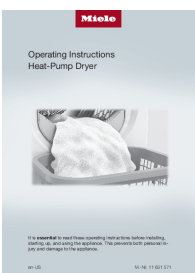 
9. WARRANTY AND SUPPORT

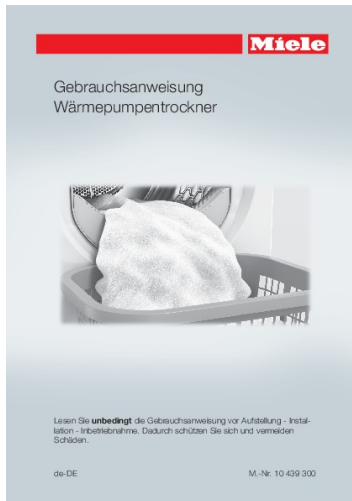 
Your Miele appliance comes with a manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Miele website. For technical assistance, spare parts, or service requests, please contact Miele customer support directly. Ensure you have your model number (TCF630WP) and purchase date available when contacting support.

© 2023 Miele. All rights reserved. Information subject to change without notice.

Related Documents - TCF630WP

	Miele Tumble Dryer Filter - Installation and Maintenance Guide This guide provides instructions for installing and maintaining the IN WEE tumble dryer filter for Miele heat pump dryers. It includes product dimensions, a list of compatible Miele models, step-by-step installation procedures, cleaning recommendations, and important precautions.
---	---

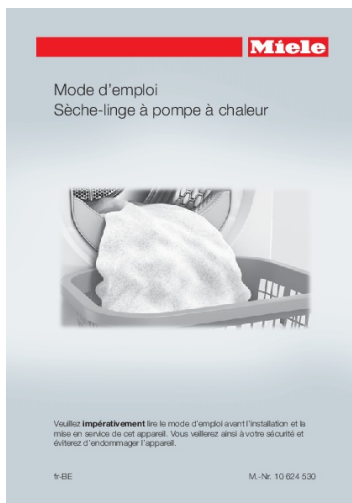 
	Miele TDD 230 WP Heat Pump Dryer Operating Instructions This document provides comprehensive operating instructions and a user manual for the Miele TDD 230 WP heat pump dryer, covering essential safety information, installation, operation, care, and troubleshooting guidance.
	Miele Heat-Pump Dryer Operating Instructions Model TED 265 WP Comprehensive operating instructions for the Miele TED 265 WP heat-pump dryer, covering safety, installation, usage, energy-saving tips, and troubleshooting.
	Miele Heat Pump Dryer Operating Instructions & User Manual Comprehensive operating instructions and user guide for Miele heat pump dryers, covering installation, operation, safety, maintenance, and troubleshooting. Learn how to use your Miele dryer efficiently and safely.
	Miele TWH 780 WP 9KG Heat Pump Tumble Dryer Installation Guide This installation guide provides essential steps for setting up the Miele TWH 780 WP 9KG Heat Pump Tumble Dryer, covering transport, levelling, ventilation, drainage, door hinging, and electrical connections.
	Miele Heat-Pump Dryer Operating Instructions TXI 680 WP User manual detailing the operation, safety, installation, and maintenance of the Miele TXI 680 WP Heat-Pump Dryer. Learn how to use programs, save energy, and troubleshoot common issues.



[\[pdf\]](#)

10439300 04 Gebrauchsanweisung Wärmepumpentrockner Miele 19 févr 2018 — Entsorgung des Altgerätes Elektro und Elektronikgeräte enthalten vielfach wertvolle Materialien Sie enthalten auch bestimmte Stoffe Gemi 000 05 miele pmedia ZGA TX2070 |||

Gebrauchsanweisung Wärmepumpentrockner Lesen Sie unbedingt die Gebrauchsanweisung vor Aufstellung - ... ner nach delegierter Verordnung EU Nr. 392/2012 MIELE Modellname / -kennzeichen Nennkapazität 1 **TCF630WP** 8,0 kg Art des Haushaltstrockners Abluft / Kondens - / Energieeffizienzklasse A ...
lang:de score:13 filesize: 2.95 M page_count: 76 document date: 2018-02-05



[\[pdf\]](#)

Mode d'emploi Sèche linge à pompe chaleur v1 manuals coolblue be c9 miele tcf 630 wp |||

Mode d'emploi Sèche-linge pompe chaleur Veuillez impérativement lire le mode d'emploi avant l'installation ... u programme coton standard décharge niveau de puissance acoustique LWA 6 Appareil intégrable **TCF630WP** 8,0 kg - / A 171 kWh par an / - 1,41 kWh 0,78 kWh 0,40 W 1,50 W 15 min Coton avec fléch...

lang:fr score:12 filesize: 2.37 M page_count: 76 document date: 2017-11-16