

[Manuals.plus](#) /

› [Synergy Digital](#) /

› Synergy Digital 16GB SDHC Memory Card (2-Pack) for Vivitar ViviCam S130 Digital Camera User Manual

Synergy Digital ViviCam S130-SY-2PSD16GB

Synergy Digital 16GB SDHC Memory Card (2-Pack) User Manual

Model: ViviCam S130-SY-2PSD16GB

INTRODUCTION

This manual provides essential instructions for the proper use, maintenance, and troubleshooting of your Synergy Digital 16GB Secure Digital High Capacity (SDHC) Memory Cards. These cards are designed for compatibility with all SDHC-enabled devices, including the Vivitar ViviCam S130 Digital Camera, offering reliable storage for your digital content.

Please read this manual thoroughly before using the memory cards to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The Synergy Digital 16GB SDHC Memory Card pack includes two high-capacity memory cards, each offering 16GB of storage. These cards feature Class 4 speed performance, suitable for capturing photos and standard definition video.



Image: Two Synergy Digital 16GB SDHC memory cards, one partially inserted into a camera slot, with a Vivitar ViviCam S130 digital camera visible in the background. This image illustrates the product and its intended use with a compatible digital camera.

- **Capacity:** 2 x 16GB Secure Digital High Capacity (SDHC) Memory Cards
- **Speed Class:** Class 4 Speed Performance
- **Compatibility:** Compatible with all SDHC Devices

SETUP

1. **Insert the Memory Card:** Locate the memory card slot on your compatible device (e.g., Vivitar ViviCam S130 Digital Camera). Gently insert the SDHC card into the slot with the gold contacts facing down or as indicated by the device's manual, until it clicks into place. Do not force the card.
2. **Power On Device:** Turn on your digital camera or other compatible device.
3. **Format the Card (Recommended):** For first-time use or after transferring data, it is highly recommended to format the memory card using your device's internal formatting function. This prepares the card for optimal performance with your specific device and ensures proper file system structure. Refer to your device's user manual for specific formatting instructions. Formatting will erase all data on the card.
4. **Check Card Recognition:** Verify that your device recognizes the memory card and displays the available storage capacity.

OPERATING THE MEMORY CARDS

Once installed and formatted, your Synergy Digital SDHC memory cards are ready for use with your compatible device.

- **Storing Data:** Use your device's functions to capture photos, record videos, or save other digital files directly to the memory card.
- **Viewing Data:** Access stored files through your device's playback or file management features.
- **Transferring Data:** To transfer files to a computer, you can either connect your device directly to the computer via a USB cable or remove the SDHC card and insert it into a compatible card reader connected to your computer.
- **Safe Removal:** Always ensure your device is powered off or the memory card is safely ejected through the device's menu before physically removing the card to prevent data corruption.

MAINTENANCE AND CARE

- **Handle with Care:** Avoid bending, dropping, or applying excessive force to the memory card.
- **Protect Contacts:** Do not touch the gold contact pins on the card. Keep them clean and free from dust, dirt, or moisture.
- **Storage:** When not in use, store the memory cards in their protective cases or a suitable storage container to prevent damage from static electricity, dust, and physical impact.
- **Temperature and Humidity:** Avoid exposing the cards to extreme temperatures, direct sunlight, or high humidity.
- **Cleaning:** If necessary, gently wipe the gold contacts with a clean, dry, lint-free cloth. Do not use liquids or abrasive materials.

TROUBLESHOOTING

Problem	Possible Solution
Card not recognized by device.	◦ Ensure the card is fully and correctly inserted. ◦ Check if the device is SDHC compatible. (These cards are SDHC, not standard SD or SDXC). ◦ Try inserting the card into another compatible device to rule out a device issue. ◦ Clean the card's gold contacts with a dry, lint-free cloth.
Cannot save or delete files.	◦ Check the write-protect switch on the side of the SDHC card. Slide it to the 'unlocked' position. ◦ Ensure the card is not full. ◦ Try formatting the card (Warning: This will erase all data).
Data corruption or errors.	◦ Always safely eject or power off the device before removing the card. ◦ Avoid interrupting data transfer processes. ◦ Reformat the card if issues persist (Warning: This will erase all data).

SPECIFICATIONS

Brand	Synergy Digital
Flash Memory Type	SDHC (Secure Digital High Capacity)
Memory Storage Capacity	16 GB per card (2-pack)
Secure Digital Association Speed Class	Class 4
Manufacturer	Synergy Digital
Model Number	ViviCam S130-SY-2PSD16GB
Manufacturer Part Number	BF436310
ASIN	B01LDAVA6S

WARRANTY INFORMATION

These Synergy Digital 16GB SDHC Memory Cards are covered by a**5-year manufacturer warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, or to initiate a warranty claim, please refer to the official Synergy Digital website or contact their customer support.

SUPPORT

For further assistance, technical support, or inquiries regarding your Synergy Digital memory cards, please visit the official Synergy Digital website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

When contacting support, please have your product model number (ViviCam S130-SY-2PSD16GB) and proof of purchase readily available.

© 2024 Synergy Digital. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question