

Olimpia Splendid 01667

Olimpia Splendid 01667 Aqua Silent 14 Dehumidifier User Manual

Model: 01667 | Natural R410a Aqua Silent 14

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Ensure the appliance is placed on a stable, level surface.
- Do not block air inlets or outlets. Maintain adequate clearance around the unit.
- Do not operate the dehumidifier near water or in excessively wet environments.
- Always unplug the unit before cleaning or performing any maintenance.
- Keep children and pets away from the appliance during operation.
- Use only the specified power supply (230V).
- Do not attempt to repair or modify the appliance yourself. Contact qualified service personnel.

2. PRODUCT OVERVIEW

The Olimpia Splendid 01667 Aqua Silent 14 is a portable dehumidifier designed to reduce humidity levels in indoor spaces. It features a silent system and a user-friendly mechanical control interface.



Image 1: Front view of the Olimpia Splendid 01667 Aqua Silent 14 Dehumidifier, showcasing its compact design and transparent water tank.



Image 2: Close-up of the top control panel, featuring the mechanical dial for easy operation.

3. SETUP

3.1 Unpacking

1. Carefully remove the dehumidifier from its packaging.
2. Remove all packing materials, including any tape or protective films.
3. Inspect the unit for any signs of damage. If damaged, do not operate and contact customer support.

3.2 Placement

- Place the dehumidifier in a room where dehumidification is desired.
- Ensure there is at least 20 cm (8 inches) of space around the unit for proper airflow.
- Avoid placing the unit near heat sources or in direct sunlight.
- The unit is equipped with wheels for easy relocation.

3.3 Power Connection

- Plug the power cord into a grounded 230V electrical outlet.
- Ensure the outlet is suitable for the appliance's power requirements (214W).

4. OPERATING INSTRUCTIONS

4.1 Initial Operation

1. After plugging in the unit, turn the mechanical dial to the desired humidity level or continuous operation.
2. The dehumidifier will begin to operate, drawing in moist air and expelling drier air.

4.2 Setting Humidity Level

The mechanical dial allows you to set the desired humidity level. The unit will operate until the room's humidity reaches the set level, then cycle off. It will restart automatically if humidity rises.

4.3 Continuous Draining

For continuous operation without emptying the water tank, connect a drainage hose (not included) to the continuous drain outlet. Ensure the hose is sloped downwards to allow gravity drainage into a suitable receptacle or drain.

4.4 Water Tank Full Indicator

When the 2-liter water tank is full, the unit will automatically shut off, and an indicator light will illuminate. Empty the tank to resume operation.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your dehumidifier.

5.1 Emptying the Water Tank

1. Gently pull out the water tank from the front of the unit.
2. Carefully empty the collected water.
3. Slide the empty tank back into position until it clicks securely.

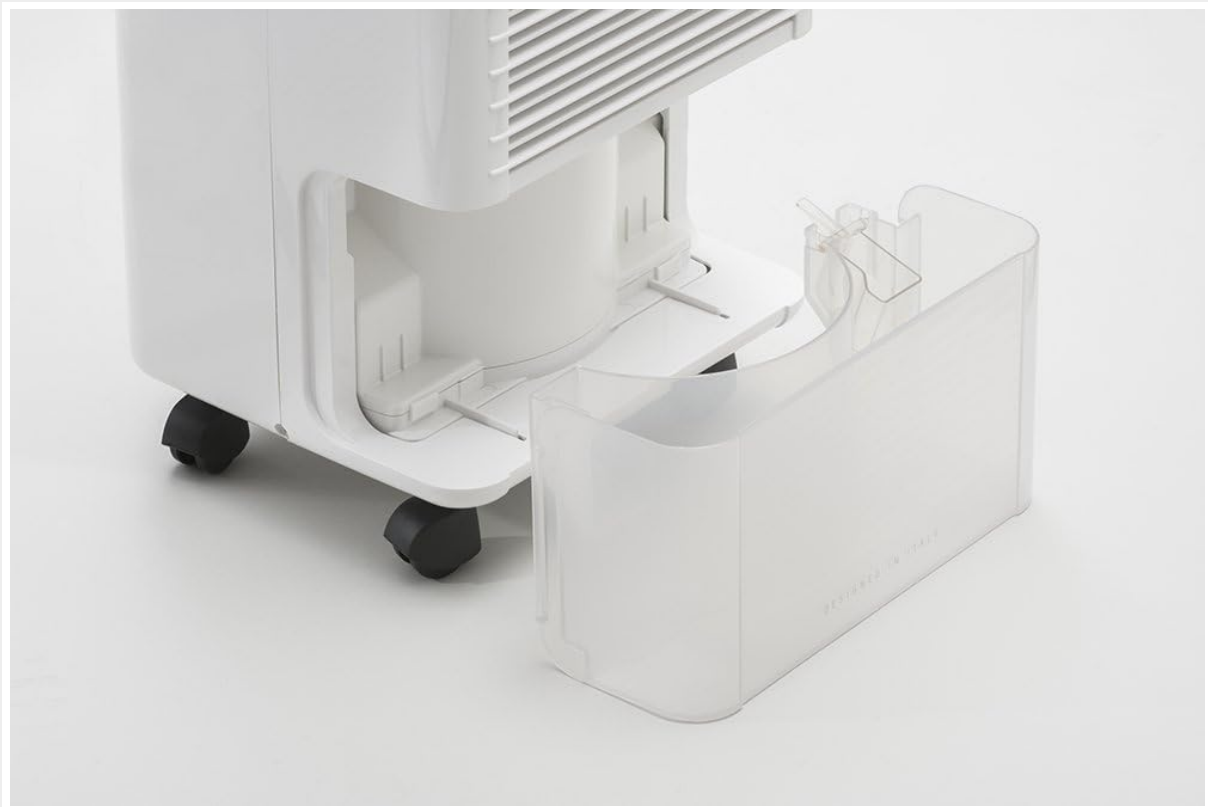


Image 3: The transparent water tank being removed from the dehumidifier for emptying.

5.2 Cleaning the Washable Filter

The dehumidifier is equipped with a washable filter. Clean it every two weeks or more frequently depending on usage and air quality.

1. Unplug the dehumidifier from the power outlet.
2. Locate and remove the air filter (typically at the back or side).
3. Wash the filter under running water. Use a soft brush if necessary to remove stubborn dust.

4. Allow the filter to air dry completely before reinstalling it. Do not use a dryer or direct heat.
5. Reinstall the dry filter and plug the unit back in.

5.3 Cleaning the Exterior

- Wipe the exterior of the unit with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dehumidifier does not turn on.	No power supply. Power cord not plugged in. Water tank full.	Check power connection. Empty water tank.
Unit runs but no water collects.	Room humidity is already low. Temperature is too low. Air filter is clogged.	Verify room humidity. Ensure room temperature is above 5°C. Clean the air filter.
Unit is noisy.	Unit not on a level surface. Air filter clogged.	Place unit on a flat, stable surface. Clean the air filter.
Water leaks from the unit.	Water tank not properly installed. Continuous drain hose is blocked or improperly connected.	Reinstall water tank correctly. Check continuous drain hose for blockages or proper connection.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Model Number	01667
Dehumidification Performance	14 litres/24 hours
Water Tank Capacity	2 litres
Power / Wattage	214 W
Voltage	230 V
Noise Level	36 dB(A)
Recommended Room Size	Up to 120 m ³
Product Dimensions (L x W x H)	30.7 x 25.8 x 42.7 cm
Item Weight	12.8 kg
Material	Metal
Number of Speeds	2

Feature	Specification
Special Features	Continuous Draining, Washable Filter

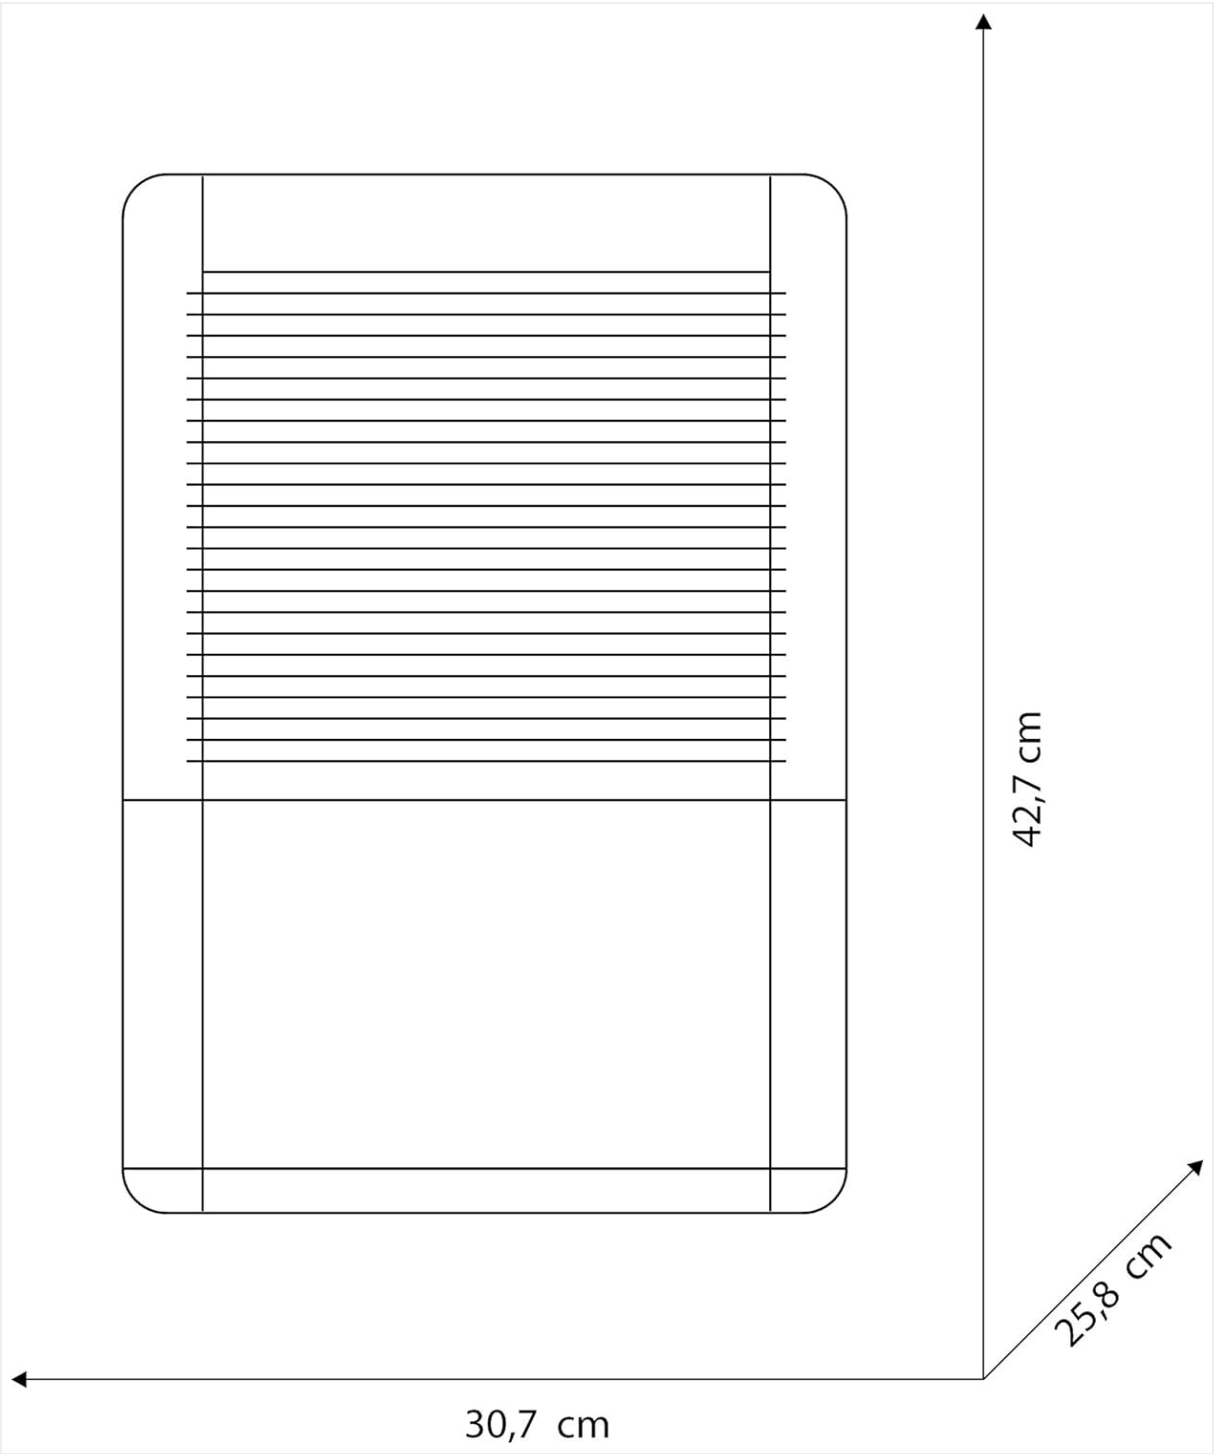


Image 4: Technical drawing illustrating the dimensions of the dehumidifier: 30.7 cm (length), 25.8 cm (width), and 42.7 cm (height).

8. WARRANTY AND SUPPORT

Olimpia Splendid products are manufactured to high-quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Olimpia Splendid website.

For technical assistance, spare parts, or service inquiries, please contact Olimpia Splendid customer support. Have your model number (01667) and purchase date ready when contacting support.

