

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Acclaim](#) /

› [Acclaim LEDUC14WH LED Undercabinet Light User Manual](#)

Acclaim LEDUC14WH

Acclaim LEDUC14WH LED Undercabinet Light User Manual

Model: LEDUC14WH

1. INTRODUCTION

Thank you for choosing the Acclaim LEDUC14WH LED Undercabinet Light. This fixture is designed to provide efficient and reliable lighting for your kitchen and other task areas. Its lightweight design and simple installation make it a practical choice for enhancing visibility and ambiance under cabinets. This manual provides essential information for the safe installation, operation, and maintenance of your new LED undercabinet light.



Figure 1: Acclaim LEDUC14WH LED Undercabinet Light. This image displays the white LED undercabinet light fixture, featuring a toggle switch on the top left for power control.

2. SAFETY INFORMATION

Please read all safety instructions carefully before installation and operation. Failure to follow these instructions may result in electric shock, fire, or other hazards.

- **Disconnect Power:** Always turn off the power at the circuit breaker or fuse box before installing, servicing, or cleaning the fixture.
- **Qualified Electrician:** If you are unsure about the installation process, consult a qualified electrician.
- **Indoor Use Only:** This fixture is designed for indoor use in dry locations. Do not expose to water or moisture.
- **Proper Wiring:** Ensure all electrical connections are made in accordance with local codes and ordinances.
- **Avoid Damage:** Do not damage or alter the wiring during installation.
- **Secure Mounting:** Ensure the fixture is securely mounted to a stable surface to prevent it from falling.

- **Non-Removable Fixture:** The LED components are non-removable. Do not attempt to replace individual LEDs.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Acclaim LEDUC14WH LED Undercabinet Light Fixture
- Mounting Hardware (screws, clips - assumed)
- Instruction Manual (this document)

4. SETUP AND INSTALLATION

The Acclaim LEDUC14WH LED Undercabinet Light is designed for under-cabinet mounting and requires no assembly. Follow these steps for installation:

1. **Prepare the Installation Area:** Choose a suitable location under a cabinet. Ensure the surface is clean, dry, and capable of supporting the fixture's weight (approximately 1 pound).
2. **Turn Off Power:** Before starting, ensure the power supply to the installation area is turned off at the main circuit breaker.
3. **Position the Fixture:** Hold the LED undercabinet light in the desired position. Mark the locations for the mounting screws.
4. **Mount the Fixture:** Secure the fixture to the underside of the cabinet using the provided mounting hardware. Ensure it is firmly attached.
5. **Connect Power:** This is a corded electric unit. Plug the fixture into a standard 120V AC outlet. Ensure the cord is routed safely and does not pose a tripping hazard or get pinched.
6. **Restore Power:** Once the fixture is securely mounted and plugged in, restore power at the circuit breaker.

5. OPERATING INSTRUCTIONS

The Acclaim LEDUC14WH LED Undercabinet Light features a simple push-button switch for operation.

1. **Turn On:** Locate the push-button switch on the fixture. Press the switch to turn the light on.
2. **Turn Off:** Press the switch again to turn the light off.

The fixture provides a white LED light output of 330 lumens at 7 watts, operating on 120 volts.

6. MAINTENANCE

The Acclaim LEDUC14WH LED Undercabinet Light requires minimal maintenance.

- **Cleaning:** Ensure the power is off before cleaning. Wipe the fixture with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or cleaners containing alcohol, as these can damage the finish or

electrical components.

- **LEDs:** The integrated LED light source is designed for long life and is not user-replaceable.

7. TROUBLESHOOTING

If you encounter issues with your LED undercabinet light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the outlet. Fixture not plugged in securely. Switch is off.	Check the circuit breaker. Ensure the plug is fully inserted into the outlet. Press the push-button switch to the 'on' position.
Light flickers.	Loose connection. Voltage fluctuations.	Ensure the plug is secure. If flickering persists, consult a qualified electrician. Ensure the fixture is connected to a stable power source.
Light is dim.	Normal wear over time (LEDs have a long lifespan but can degrade slightly). Dust or dirt on the diffuser.	This is generally not a common issue for new LED fixtures. If significantly dim, contact support. Clean the diffuser with a soft, dry cloth.

8. SPECIFICATIONS

Feature	Detail
Model Number	LEDUC14WH
Brand	Acclaim
Color	White
Material	Aluminum
Style	Transitional
Room Type	Kitchen
Specific Uses	Home, Kitchen
Indoor/Outdoor Usage	Indoor
Power Source	Corded Electric
Installation Type	Undercounter
Special Feature	LED, Lightweight

Feature	Detail
Control Method	Push Button
Light Source Type	LED
Finish Type	Polished
Number of Light Sources	1
Voltage	120 Volts
Light Color	White
Shape	Rectangular
Item Weight	1 Pound
Wattage	7 watts
Brightness	330 Lumens
Product Dimensions	1 x 14 x 1 inches
Mounting Type	Under Cabinets
Assembly Required	No
Fixture Type	Non Removable
UPC	849596001899

9. WARRANTY AND SUPPORT

The provided product information indicates 'Warranty Description: Na.', meaning specific warranty details are not available in this document. For warranty inquiries or technical support, please contact Acclaim Lighting directly or refer to their official website for the most current information.

For further assistance, please visit the Acclaim Lighting official website or contact their customer service department.