

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Whirlpool](#) /

› [Whirlpool 214433 WP Tube-Inlet Dryer Replacement Part Instruction Manual](#)

## Whirlpool 214433

# WHIRLPOOL 214433 WP Tube-Inlet Instruction Manual

Original Equipment Manufacturer (OEM) Replacement Part

[Installation](#)   [Introduction](#)   [Safety Information](#)   [Package Contents](#)   [Setup &](#)  
[Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

This manual provides essential instructions for the proper installation, operation, and maintenance of the Whirlpool 214433 WP Tube-Inlet. This is an Original Equipment Manufacturer (OEM) authorized replacement part designed to fit various Whirlpool brand dryer models. Please read this manual thoroughly before attempting any installation or service to ensure safe and correct usage.

## 2. SAFETY INFORMATION

Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

- **Disconnect Power:** Always disconnect the power supply to the dryer before installing, servicing, or cleaning any parts. Failure to do so can result in electrical shock or serious injury.
- **Professional Installation:** Installation of this part may require specialized tools and knowledge. If you are unsure about any step, it is recommended to consult a qualified appliance technician.
- **Wear Protective Gear:** Wear appropriate personal protective equipment, such as gloves and safety glasses, during installation to prevent injury.
- **Sharp Edges:** Be aware of potential sharp edges on appliance components. Handle parts with care.
- **Original Parts:** Use only genuine OEM replacement parts to ensure proper fit, function, and safety.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package before beginning installation.

- 1 x Whirlpool 214433 WP Tube-Inlet



Image 1: The Whirlpool 214433 WP Tube-Inlet. This image shows the replacement part, which is a black tube-like component, typically used for air or water intake in a dryer.

## 4. SETUP AND INSTALLATION

Follow these steps carefully to install the Whirlpool 214433 WP Tube-Inlet. Refer to your specific dryer model's service manual for detailed disassembly and reassembly instructions, as procedures may vary.

### 1. Preparation:

- Ensure the dryer is unplugged from the electrical outlet.
- Turn off the gas supply valve if it is a gas dryer.
- Gather necessary tools, which may include screwdrivers, nut drivers, pliers, and work gloves.
- Clear the work area around the dryer.

### 2. Accessing the Old Part:

- Depending on your dryer model, you may need to remove the top panel, front panel, or rear access panel to reach the existing tube-inlet.
- Carefully disconnect any hoses, wires, or clamps attached to the old tube-inlet.

### 3. Removing the Old Part:

- Unfasten any screws, clips, or mounting hardware securing the old tube-inlet in place.
- Gently remove the old tube-inlet from its position. Note its orientation for correct installation of the new part.

### 4. Installing the New Part:

- Position the new Whirlpool 214433 WP Tube-Inlet in the same orientation as the old part.
- Secure it with the appropriate screws, clips, or mounting hardware. Ensure it is firmly seated and stable.
- Reconnect any hoses, wires, or clamps that were disconnected. Ensure all connections are tight and secure to

prevent leaks or disconnections during operation.

## 5. Reassembly:

- Reattach any panels removed during the access phase. Ensure all screws are tightened.
- Verify that no tools or loose parts are left inside the dryer.

## 6. Post-Installation Check:

- Reconnect the dryer to the electrical outlet.
- If applicable, turn on the gas supply valve.
- Run a short cycle or test function to ensure the dryer operates correctly and there are no unusual noises, leaks, or malfunctions.

# 5. OPERATION

The Whirlpool 214433 WP Tube-Inlet is a functional component of your dryer. Once correctly installed, it facilitates the proper flow of air or water (depending on its specific function in your dryer model) necessary for the dryer's operation. No direct user interaction with this part is required during normal operation.

After installation, observe the dryer during its first few cycles to confirm normal operation. Listen for unusual sounds and check for any signs of leakage if it is a water inlet tube.

# 6. MAINTENANCE

The Whirlpool 214433 WP Tube-Inlet is designed for durability and typically requires minimal maintenance. However, regular dryer maintenance can help prolong the life of all components, including this part.

- **Regular Cleaning:** Periodically clean the lint filter before or after every load. This helps maintain proper airflow throughout the dryer, reducing strain on components.
- **Vent Inspection:** Inspect and clean the dryer vent system annually to prevent lint buildup, which can restrict airflow and cause overheating.
- **Visual Inspection:** During other dryer maintenance (e.g., cleaning the interior), visually inspect the tube-inlet for any signs of wear, cracks, or loose connections. Address any issues promptly.
- **Water Inlet Filter (if applicable):** If this tube is part of a water inlet system for a steam dryer, check and clean any associated filters as per your dryer's main instruction manual.

# 7. TROUBLESHOOTING

If you experience issues after installing the Whirlpool 214433 WP Tube-Inlet, consider the following common troubleshooting steps. Always disconnect power before inspecting internal components.

| Problem                                 | Possible Cause  | Solution  |
|---|---|---|
| Dryer not heating or drying effectively | Restricted airflow due to improper tube-inlet installation or blockage. | <ul style="list-style-type: none"><li>● Ensure the tube-inlet is correctly seated and not obstructed.</li><li>● Check for lint buildup in the tube or surrounding areas.</li><li>● Verify the dryer vent system is clear.</li></ul> |

| Problem  | Possible Cause   | Solution  |
|--|--|---|
| Water leakage (if applicable for steam dryers) | Loose connections or damaged tube-inlet.                         | <ul style="list-style-type: none"> <li>Ensure all hose connections to the tube-inlet are tight and sealed.</li> <li>Inspect the tube-inlet for any visible cracks or damage. Replace if necessary.</li> </ul> |
| Unusual noises after installation              | Part not securely fastened or interfering with other components. | <ul style="list-style-type: none"> <li>Recheck all mounting hardware for the tube-inlet.</li> <li>Ensure the tube-inlet is not touching any moving parts or vibrating against the dryer casing.</li> </ul>    |

If troubleshooting steps do not resolve the issue, it is recommended to contact a qualified appliance service technician.

## 8. SPECIFICATIONS

| Feature             | Detail   |
|---------------------|--|
| Part Number         | 214433   |
| Brand               | Whirlpool  |
| Manufacturer        | WHIRLPOOL  |
| Item Model Number   | 214433   |
| Item Weight         | 1 pound (approximately 16 ounces)  |
| Product Dimensions  | 1 x 1 x 1 inches (approximate)   |
| Color               | Black  |
| Included Components | Appliance Replacement Parts (specifically the tube-inlet)  |
| Compatibility       | Fits with various WHIRLPOOL brand models. Verify compatibility with your specific dryer model before purchase. |

## 9. WARRANTY AND SUPPORT

As an Original Equipment Manufacturer (OEM) authorized part, the Whirlpool 214433 WP Tube-Inlet is covered by Whirlpool's standard warranty policy for replacement parts. Warranty terms and conditions may vary. Please refer to the official Whirlpool website or contact Whirlpool customer service for detailed warranty information specific to your region and the part.

For technical assistance, installation questions, or to inquire about warranty claims, please contact Whirlpool Customer Service:

- Whirlpool Official Website:** [www.whirlpool.com](http://www.whirlpool.com)
- Customer Service:** Refer to the "Contact Us" section on the official website for phone numbers and support options.

Always provide the part number (214433) and your dryer's model number when seeking support.

© 2024 Whirlpool Corporation. All rights reserved. This manual is for informational purposes only.