

VEGA VHSH-16

VEGA Trendy Hair Straightener VHSH-16 User Manual

Model: VHSH-16

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and retain for future reference. Improper use can lead to electric shock, fire, or injury.

- **Water and Moisture:** Do not use this appliance near bathtubs, showers, basins, or other vessels containing water. Never immerse the appliance in water or any other liquid.
- **Children:** Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Power Supply:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Always unplug the appliance immediately after use and before cleaning.
- **Heat Surfaces:** The plates become extremely hot during use. Avoid direct contact with skin. Allow the appliance to cool completely before storing.
- **Cord Care:** Do not wrap the power cord around the appliance. Inspect the cord regularly for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- **Ventilation:** Do not block the air vents (if any) during operation.
- **Storage:** Store the appliance in a cool, dry place when not in use.

2. PRODUCT OVERVIEW

The VEGA Trendy Hair Straightener VHSH-16 is designed for efficient and safe hair styling. It features advanced ceramic technology and user-friendly controls.



Image 2.1: VEGA Trendy Hair Straightener VSH-16. This image shows the overall design of the straightener, highlighting its sleek pink body and control buttons.

Key Features:

- **Ceramic Coated Floating Plates:** Ensures even heat distribution and protects hair from direct heat damage, while floating plates prevent tugging and minimize breakage.
- **Adjustable Temperature Settings:** Offers 5 heat settings ranging from 150°C to 230°C to suit various hair types.
- **Quick Heat-up:** Reaches optimal temperature in less than 60 seconds.
- **60-Minute Auto Shut-off:** For enhanced safety, the appliance automatically turns off after 60 minutes of inactivity.
- **Easy Lock System:** Allows for convenient storage and portability by locking the plates together.
- **360° Swivel Cord:** Prevents tangling and offers flexibility during use.

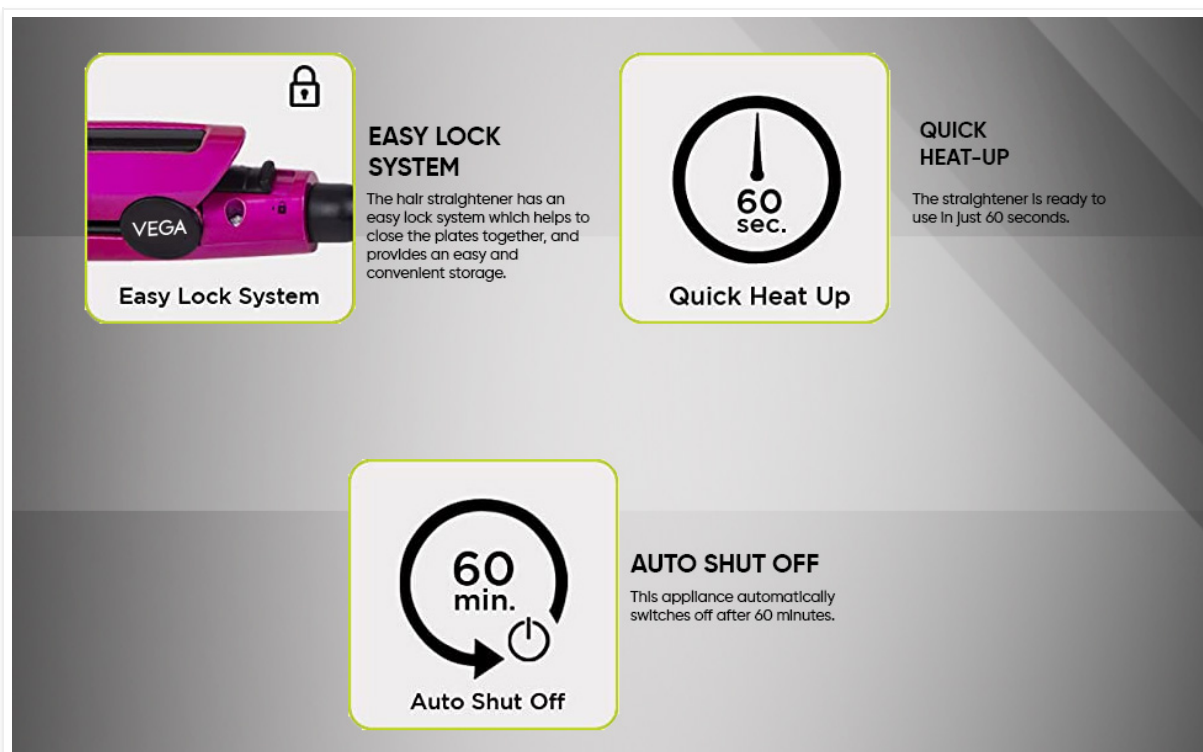


Image 2.2: Detailed view of key features including Ceramic Coated Plates, Floating Plates, Adjustable Temperature Setting, 360° Swivel Cord, Easy Lock System, Quick Heat Up, and Auto Shut Off.

3. SETUP

1. **Unpack:** Carefully remove the straightener from its packaging. Ensure all components, including the user manual and warranty card, are present.
2. **Inspect:** Check the appliance and power cord for any visible damage. Do not use if damaged.
3. **Placement:** Place the straightener on a heat-resistant, flat surface away from water.
4. **Connect:** Plug the power cord into a suitable electrical outlet.

4. OPERATING INSTRUCTIONS

Follow these steps for effective and safe hair straightening:

1. **Preparation:** Ensure your hair is clean, dry, and tangle-free. Apply a heat protectant spray if desired.
2. **Power On:** Press and hold the power button (usually marked with an ON/OFF symbol) until the LED indicator lights up.
3. **Select Temperature:** Use the temperature control buttons (+/-) to select your desired heat setting. Refer to the guide below for recommended temperatures:

Recommended Temperature Settings

Hair Type	Temperature
Fragile Hair	150°C
Fine Hair	170°C
Normal Hair	190°C
Thick Hair	210°C

Hair Type	Temperature
Coarse Hair	230°C

 


Image 4.1: Visual guide for selecting the appropriate heat setting based on hair type.

4. **Heat-up:** Allow the straightener to heat up. The LED indicator will typically stop blinking or change color when the desired temperature is reached (less than 60 seconds).
5. **Straightening:** Divide your hair into small sections. Place a section between the plates, close them gently, and glide the straightener slowly and smoothly from roots to ends. Repeat if necessary.
6. **Auto Shut-off:** The straightener will automatically turn off after 60 minutes of non-use. This is a safety feature and not an indication of malfunction.
7. **Power Off:** After use, press and hold the power button to turn off the appliance. Unplug it from the power outlet.
8. **Cool Down:** Allow the straightener to cool completely on a heat-resistant surface before storing.

 


Image 4.2: Example of the straightener being used to achieve sleek, straight hair.

5. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and performance of your straightener.

- **Cleaning:** Ensure the appliance is unplugged and completely cool before cleaning. Wipe the plates and exterior with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- **Storage:** Once cool, engage the easy lock system to keep the plates closed. Store the straightener in a dry place, away from moisture and direct sunlight. Do not wrap the cord tightly around the appliance.
- **Cord:** Regularly check the power cord for any signs of damage.



Image 5.1: Close-up of the easy lock system, which secures the plates for storage and travel.

6. TROUBLESHOOTING

If you encounter issues with your VEGA Trendy Hair Straightener, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Straightener does not turn on.	Not plugged in correctly, power outlet issue, or internal fault.	Ensure the plug is fully inserted. Test the outlet with another appliance. If still not working, contact customer support.
Straightener is not heating up.	Power issue, or appliance is in auto shut-off mode.	Check power connection. If it was on for a long time, it might have auto-shut off; turn it off and on again. Ensure temperature is set.

Problem	Possible Cause	Solution
Hair is getting snagged.	Hair not properly detangled, or plates are not clean.	Ensure hair is completely detangled before use. Clean the plates as per maintenance instructions.
Appliance turns off unexpectedly.	Auto shut-off feature activated.	This is a safety feature. Turn the appliance off and then on again to resume use.

If the problem persists after trying these solutions, please contact VEGA customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	VHSH-16
Brand	VEGA
Plate Material	Ceramic Coated
Max Temperature Setting	230°C
Min Temperature Setting	150°C
Heat-up Time	Less than 60 seconds
Auto Shut-off	60 minutes
Power Source	Corded Electric
Item Weight	471 Grams
Product Dimensions	4.5 x 10 x 33 cm
Included Components	1 Hair Straightener, user manual, warranty card

8. WARRANTY AND SUPPORT

Your VEGA Trendy Hair Straightener VHSH-16 comes with a **2-year warranty** from the date of purchase.

For any queries, concerns, or warranty claims, please contact VEGA customer care:

- **Email:** customercare@vega.co.in
- **Telephone:** +91 08069496949
- **Timings:** 10:00 AM to 5:30 PM (IST), Monday - Saturday (excluding holidays)
- **Manufacturer Address:** PLOT NO. 31, SECTOR-155, 3RD FLOOR, NOIDA-201310, U.P. (INDIA)

Please retain your purchase receipt as proof of purchase for warranty purposes.