

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [SVAKOM](#) /
- › [SVAKOM Elva Remote Control Vibrating Bullet User Manual](#)

**SVAKOM 05956080000**

# SVAKOM Elva Remote Control Vibrating Bullet User Manual

Model: 05956080000 | Brand: SVAKOM

## INTRODUCTION

The SVAKOM Elva is a sophisticated remote-controlled vibrating bullet designed for personal pleasure. It features a velvety Soft Touch surface, multiple vibration modes, and an intelligent SVAKOM mode. This manual provides detailed instructions for safe and effective use, maintenance, and troubleshooting.

SVAKOM



Image: SVAKOM Elva product packaging, showing the bullet and remote control.

## PACKAGE CONTENTS

Please ensure all items are present in the package:

- SVAKOM Elva Vibrating Bullet
- Wireless Remote Control
- USB Charging Cable
- Discreet Storage Bag
- Remote Control Battery (pre-installed or included)



Image: The SVAKOM Elva vibrating bullet and its accompanying wireless remote control.

## SETUP

---

### Charging the Elva Bullet

1. Locate the charging port on the Elva bullet. This is typically a small, discreet port.
2. Connect the provided USB charging cable to the bullet's charging port.
3. Connect the other end of the USB cable to a USB power source (e.g., computer, USB wall adapter).
4. The indicator light on the bullet will illuminate during charging and turn off or change color when fully charged.
5. A full charge typically takes 1-2 hours. Do not overcharge.

### Remote Control Battery Installation (if applicable)

The remote control may come with a pre-installed battery or require installation. If installation is needed, open the battery compartment on the back of the remote and insert the specified battery type (e.g., CR2032) with the correct polarity.



Image: Close-up view of the SVAKOM Elva bullet, highlighting its design and the pull string.

## OPERATING INSTRUCTIONS

---

### Powering On/Off

- **To Power On:** Press and hold the power button on the Elva bullet for 2-3 seconds until it vibrates briefly.
- **To Power Off:** Press and hold the power button on the Elva bullet for 2-3 seconds until it stops vibrating. The device will also automatically power off after 30 minutes of inactivity.

### Using the Remote Control

The remote control allows for convenient operation of the Elva bullet. Ensure the bullet is powered on before attempting to use the remote.



Image: The Svakom Elva wireless remote control, showing its buttons.

- **"S" Button (Smart Mode):** Press this button to activate Svakom's intelligent mode, which simulates increasing vibration frequencies.
- **Up Arrow Button:** Increases vibration intensity or cycles through modes.
- **Down Arrow Button:** Decreases vibration intensity or cycles through modes.
- **Power/Mode Button (on bullet):** Short press to cycle through the 5 silent vibration modes and 5 different intensities.

The remote control has a limited range. For optimal performance, keep the remote within close proximity to the Elva bullet.

## MAINTENANCE

---

### Cleaning

The Svakom Elva is waterproof, making cleaning easy. After each use:

- Wash the bullet thoroughly with warm water and a mild, toy-safe soap.
- Rinse completely to remove all soap residue.
- Pat dry with a lint-free cloth or allow to air dry completely before storage.
- Do not use harsh chemicals, alcohol-based cleaners, or abrasive materials, as these can damage the silicone and

PU coating.

## Storage

Store the Elva bullet and remote control in the provided discreet storage bag. Keep them in a cool, dry place away from direct sunlight and extreme temperatures. Avoid storing with other silicone products to prevent material degradation.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery; not powered on correctly.	Charge the device fully. Press and hold the power button for 2-3 seconds.
Vibrations are weak or inconsistent.	Low battery; incorrect mode/intensity setting.	Recharge the device. Cycle through modes/intensities using the remote or device button.
Remote control not working.	Remote battery low/dead; device not powered on; out of range.	Replace remote battery. Ensure device is on. Reduce distance between remote and device.
Device not charging.	Cable issue; power source issue; charging port damage.	Try a different USB cable or power source. Ensure charging port is clean and undamaged.

## SPECIFICATIONS

**Model Name:** Svakom Elva Remote-Controlled Vibrating Egg

**Item Model Number:** 05956080000

**Brand:** SVAKOM

**Material:** Silicone with PU coating

**Total Length:** Approximately 17.6 cm (including string)

**Bullet Length:** Approximately 8.1 cm

**Bullet Diameter:** Approximately 3.2 cm

**Product Dimensions:** 9.45 x 3.94 x 1.97 inches; 7.76 ounces

**Batteries:** 1 Lithium Polymer battery required (for bullet), additional battery for remote.

**Waterproof:** Yes

**Vibration Modes:** 5 silent modes, 5 intensities, plus Smart Mode.

## WARRANTY AND SUPPORT

SVAKOM products are manufactured to high-quality standards. For any issues not covered in this manual, or for warranty inquiries, please contact SVAKOM customer support through their official website or the retailer from whom you purchased the product. Keep your proof of purchase for warranty claims.

**Legal Disclaimer:** Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is intended for adult use only.

