

[Manuals.plus](#) /

> [Indesit](#) /

> Indesit Front-Load Washing Machine IWC71253ECOEU 7 kg Class A+++ 1200 rpm Spin, Free-standing User Manual

Indesit IWC71253ECOEU (F095305)

Indesit IWC71253ECOEU Front-Load Washing Machine User Manual

Model: IWC71253ECOEU (F095305) | Brand: Indesit

1. INTRODUCTION

Welcome to the user manual for your new Indesit IWC71253ECOEU Front-Load Washing Machine. This manual provides essential information for the safe and efficient operation, installation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before using the washing machine and keep it for future reference.

2. SAFETY INFORMATION

Your safety and the safety of others are paramount. This manual contains important safety messages. Always read and obey all safety messages.

- **Electrical Safety:** Ensure the washing machine is connected to a properly grounded electrical outlet. Do not use extension cords or adapters. Disconnect the appliance from the power supply before any cleaning or maintenance.
- **Water Connections:** Connect the water inlet hose to a cold water tap. Ensure all hose connections are tight to prevent leaks.
- **Children and Pets:** Keep children and pets away from the appliance during operation. The appliance is not intended for use by persons with reduced physical, sensory or mental capabilities unless supervised.
- **Installation:** The appliance must be installed by a qualified person in accordance with local regulations. Ensure the appliance is level and stable.
- **Flammable Materials:** Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.
- **Damage:** Do not operate the appliance if it is damaged or malfunctioning. Contact authorized service personnel.

3. PRODUCT OVERVIEW

The Indesit IWC71253ECOEU is a 7 kg capacity front-load washing machine designed for residential use. It features an A+++ energy efficiency rating and a maximum spin speed of 1200 revolutions per minute (RPM).



Figure 3.1: Front view of the Indesit IWC71253ECOUEM washing machine, showing the control panel, detergent dispenser, and drum door.



INDESIT

IWC 71253 ECO EU



A+++

ENERGIA · ЕНЕРГИЯ · ΕΝΕΡΓΕΙΑ
ENERGIJA · ENERGY · ENERGIE
ENERGI

174
kWh/annum



8850
L/annum



7
kg



A**B**CDEFG



57 dB



80 dB

2010/1061

Figure 3.2: Energy label for the Indesit IWC71253ECOEU, indicating A+++ energy efficiency, 174 kWh annual energy consumption, 8850 L annual water consumption, 57 dB wash noise, and 80 dB spin noise.

4. SETUP AND INSTALLATION

This Indesit washing machine is designed for free-standing installation. While it does not require complex built-in installation, proper setup is crucial for optimal performance and safety.

4.1 Unpacking

- Carefully remove all packaging materials.
- **Important:** Remove all transit bolts from the rear of the machine. These bolts secure the drum during transport and must be removed before operation to prevent damage. Refer to the diagram usually found on the back of the machine or in a quick start guide for their exact location.
- Keep packaging materials out of reach of children.

4.2 Positioning

- Place the washing machine on a firm, level floor.
- Ensure there is adequate space around the appliance for ventilation and access.
- Adjust the leveling feet at the bottom of the machine to ensure it is perfectly stable and does not wobble. This is critical to reduce noise and vibration during operation.

4.3 Water and Drain Connections

- Connect the supplied fill hose to the cold water tap and the corresponding inlet on the back of the washing machine. Tighten connections securely by hand.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.

4.4 Electrical Connection

- Plug the power cable into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of your appliance.

5. OPERATING INSTRUCTIONS

Your Indesit washing machine features a user-friendly control panel with a touch interface for easy program selection and customization.

5.1 Before Each Wash

- Sort laundry by fabric type, color, and degree of soiling.
- Check garment care labels for washing instructions.
- Empty pockets and close zippers and fasteners to prevent damage to clothes and the machine.

5.2 Loading Laundry

- Open the drum door and load laundry loosely into the drum, ensuring not to exceed the 7 kg capacity.
- Close the drum door firmly until it clicks.

5.3 Adding Detergent and Additives

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment.
- Add fabric softener or other additives to their respective compartments, if desired.
- Push the detergent drawer back in completely.

5.4 Selecting a Program

- Turn the program selector knob or use the touch interface to choose the desired washing program (e.g., Cotton, Synthetics, Delicates, Eco).
- Adjust temperature and spin speed settings using the touch controls, if available for the selected program. The maximum spin speed is approximately 1200 RPM.

5.5 Starting and Stopping a Wash

- Press the 'Start/Pause' button to begin the wash cycle.
- To pause a cycle, press the 'Start/Pause' button again. To resume, press it once more.
- To cancel a program, turn the program selector to 'Off' or press and hold the 'Start/Pause' button for a few seconds.

5.6 After the Wash Cycle

- Once the program finishes, the machine will signal completion.
- Open the drum door and remove the laundry promptly to prevent creasing and odors.
- Leave the drum door slightly ajar to allow the interior to dry and prevent mildew.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and efficiency of your washing machine.

6.1 Cleaning the Detergent Dispenser

- Remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue.
- Clean the housing of the dispenser with a brush.

6.2 Cleaning the Filter

- Locate the filter cover at the bottom front of the machine.
- Place a shallow container underneath to catch any residual water.
- Carefully open the filter cover and unscrew the filter.
- Remove any lint, coins, or foreign objects. Rinse the filter under running water.
- Screw the filter back in tightly and close the cover.

6.3 Drum Cleaning

- Periodically run a hot wash cycle with no laundry and a washing machine cleaner or a cup of white vinegar to remove detergent buildup and odors.

6.4 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting service, please check the following common issues:

Problem	Possible Cause	Solution
Machine does not start	No power; door not closed; program not selected.	Check power plug; ensure door is latched; select a program and press start.
Excessive vibration/noise	Transit bolts not removed; machine not level; unbalanced load.	Remove transit bolts; adjust leveling feet; redistribute laundry in drum.
Water not draining	Drain hose kinked/blocked; filter clogged.	Check drain hose for kinks; clean the filter.
Detergent residue in dispenser	Insufficient water pressure; clogged dispenser.	Check water supply; clean detergent dispenser.

8. SPECIFICATIONS

Feature	Value
Brand	Indesit
Model Number	IWC71253ECOEU (F095305)
Load Type	Front-Load
Capacity	7 kg
Energy Efficiency Class	A+++
Spin Efficiency Class	B
Maximum Spin Speed	1200 RPM (1151 RPM stated)
Noise Level (Wash)	57 dB
Noise Level (Spin)	80 dB
Annual Energy Consumption	174 kWh
Annual Water Consumption	8850 L
Color	White
Installation Method	Free-standing
Dimensions (Depth x Width x Height)	51.7 cm x 59.5 cm x 85.0 cm

Feature	Value
Item Weight	63.5 kg
Control Type	Touch
Special Features	Touch screen interface
Included Components	Power cable, Fill hose, Drain hose

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your appliance or visit the official Indesit website. You will typically need your proof of purchase and the model number (IWC71253ECOEU or F095305) and serial number of your washing machine when contacting support. Indesit provides comprehensive support for its products, including technical assistance and spare parts availability.

© 2024 Indesit. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01LLH69VY>

More documents and user manuals: <https://manuals.plus/>