

Teka TZ6415

Teka TZ6415 Ceramic Hob User Manual

Model: TZ6415 | Brand: Teka

[Information](#) [Setup](#) [Operation](#) [Introduction](#) [Safety](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Teka TZ6415 Integrated Ceramic Hob. Please read this manual thoroughly before installation and use, and keep it for future reference. The Teka TZ PRO 6415 ceramic hob features 4 cooking zones, Touch Control, a front bevel, and a Fast-Click system, utilizing Schott GLASS for durability and performance.

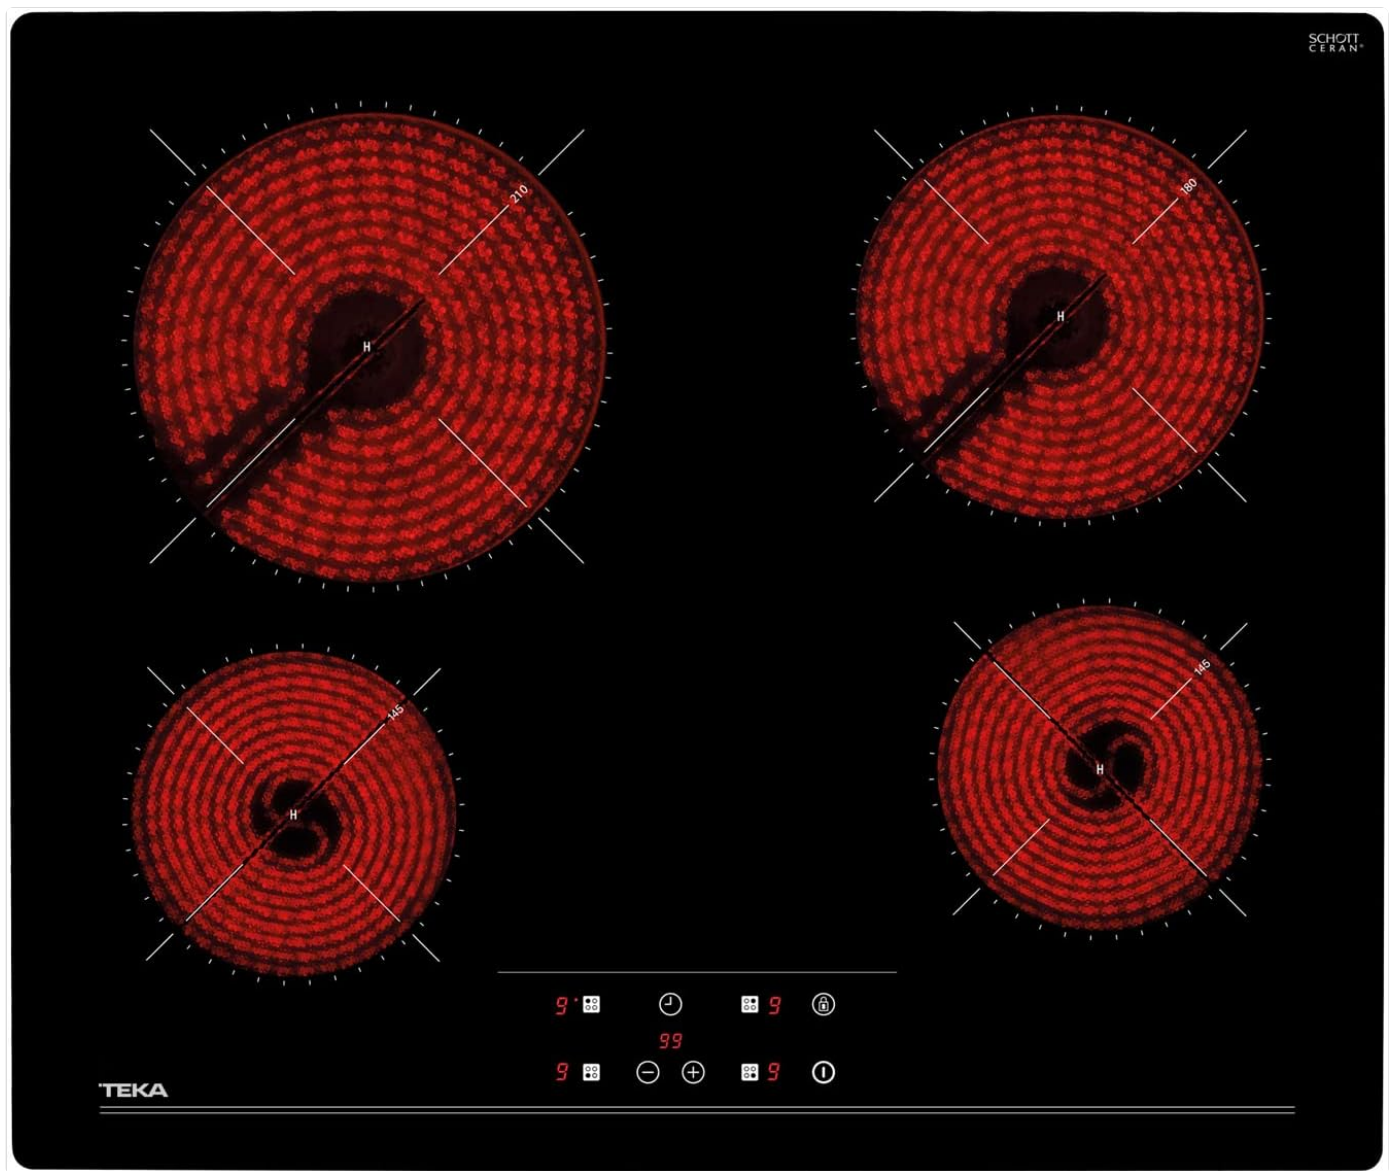 


Figure 1: Top view of the Teka TZ6415 Ceramic Hob with active heating elements.

2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

2.1 General Safety

- Ensure the appliance is installed by a qualified technician in accordance with local regulations.
- Do not operate the hob if the glass surface is cracked or broken. Disconnect from power immediately.
- Keep children away from the appliance during operation and when it is cooling down. The surface remains hot after use.
- Do not store flammable materials on or near the hob.
- Use only flat-bottomed cookware suitable for ceramic hobs.

2.2 Electrical Safety

- Verify that the voltage and frequency of your electrical supply match the specifications on the appliance rating plate.
- The appliance must be properly earthed.
- Do not use extension cords or multiple socket adapters.

2.3 Hot Surface Indicator

The hob is equipped with a hot surface indicator. This indicator will remain lit as long as the cooking zone is hot enough to cause burns, even after the hob has been turned off. Exercise caution.

3. SETUP AND INSTALLATION

This section provides guidelines for the proper installation of your Teka TZ6415 ceramic hob. Installation should only be performed by a qualified professional.

3.1 Unpacking

- Carefully remove the hob from its packaging.
- Inspect the appliance for any signs of damage. Do not install if damaged.
- Ensure all components listed in the packing list are present. The unit includes the hob unit only.

3.2 Installation Requirements

- The hob is designed for built-in installation.
- Ensure adequate ventilation around the appliance.
- The countertop material must be heat-resistant.

3.3 Dimensions and Cut-out

The overall dimensions of the hob are 60 cm (width) x 51 cm (depth) x 6.3 cm (height). Refer to the diagram below for precise cut-out dimensions for your countertop.

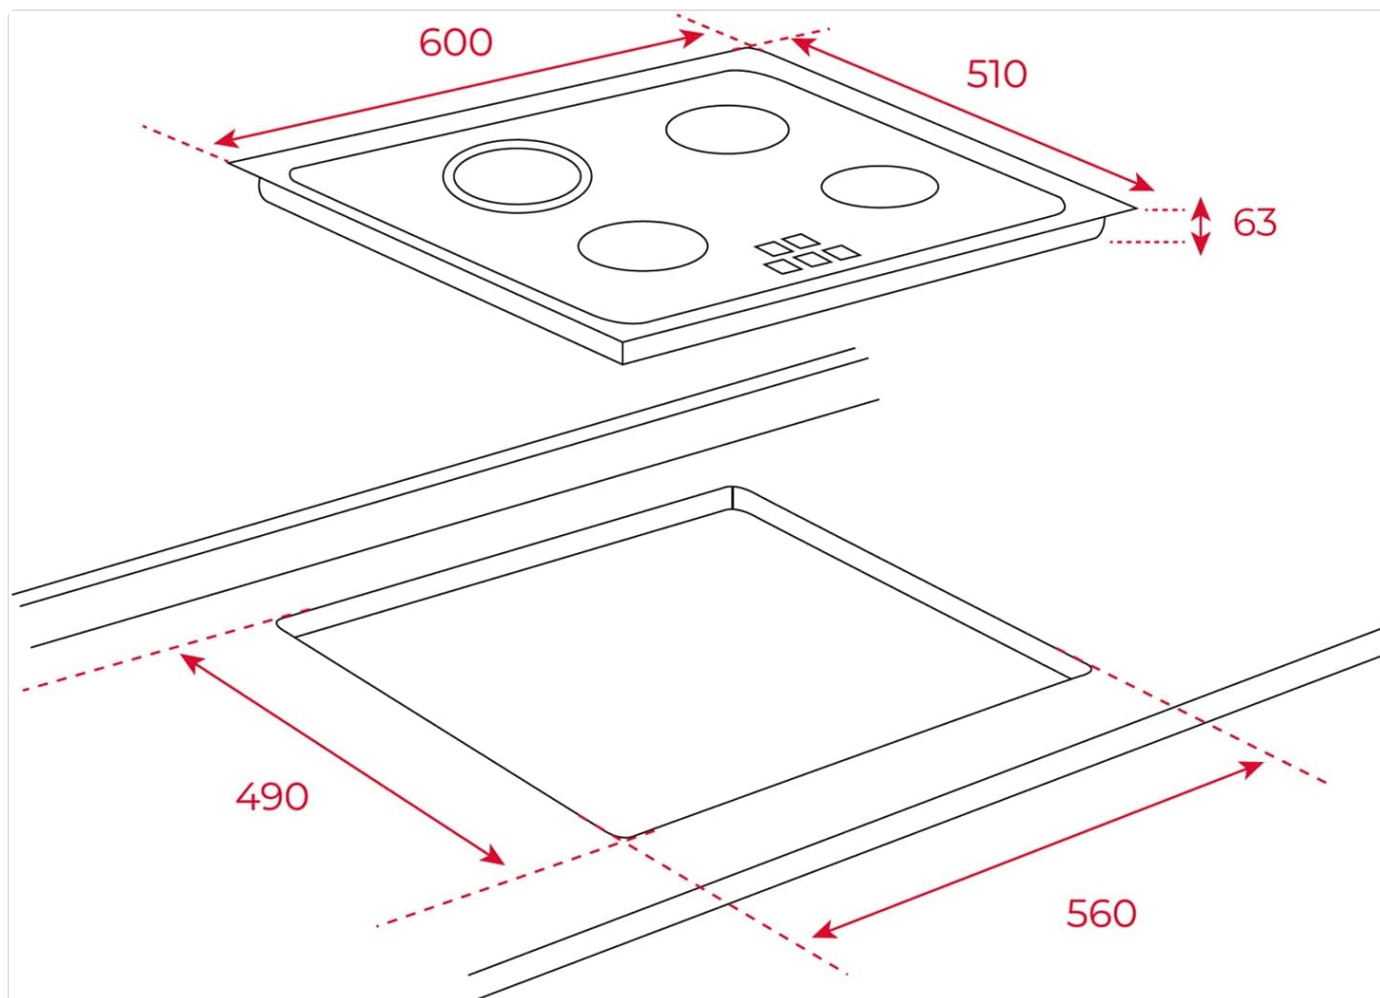


Figure 2: Hob dimensions and recommended countertop cut-out (560mm x 490mm).

3.4 Electrical Connection


Connect the hob to a dedicated electrical circuit. The appliance operates at 230 Volts and has a maximum power consumption of 6300 Watts. Ensure the electrical connection is made by a licensed electrician.


4. OPERATING INSTRUCTIONS

Your Teka TZ6415 ceramic hob features intuitive touch controls for easy operation.

4.1 Control Panel Overview

The hob is controlled via a touch-sensitive panel located at the front. Each cooking zone has its own controls for power adjustment and timer settings.



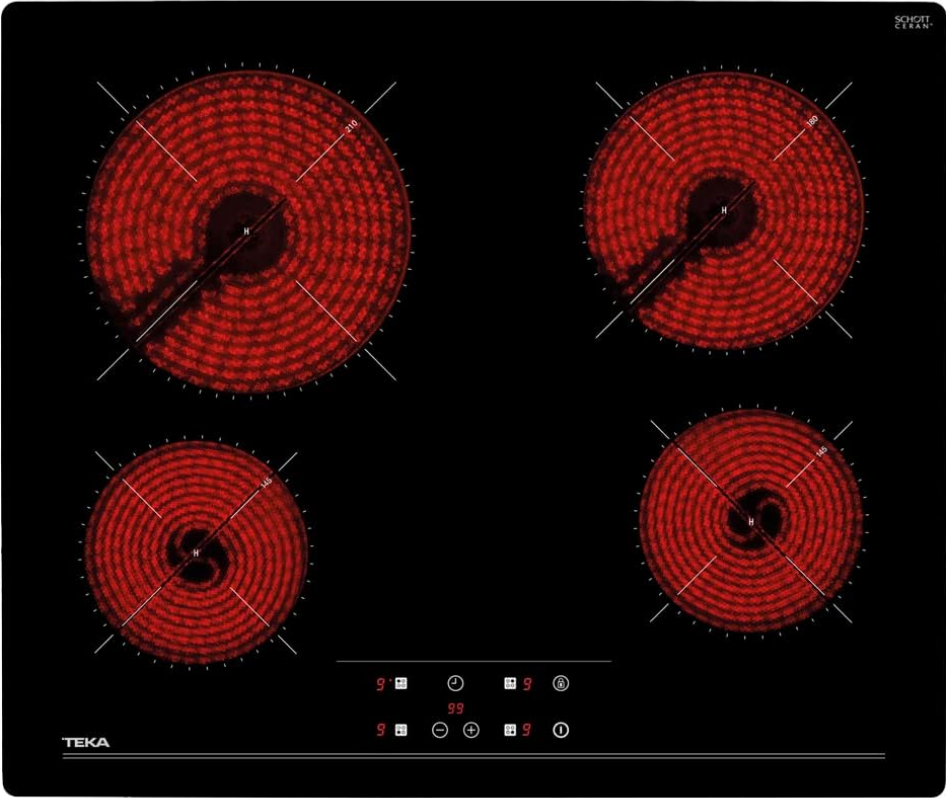

| Touch control | Funciones | Potencia |
|-----------------------------------|--|--------------------------|
| Programador del tiempo de cocción | Cronómetro con avisador acústico, golpe de cocción | Potencia máxima: 6.300 W |

Figure 3: Overview of the touch control panel.

4.2 Turning On/Off a Cooking Zone

1. To turn on a cooking zone, press the corresponding power button.
2. Adjust the heat level using the '+' and '-' touch controls. Levels typically range from 1 to 9.
3. To turn off a cooking zone, press the power button again or reduce the heat level to '0'.

4.3 Using the Timer Function

The hob includes a timer function for precise cooking. To set a timer for a specific zone:

- Select the desired cooking zone.
- Press the timer button.
- Use the '+' and '-' controls to set the desired cooking duration.
- The zone will automatically turn off once the timer expires, accompanied by an audible alert.

 
4.4 Safety Lock Function

To prevent accidental operation, especially by children, the hob features a safety lock. To activate/deactivate:

- Press and hold the lock button for a few seconds until the indicator lights up/goes off.
- When activated, the control panel will be unresponsive.

4.5 Booster Function (Fast-Click System)

Certain cooking zones may feature a Booster function (Fast-Click system) for rapid heating. Activate this function by pressing the designated booster button for the selected zone. This provides maximum power for a short period, ideal for boiling water quickly.

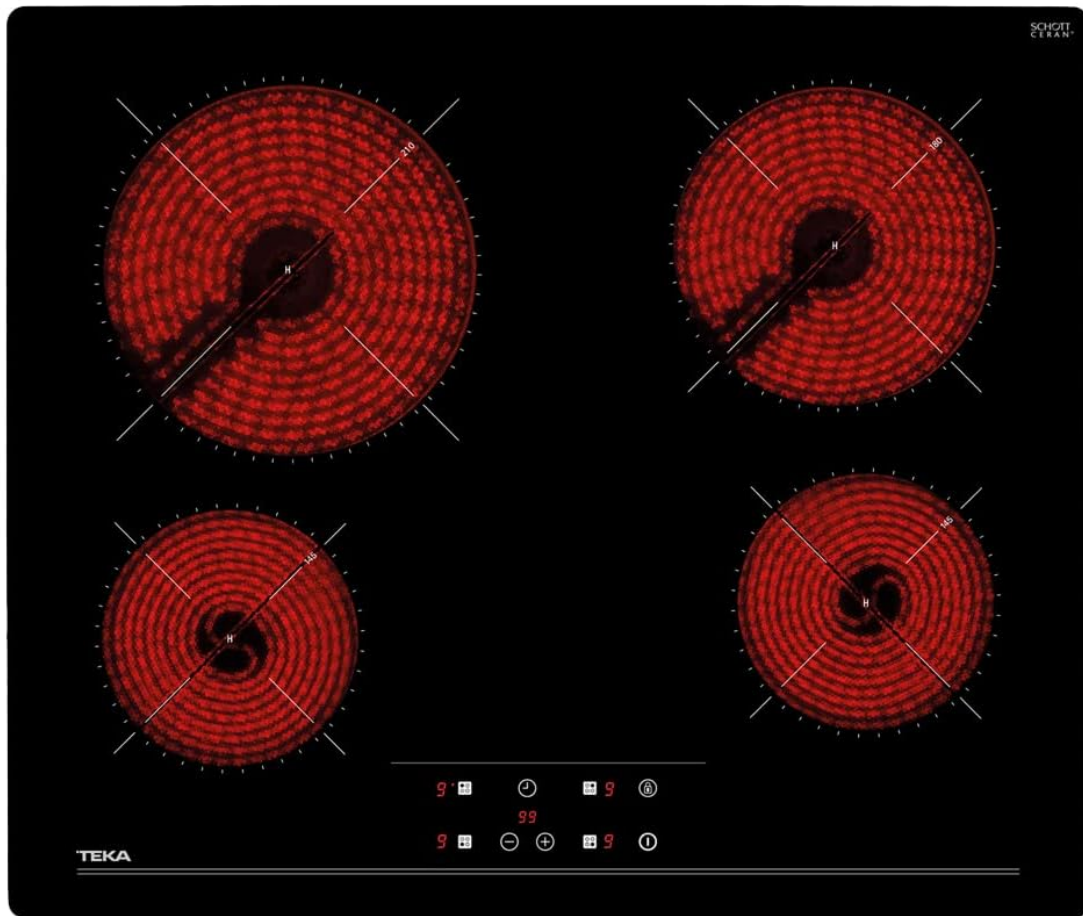

Función **Booster**

Función Power Plus

Seguridad por
Termopar integrada

Easy Installation

Figure 4: The hob features a Booster function for accelerated heating.

5. MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your ceramic hob.

5.1 Daily Cleaning

- Always ensure the hob is cool before cleaning.
- Wipe the ceramic surface with a soft cloth and warm soapy water.
- For stubborn stains, use a specialized ceramic hob cleaner.
- Rinse thoroughly and dry with a clean cloth to prevent water marks.

5.2 Removing Burnt-on Food

For burnt-on food residues, use a hob scraper designed for ceramic surfaces. Hold the scraper at a shallow angle and gently push to remove the residue. Avoid using abrasive cleaners or scouring pads, as these can scratch the glass surface.

5.3 General Care

- Avoid dropping heavy objects on the hob surface.
- Do not drag rough-bottomed cookware across the surface.
- Periodically check the electrical cable for any signs of damage.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Teka TZ6415 ceramic hob. If the problem persists after following these steps, contact qualified service personnel.

| Problem | Possible Cause | Solution |
|-----------------------------|--|---|
| Hob does not turn on. | No power supply; Safety lock activated. | Check circuit breaker; Deactivate safety lock (refer to Section 4.4). |
| Cooking zone not heating. | Incorrect power level selected; Cookware not suitable. | Increase power level; Ensure cookware has a flat bottom and is suitable for ceramic hobs. |
| Control panel unresponsive. | Safety lock activated; Moisture on control panel. | Deactivate safety lock; Wipe the control panel dry. |
| "H" indicator remains lit. | Residual heat in the cooking zone. | This is normal. The "H" indicates a hot surface. Wait for the zone to cool down. |

7. TECHNICAL SPECIFICATIONS


Detailed technical specifications for the Teka TZ6415 Ceramic Hob.

| Feature | Specification |
|-------------------------|------------------------|
| Model | TZ6415 |
| Brand | Teka |
| Type | Integrated Ceramic Hob |
| Number of Cooking Zones | 4 electric zones |
| Control Type | Touch Control |
| Installation Type | Built-in / Slide-In |
| Dimensions (L x W x H) | 60 x 51 x 6.3 cm |
| Net Weight | 8.5 kg |

| Feature | Specification |
|------------------------------------|--|
| Sound Level | 44 dB |
| Voltage | 230 Volts |
| Power | 6300 Watts |
| Frequency | 50/60 Hz |
| Material | Vitrocera mi c (Schott GLASS) |
| Color | Black |
| Special Features | Timer, Safety Lock, Hot Surface Indicator, Fast-Click System (Booster) |
| Components Included | Hob unit only |
| Battery (for internal clock/timer) | 1 AA (included) |
| Country of Origin | China |

TEKA**EASY TZ PRO 6415**

 Vitrocerámica de 60 cm con 4 zonas con Touch Control

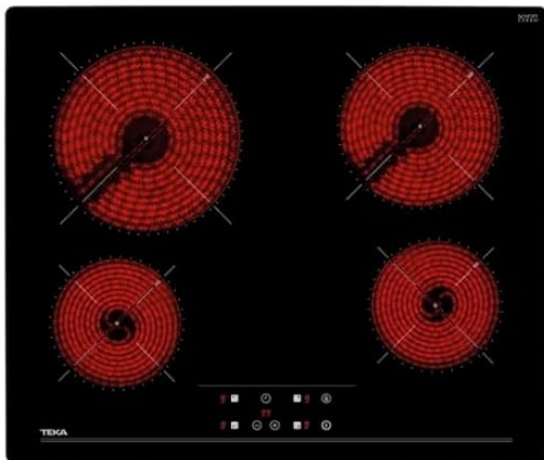


Seguridad
por
Termopar
integrada



Easy
installation



 Función
Power Plus

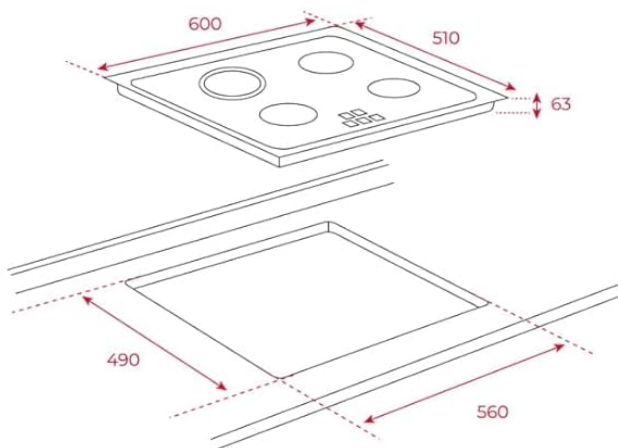**REFERENCIA**

REF: 40239040

EAN: 8421152148266

CARACTERÍSTICAS

Touch control. Programador del tiempo de cocción
4 zonas (Ø145 mm + Ø145 mm + Ø180 mm + Ø210 mm)
Función golpe de cocción
Función cronómetro con avisador acústico
Sistema fácil instalación Fast-Click
Potencia nominal máxima: 6.300 W

DIMENSIONES

Altura del producto (mm): 51
Anchura del producto (mm): 600
Profundidad del producto (mm): 510
Longitud del producto (mm):
Peso neto (kg): 8,5

ESPECIFICACIONES TÉCNICAS

Tasa de potencia (V): 220-240
Frecuencia (Hz): 50/60
Potencia nominal máxima (W): -

COLORES

40239040

Cristal negro

Figure 5: Technical specifications and features of the Teka TZ6415.





8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Teka website. Keep your proof of purchase for warranty claims.

For technical assistance, spare parts, or service requests, please contact Teka customer service or an authorized service center in your region. Contact details can typically be found on the manufacturer's website or in the product documentation.

Online Resources: For additional information, FAQs, and product registration, visit the official [Teka website](#).

Related Documents - TZ6415

| | |
|--|---|
|  <p>User Manual TBC 64120 TCS BK EN ES PT</p> | <p>Teka TBC 64120 TCS BK Ceramic Hob User Manual and Installation Guide</p> <p>Comprehensive user manual and installation guide for the Teka TBC 64120 TCS BK ceramic hot plate, covering setup, operation, safety, maintenance, and troubleshooting.</p> |
|  <p>User Manual ES FR SK PT TR RO EN PL IT DE CS NL</p> | <p>Teka Ceramic Hob User Manual</p> <p>Comprehensive user manual for Teka ceramic hobs with touch control, covering installation, usage, maintenance, and special functions.</p> |
|  <p>User Manual ES FR SK PT TR RO EN PL IT DE CS NL</p> | <p>Teka Vitroceramic Touch Control Hot Plates User Manual</p> <p>Comprehensive user manual for Teka vitroceramic hot plates with touch control, covering installation, usage, maintenance, and safety guidelines.</p> |
|  <p>User Manual MS 620 BIS ML 820 BIS ML 8200 BIS PL RU RO TR</p> | <p>Instrukcja Obsługi Teka MS 620 BIS, ML 820 BIS, ML 8200 BIS - Kuchenka Mikrofalowa</p> <p>Kompletna instrukcja obsługi dla kuchenek mikrofalowych Teka MS 620 BIS, ML 820 BIS i ML 8200 BIS. Zawiera informacje o bezpieczeństwie, funkcjach, obsłudze, konserwacji i rozwiązywaniu problemów.</p> |



User Manual
DBB / CMB1 / DCB / DB8 / DBH / MDB
ES CA DE GB FR IT NL GR TR PL RU UA SR CZ RO BG AR
www.teka.com

[Manual de Usuario Teka DBB / CMB1 / DCB / DB8 / DBH / MDB](#)

Manual de usuario completo para campanas extractoras Teka (modelos DBB, CMB1, DCB, DB8, DBH, MDB). Incluye guías detalladas de instalación, uso, mantenimiento, limpieza, solución de problemas y especificaciones técnicas. Diseñado para un uso seguro y eficiente en cocinas domésticas.



User Manual
MWE FS20 G WH
ES PT DA DE SE
www.teka.com

[Manual de Usuario Teka MWE FS20 G WH: Guía Completa y Seguridad](#)

Descubra cómo usar su horno microondas Teka MWE FS20 G WH con este manual de usuario detallado. Incluye instrucciones de seguridad, operación y mantenimiento.