

[Manuals.plus](#) /

> [Bosch](#) /

> Bosch TDS6030 Ceramic Steam Iron 2400 Watt User Manual

Bosch TDS6030

Bosch TDS6030 Ceramic Steam Iron 2400 Watt User Manual

1. INTRODUCTION

Thank you for choosing the Bosch TDS6030 Ceramic Steam Iron. This powerful 2400 Watt steam generator iron is designed to provide efficient and effortless ironing for all your garments. Featuring a CeraniumGlissée Pro soleplate, i-Temp technology, and the Calc'nClean Perfect system, this appliance ensures optimal results and easy maintenance. Please read this manual carefully before first use to ensure safe operation and to get the most out of your appliance.



Image 1.1: The Bosch TDS6030 steam iron and its accompanying steam station, ready for use on an ironing board with a pile of

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage to the appliance:

- Read all instructions before using the appliance.
- Do not leave the iron unattended while it is switched on or connected to the mains.
- Keep the appliance out of reach of children.
- Only use the iron for its intended purpose.
- Ensure the voltage indicated on the appliance matches your local mains voltage.
- The iron features an **Automatic Shut-off 'Safe'** function, which turns off the appliance if left unattended for a period, enhancing safety.
- The **Safe Lock System** secures the iron to the steam station, providing stability and safety during transport and storage.



Image 2.1: A hand pressing the purple lock button on the steam station, demonstrating the safe lock system for securing the iron.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Bosch TDS6030 steam iron:

- **Iron Unit:** Equipped with the CeraniumGlissée Pro soleplate for smooth gliding and scratch resistance.
- **Steam Station:** Houses the water tank and steam generator.
- **Water Tank:** Large, permanently refillable 1.5-liter capacity.
- **Control Panel:** Includes power button, steam settings, and indicator lights (e.g., Eco mode, water tank empty, steam ready).
- **Safe Lock System:** Mechanism to secure the iron to the base.



Image 3.1: A close-up view of the CeraniumGlissée Pro soleplate of the Bosch TDS6030 iron, highlighting its steam vents and smooth surface.

4. SETUP

Before using your steam iron for the first time, follow these steps:

1. **Unpack:** Remove all packaging materials and ensure all parts are present and undamaged.
2. **Position:** Place the steam station on a stable, heat-resistant surface.
3. **Fill Water Tank:** Open the water tank cap and fill the 1.5-liter tank with tap water up to the 'Max' mark. Distilled water is recommended in areas with very hard water.
4. **Connect Power:** Plug the power cord into a suitable mains socket.



Image 4.1: Water being poured into the water tank of the Bosch TDS6030 steam station, with the 'Max' fill line visible.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Heating Up

Press the power button. The iron will begin to heat up, which takes approximately 2 minutes. The 'steam ready' indicator light will illuminate when the iron is ready for use.

5.2 i-Temp Technology

The Bosch TDS6030 features **i-Temp technology**, which automatically sets the ideal temperature and steam output for all ironable fabrics. This eliminates the need for manual temperature adjustments, making ironing safe and easy.

5.3 Steam Ironing

- **Continuous Steam:** Press and hold the steam trigger for a continuous steam output of 120 grams/minute.
- **Steam Boost (Ultimate 370):** For stubborn creases, press the steam boost button for three intensive steam bursts, delivering up to 370 grams of steam. This powerful deep steam penetrates fabrics effectively.

5.4 Vertical Steaming

The iron can be used for vertical steaming to refresh hanging garments or drapes. Hold the iron vertically a few centimeters away from the fabric and press the steam trigger.

5.5 Eco Mode

Activate the Eco mode to save energy by up to 20% and water by up to 30% while still achieving excellent ironing results. The Eco indicator light will show when this mode is active.



Image 5.1 : A detailed view of the control panel showing the illuminated 'Eco' indicator and the 'water tank empty' indicator.

6. MAINTENANCE AND CLEANING

6.1 Calc'nClean Perfect System

The Bosch TDS6030 is equipped with the **Calc'nClean Perfect system**, a highly efficient cleaning system designed to prevent limescale buildup and maintain optimal steam performance. The appliance will provide a cleaning reminder when descaling is necessary. Follow the instructions in the full manual for the specific descaling procedure.

6.2 General Cleaning

- Always unplug the iron and allow it to cool completely before cleaning.
- Wipe the soleplate with a damp cloth to remove any residue. Do not use abrasive cleaners.
- Clean the exterior of the steam station and iron with a soft, damp cloth.
- Empty the water tank after each use.

7. TROUBLESHOOTING

If you encounter issues with your Bosch TDS6030, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No steam output	Water tank empty; iron not heated; Calc'nClean needed.	Refill water tank; wait for 'steam ready' light; perform Calc'nClean.
Water dripping from soleplate	Iron not hot enough; steam setting too high for temperature.	Wait for iron to reach full temperature; ensure i-Temp is active.
Iron not heating	Not plugged in; power switch off; automatic shut-off activated.	Check power connection; turn on power; reset by moving the iron.

For other issues or if troubleshooting steps do not resolve the problem, please contact Bosch customer support.

8. SPECIFICATIONS

Feature	Detail
Brand Name	Bosch
Model Number	TDS6030
Wattage	2400 Watt
Steam Pressure	5.7 bar
Continuous Steam	120 grams/minute
Steam Boost (Ultimate 370)	Up to 370 grams
Water Tank Capacity	1.5 Liters
Soleplate Material	CeraniumGlissée Pro
Heat-up Time	Approx. 2 minutes
Special Features	Automatic Shut-off, Safe Lock System, i-Temp, Calc'nClean Perfect, Eco Mode
Color	Purple/White
Item Weight	4.8 kg
Voltage	240 Volt
Frequency	50 Hz
Year of Manufacture	2017

9. WARRANTY AND SUPPORT

For warranty information, service, or technical support, please refer to the warranty card included with your product or visit the official Bosch website. You can also contact Bosch customer service directly for assistance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01LONAA56>

More documents and user manuals: **<https://manuals.plus/>**