

ECONTROLLY XRT132

ECONTROLLY XRT132 Remote Control User Manual

For VIZIO TV Models: P50-C1, P55-C1, P65-C1, P75-C1

INTRODUCTION

This manual provides instructions for the ECONTROLLY XRT132 Remote Control, designed as a replacement for specific VIZIO TV models. This remote control offers direct functionality without the need for programming, ensuring a straightforward user experience. Simply insert batteries to begin operation.

Key Features:

- Direct replacement for VIZIO XRT132 remote.
- Compatible with VIZIO TV models P50-C1, P55-C1, P65-C1, P75-C1.
- No programming required; ready to use after battery installation.
- Infrared (IR) remote technology.

SETUP

Setting up your ECONTROLLY XRT132 remote control is a simple process that primarily involves installing the batteries.

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating where to insert AAA batteries.

2. Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Point the remote directly at your VIZIO TV and press the desired function button.

OPERATING INSTRUCTIONS

The ECONTROLLY XRT132 remote control features standard buttons for navigating your VIZIO TV. Below is a general guide to the common functions.





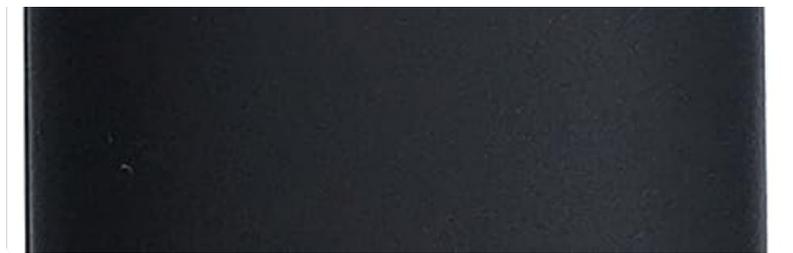


Image: Front view of the XRT132 remote control, displaying the layout of all functional buttons.

Remote Control Button Functions

Button	Function
Power ()	Turns the TV on or off.
Input ()	Cycles through available input sources (HDMI, AV, etc.).
Menu (≡)	Accesses the TV's main menu for settings and options.
Volume Up/Down (VOL +/-)	Adjusts the TV's audio volume.
Channel Up/Down (CH +/-)	Changes the TV channel.
Mute ()	Mutes or unmutes the TV's audio.
Play/Pause ()	Controls media playback (play, pause).
PIC	Accesses picture settings or modes.
Navigation Pad (Up, Down, Left, Right, OK)	Used to navigate menus and confirm selections.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA alkaline batteries.

- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Make sure you are within the effective range of the TV's IR receiver.
- **Buttons Not Working:**
 - If only specific buttons are not working, try cleaning the remote as described in the Maintenance section.
 - Ensure the remote is pointed directly at the TV.
- **Interference:**
 - Bright lights, especially fluorescent or LED lighting, can sometimes interfere with IR signals. Try operating the remote in different lighting conditions.

SPECIFICATIONS

Feature	Detail
Model Number	XRT132
Compatible Devices	VIZIO TVs (P50-C1, P55-C1, P65-C1, P75-C1)
Power Source	2 x AAA Alkaline Batteries
Connectivity Technology	Infrared (IR)
Product Dimensions	7 x 2 x 0.65 inches (approximate)
Item Weight	0.639 ounces (without batteries)
Color	Black

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the seller directly. ECONTROLLY aims to provide reliable replacement remote controls.

If you require further assistance or have questions not covered in this manual, please reach out to the product's manufacturer or your point of purchase for support.