

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Chicco](#) /

> [Chicco Walky Talky Foldable Baby Walker Instruction Manual](#)

Chicco Walky Talky

Chicco Walky Talky Foldable Baby Walker Instruction Manual

Model: Walky Talky (00079540680070)

Brand: Chicco

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your Chicco Walky Talky Foldable Baby Walker. Please read all instructions carefully before use and retain this manual for future reference. The Chicco Walky Talky is designed to provide a stimulating and mobile environment for your child, featuring a multilingual play tray, adjustable height, and compact folding for convenience.

SAFETY INFORMATION

- **Maximum Weight:** This walker is suitable for children up to 26 lbs (approximately 11.8 kg). Do not exceed this weight limit.
- **Age Recommendation:** Use only when a child can sit unaided and until they can walk by themselves or weigh more than 26 lbs.
- **Supervision:** Never leave the child unattended in the walker. Always keep the child in view.
- **Hazard Prevention:** Prevent access to stairs, steps, and uneven surfaces. Remove all hot liquids, electrical cables, and other potential hazards from the child's reach.
- **Brake Pads:** The walker is equipped with brake pads designed to help stop the walker if it encounters a step or uneven surface. Ensure these are clean and functional before each use.
- **Assembly:** Ensure the walker is fully assembled and all locking mechanisms are securely engaged before placing a child in it.

PRODUCT FEATURES

- **Multilingual Play Tray:** Features music, lights, and phrases in English, Spanish, French, Italian, German, and Portuguese.
- **Removable Play Tray:** The activity tray can be detached for floor play or to create a plain tray surface for snacks.
- **3 Height Adjustments:** The walker's height can be adjusted to accommodate your child's growth.
- **Compact Fold:** Designed to fold flat for convenient storage and portability.

- **Comfort Seat:** Padded, removable, and washable seat for child comfort.
- **Brake Pads:** Integrated brake pads enhance safety by engaging on uneven surfaces.

SETUP

Unfolding the Walker

To unfold the walker, ensure it is placed on a flat, stable surface. Gently pull the top frame upwards until the support legs click into place, forming the full walker structure. Verify all locking mechanisms are secure.

Adjusting Height

The walker offers three height positions. To adjust, locate the orange lever mechanism on the underside of the walker. Push the lever in and simultaneously raise or lower the walker frame to the desired height. Release the lever to lock it into position. Ensure both sides are adjusted evenly and securely locked.

Attaching the Play Tray

Align the play tray with the designated slots on the walker's main tray. Press down firmly until it clicks securely into place. To remove, locate the release tabs (usually on the underside or sides of the play tray) and lift the tray upwards.

OPERATING INSTRUCTIONS

Using the Multilingual Play Tray

The play tray features interactive elements with sound and light. Locate the power switch on the play tray to turn it ON. There are typically two modes: 'Talk' and 'Music'.

- **Talk Mode:** In this mode, pressing the animal figures (e.g., hippos, lion) or other interactive buttons will activate phrases, letters, or numbers in one of six languages. Use the language selector dial (often near the lion figure) to switch between English, Spanish, French, Italian, German, and Portuguese.
- **Music Mode:** Switching to music mode will activate various melodies and sound effects when interactive elements are pressed.

Ensure batteries are correctly installed for the play tray to function. Refer to the battery compartment for specific battery type and installation instructions.

MAINTENANCE

Cleaning the Seat Cover

The padded seat cover is removable and machine washable. To remove, turn the walker upside down. Locate the clips or loops securing the fabric to the frame. Unfasten these clips/loops and gently pull the seat cover off the frame. Wash according to the care label instructions (typically hand wash only). Allow to air dry completely before reattaching. To reattach, slide the cover back onto the frame and secure all clips/loops, ensuring it is taut and properly positioned.

General Cleaning

Wipe down all plastic surfaces with a damp cloth and mild soap. Avoid abrasive cleaners. Regularly check wheels for debris and clean as needed to ensure smooth movement. Ensure all parts are dry before storage or next use.

TROUBLESHOOTING

- **Play Tray Not Working:** Check if the power switch is ON. Ensure batteries are correctly installed and not depleted. Replace batteries if necessary.

- **Walker Not Moving Smoothly:** Inspect wheels for hair, lint, or other debris that may be obstructing movement. Clean wheels thoroughly. Ensure the walker is on a suitable surface (smooth floors are ideal, but it can move on low-pile carpet).
- **Height Adjustment Issues:** Ensure the orange lever is fully engaged and disengaged when attempting to adjust the height. Do not force the mechanism.
- **Seat Cover Not Staying in Place:** Verify all clips and loops are securely fastened to the walker frame.

SPECIFICATIONS

Product Dimensions	31.75"L x 26"W x 20"H
Item Model Number	00079540680070
Maximum Weight Recommendation	26 Pounds
Material Type	Alloy Steel, Plastic, Polyester
Material Composition	19.8% Steel, 77.2% Plastic, 3% Fabric & Fill
Care Instructions	Hand wash only (for seat cover)
Batteries Required	Yes (for play tray)
Battery Life	Approximately 2.25 Hours
Item Weight	11 pounds

MEDIA GALLERY



The Chicco Walky Talky Baby Walker in use, showing a baby seated comfortably in the walker with the interactive play tray in front.



The Chicco Walky Talky Baby Walker shown in its compact folded position, highlighting its space-saving design for storage.



A detailed view of the removable multilingual play tray, featuring colorful animal figures, buttons, and a language selector dial.



The play tray is shown detached from the walker, illustrating its versatility for floor play or to convert the walker into a snack tray.



An image highlighting the height adjustment mechanism on the underside of the walker, allowing for customization as the child grows.

Official Product Video

Your browser does not support the video tag.

This official Chicco brand video provides an overview of Chicco products and their commitment to supporting parents through various stages of parenthood.

WARRANTY AND SUPPORT

Specific warranty details for the Chicco Walky Talky Foldable Baby Walker are typically provided with the product packaging or can be found on the official Chicco website. For any product support, troubleshooting assistance, or warranty claims, please contact Chicco customer service directly. Contact information can usually be found on the product packaging or on the manufacturer's website.