

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Chicco](#) /

› [Chicco KidFit Zip Booster Car Seat Instruction Manual](#)

### Chicco KidFit Zip Booster

## Chicco KidFit Zip Booster Car Seat Instruction Manual

Model: KidFit Zip Booster

### 1. PRODUCT OVERVIEW

---

The Chicco KidFit Zip Booster Car Seat is designed to provide safety and comfort for growing children.

This 2-in-1 belt-positioning booster transitions from a high-back booster to a backless booster, accommodating children from 30-100 lbs (high-back) and 40-110 lbs (backless).

Key features include DuoZone Side-Impact Protection, SuperCinch LATCH attachment, ErgoBoost double foam padding, and EZ Care Zip & Wash functionality for easy maintenance.



Figure 1.1: The Chicco KidFit Zip Booster Car Seat, showcasing its full high-back configuration in Spectrum color.

## 2. SAFETY INFORMATION

---

Always read and follow all instructions and warnings provided in this manual and on the car seat itself. Failure to do so can result in serious injury or death.

### 2.1. Weight and Height Requirements

- **High-Back Booster Mode:** For children weighing 30-100 lbs (13.61 kg - 45.36 kg) and with a height of 38-57 inches (96.5 cm - 144.8 cm).
- **Backless Booster Mode:** For children weighing 40-110 lbs (18.14 kg - 49.90 kg) and with a height of 38-57 inches (96.5 cm - 144.8 cm).

Ensure your child meets these requirements before using the booster seat.

### 2.2. Side-Impact Protection

The KidFit Zip features DuoZone Side-Impact Protection, offering 10 positions of combined head and shoulder protection. This system is designed to absorb crash forces and provide enhanced safety for your child's head and torso.



Figure 2.1: Visual representation of the DuoZone Side-Impact Protection system, highlighting head and shoulder coverage.

### 3. SETUP AND INSTALLATION

---

Proper installation is critical for the safety of your child. Always refer to your vehicle's owner's manual for specific car seat installation instructions.

#### 3.1. High-Back Booster Installation

- 1. Position the Booster:** Place the KidFit Zip Booster on the vehicle seat. Ensure it sits flat against the vehicle's seat back.
- 2. Adjust Headrest:** Adjust the headrest to the appropriate height for your child. The shoulder belt guide should be positioned just above your child's shoulders. The KidFit Zip offers 10 headrest positions.

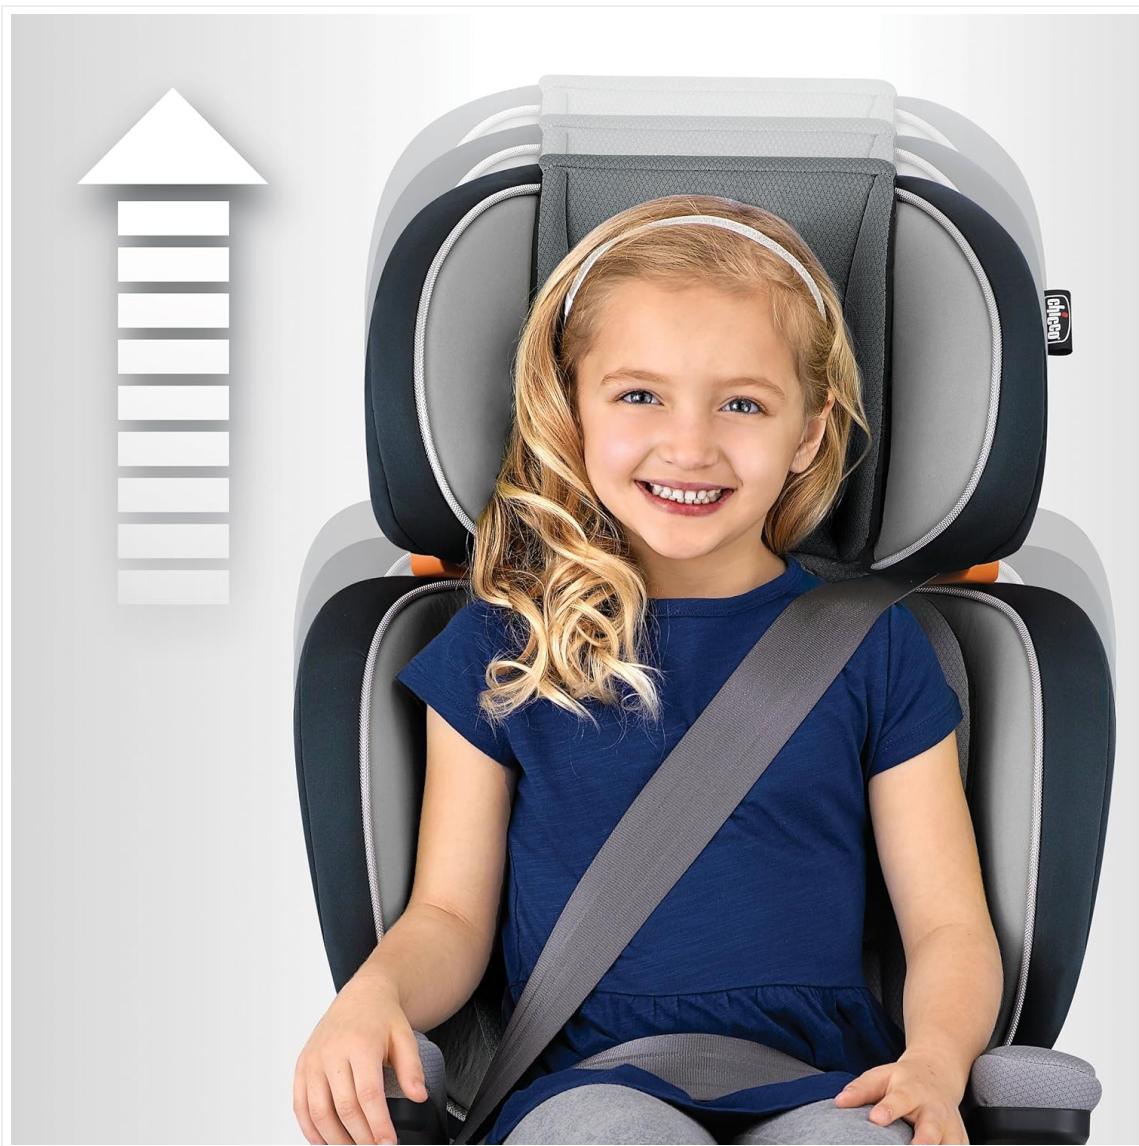


Figure 3.1: A child seated in the booster, demonstrating the adjustable headrest and proper shoulder belt positioning.

3. **Connect LATCH (Optional but Recommended):** Locate your vehicle's lower anchor bars. Extend the SuperCinch LATCH connectors from the booster seat and attach them to the vehicle's lower anchor bars.



Figure 3.2: A hand demonstrating the use of the SuperCinch LATCH strap to secure the booster seat firmly to the vehicle.

4. **Tighten LATCH:** Pull the SuperCinch LATCH one-pull tightener strap until the booster seat is securely installed and does not move more than 1 inch (2.5 cm) side-to-side or front-to-back at the belt path.



Figure 3.3: Close-up view of a LATCH connector being attached to a vehicle's lower anchor bar.

5. **ReclineSure Leveling Foot:** Adjust the ReclineSure Leveling Foot to match the angle of your vehicle's seat for optimal fit and comfort.

### 3.2. Backless Booster Conversion

To convert the KidFit Zip to a backless booster:

1. Ensure the child meets the weight and height requirements for backless booster mode.
2. Remove the backrest from the booster base according to the instructions in the full product manual.
3. Install the backless booster base using the SuperCinch LATCH system as described above, or simply place it on the vehicle seat if LATCH is not used.



Figure 3.4: The Chicco KidFit Zip Booster configured as a backless booster seat.

## 4. OPERATING INSTRUCTIONS

---

### 4.1. Securing Your Child

1. Have your child sit squarely on the booster seat.
2. Guide the vehicle's lap belt under both armrests and across your child's upper thighs, ensuring it lies low on the hips.
3. Thread the vehicle's shoulder belt through the red shoulder belt guide on the booster's headrest (for high-back mode) or the red clip provided with the backless booster (for backless mode).
4. Buckle the vehicle's seat belt.
5. Ensure the shoulder belt lies flat across your child's chest and collarbone, not on the neck or face.  
The lap belt should be snug across the upper thighs.



Figure 4.1: A child correctly seated and secured in the Chicco KidFit Zip Booster, demonstrating proper belt fit.

## 4.2. Cup Holders and Storage

The KidFit Zip includes two soft-sided cup holders that can be folded away when not in use. A bonus add-on storage compartment can fit into a cup holder for small items.

## 5. CARE AND MAINTENANCE

---

### 5.1. Cleaning the Seat Pad (EZ Care Zip & Wash)

The KidFit Zip features EZ Care Zip & Wash functionality for convenient cleaning:

1. Unzip the seat pad and backrest pad from the booster frame.
2. Machine wash the fabric pads in cold water on a delicate cycle with mild detergent. Do not use bleach.
3. Hang to dry. Do not machine dry.
4. Reattach the clean, dry pads to the booster frame.



Figure 5.1: The Chicco KidFit Zip Booster highlighting the EZ Care Zip & Wash feature for easy cleaning of seat pads.

## 5.2. Cleaning Other Components

- **Plastic and Metal Parts:** Wipe clean with a damp cloth and mild soap. Towel dry.
- **LATCH Straps:** Spot clean with a damp cloth and mild soap. Do not immerse in water or machine wash.
- **Cup Holders:** Removable for easy cleaning. Wash with soap and water, then air dry.

## 6. TROUBLESHOOTING

If you encounter issues with your Chicco KidFit Zip Booster, refer to the following common solutions:

- **Booster feels loose after LATCH installation:** Ensure the SuperCinch LATCH strap is pulled tightly. The booster should not move more than 1 inch (2.5 cm) at the belt path. Re-read Section 3.1 for detailed LATCH tightening instructions.
- **Shoulder belt does not fit correctly:** Adjust the headrest height. The shoulder belt guide must be positioned just above your child's shoulders, allowing the belt to lie flat across the collarbone.
- **Seat pad is difficult to remove/attach:** Ensure all zippers are fully unzipped for removal and properly aligned for reattachment. Refer to Section 5.1.

- **Child is uncomfortable:** Verify that the booster is installed correctly and the child meets the weight/height requirements. Check the ReclineSure Leveling Foot adjustment.

For persistent issues, contact Chicco customer support.

## 7. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	06079485000070
UPC	049796608779
Minimum Weight (High-Back)	13.61 kg (30 lbs)
Maximum Weight (High-Back)	45.36 kg (100 lbs)
Minimum Weight (Backless)	18.14 kg (40 lbs)
Maximum Weight (Backless)	49.90 kg (110 lbs)
Height Recommendation	38-57 inches (96.5 cm - 144.8 cm)
Material	Foam
Installation Type	LATCH
Product Dimensions (LxWxH)	41.91 x 47.63 x 83.19 cm (16.5 x 18.75 x 32.75 inches)
Item Weight	4.99 kg (11 lbs)
Manufacturer Recommended Age	3 years and up

## 8. WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please visit the official Chicco website or contact their customer service department. Keep your proof of purchase for warranty claims.

**Chicco Official Website:** [www.chicco.com](http://www.chicco.com)