

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Jensen](#) /

› [Jensen JE2415 24-inch LED TV Instruction Manual](#)

Jensen JE2415

Jensen JE2415 24-inch LED TV Instruction Manual

INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Jensen JE2415 24-inch AC Powered LED TV. The JE2415 features an integrated HDTV ATSC tuner, HDTV ready capabilities, and a wide 16:9 LCD panel with 16.7 million colors, supporting resolutions up to 1080p. Please read this manual thoroughly before using your television.

SAFETY INFORMATION

Observe the following safety precautions to prevent damage and ensure safe operation:

- Do not expose the TV to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation. Do not block ventilation openings.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Verify that all items are present in the packaging:

- Jensen JE2415 24-inch LED TV
- Remote Control (Dual function for TV & DVD)
- Batteries for Remote Control
- Table Top Stand (Optional, may be included or sold separately as STDJE3215)

SETUP

1. Physical Installation

The JE2415 supports a VESA 100mm x 100mm mounting pattern for wall mounting. If using the table top

stand, ensure it is securely attached according to the separate stand instructions.

2. Connecting Devices

Connect your external devices to the appropriate input ports:

- **HDMI Input:** For high-definition digital audio/video sources. The TV has one HDMI input. HDMI 1 supports ARC (Audio Return Channel).
- **Component Video Input (Y, Pb, Pr):** For high-quality analog video sources.
- **Composite Video Input (L/R NTSC/PAL Compatible):** For standard definition analog video sources.
- **VGA Video Input:** For connecting a computer.
- **Power Connection:** Connect the AC power cord to the TV and a standard AC outlet.

3. Initial Power On and Channel Scan

After connecting all cables, press the power button on the TV or remote control. Follow the on-screen prompts to perform an initial setup, including scanning for available channels using the integrated ATSC tuner.

OPERATING

1. Remote Control

The included remote control is dual-function, capable of controlling both the TV and a JENSEN DVD player. Refer to the remote control guide for specific button functions.

2. Input Selection

Use the 'Input' or 'Source' button on the remote control to cycle through available video inputs (HDMI, Component, Composite, VGA) and select the desired source.

3. JCOM Function

The JCOM function facilitates communication between the TV and a JCOM-equipped JENSEN HDMI DVD player, simplifying control and integration.

4. ARC (Audio Return Channel)

When connected to an ARC-compatible audio system via HDMI 1, the TV can send audio back to the audio system, reducing the need for a separate audio cable.

5. CEC Function

The CEC (Consumer Electronics Control) function allows for integrated control of CEC-compatible devices, such as the JENSEN AWM975 or other CEC-equipped HDMI DVD players, through a single remote.

MAINTENANCE

Cleaning the Screen

Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a screen cleaner specifically designed for LED displays. Do not spray liquid directly onto the screen.

Cleaning the Cabinet

Wipe the TV cabinet with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

TROUBLESHOOTING

- No Power:** Ensure the power cord is securely plugged into both the TV and the AC outlet. Check the power outlet with another device.
- No Picture/Sound:** Verify the correct input source is selected. Check all cable connections to external devices.
- Remote Control Not Working:** Check and replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
- Poor Picture Quality:** Check antenna/cable connections. If using an external device, try a different cable or input port.

SPECIFICATIONS

Diagonal Screen Size	24 Inches
Resolution	1920 x 1080 (1080p)
Brightness	250 nit
Contrast Ratio	1,000:1
Viewing Angles (V/H)	89/89/89/89
HDTV Tuner	Built-in ATSC
Video Inputs	1 Composite, 1 Component, 1 VGA, 1 HDMI
Audio Output	1 Line-Level (Variable/Fixed), 1 SPDIF (Digital Coax)
Mounting Pattern	VESA 100mm x 100mm
Dimensions (W x H x D, without stand)	22.52" x 13.81" x 1.96" (57.2 x 35.08 x 4.98 cm)
Weight	4.08 kg (10.00 lbs)

PRODUCT IMAGES



Front view of the Jensen JE2415 24-inch LED TV, showcasing its display with a vibrant image.

Federal law prohibits removal of this label before consumer purchase.

ENERGY GUIDE

Television

JENSEN

JE2415

Estimated Yearly Energy Cost

\$5

Cost Range of
Similar Models
(24" – 29")



- Based on 12 cents per kWh and 5 hours use per day
- Estimated yearly electricity use of this model: 39 kWh
- **Your cost depends on your utility rates and use.**

Visit ftc.gov/energy

visit FCC.gov/energy

Energy Guide label detailing the estimated yearly energy cost and consumption for the Jensen JE2415 TV.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Jensen website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 Jensen. All rights reserved.