



[Manuals.plus](#) /

› [Klipsch](#) /

› Klipsch Reference RSB-11 Sound Bar with Wireless Subwoofer User Manual

Klipsch RSB-11

Klipsch Reference RSB-11 Sound Bar with Wireless Subwoofer User Manual

Model: RSB-11

INTRODUCTION

The Klipsch Reference RSB-11 is a high-performance sound bar system designed to elevate your home audio experience. This system includes a sound bar and a wireless subwoofer, providing rich, dynamic sound for movies, music, and games. Its wireless connectivity and easy setup make it a versatile addition to any entertainment setup.

WHAT'S IN THE BOX

Upon unpacking, please ensure all components are present:

- Klipsch Reference RSB-11 Sound Bar
- Wireless Subwoofer
- Remote Control
- Power Cords (for sound bar and subwoofer)
- HDMI Cable
- Optical Cable



Image: The Klipsch Reference RSB-11 system, showing the long, slender sound bar, the cubic wireless subwoofer, and the compact remote control. The sound bar is positioned in front of the subwoofer, with the remote control in the foreground.

SETUP

1. Placement

1. **Sound Bar:** Place the sound bar directly below your television, centered for optimal audio alignment. Ensure there are no obstructions in front of the sound bar.
2. **Wireless Subwoofer:** Position the wireless subwoofer anywhere in the room. For best bass response, experiment with different locations, typically near a wall or in a corner.

2. Connections

Connect the sound bar to your television using either the HDMI or Optical cable provided.

- **HDMI (ARC):** For the best audio quality and control, connect the HDMI cable from the sound bar's HDMI ARC port to your TV's HDMI ARC port. This allows your TV remote to control the sound bar's volume.
- **Optical:** If your TV does not have an HDMI ARC port, connect the Optical cable from the sound bar's OPTICAL IN port to your TV's Optical Digital Audio Out port.

3. Powering On

- Connect the power cord to the sound bar and then to a wall outlet.
- Connect the power cord to the wireless subwoofer and then to a wall outlet. The subwoofer will automatically pair with the sound bar.
- Press the Power button on the sound bar or remote control to turn on the system.

OPERATING INSTRUCTIONS

Basic Controls

- **Power:** Press the power button on the sound bar or remote to turn the system on or off.

- **Volume:** Use the Volume Up (+) and Volume Down (-) buttons on the remote or sound bar to adjust the audio level.
- **Input Selection:** Press the Input button on the remote or sound bar to cycle through available inputs (HDMI, Optical, Bluetooth).
- **Subwoofer Level:** Use the Subwoofer Level buttons on the remote to adjust the bass output.

Bluetooth Pairing

To connect a Bluetooth device:

1. Press the Bluetooth button on the remote or sound bar. The Bluetooth indicator light will flash.
2. On your mobile device, enable Bluetooth and select "Klipsch RSB-11" from the list of available devices.
3. Once connected, the Bluetooth indicator light will glow solid. You can now stream audio from your device.

MAINTENANCE

To ensure the longevity and optimal performance of your Klipsch RSB-11 system:

- **Cleaning:** Use a soft, dry cloth to wipe down the sound bar and subwoofer. Avoid using liquid cleaners or abrasive materials.
- **Ventilation:** Ensure proper ventilation around both units to prevent overheating. Do not block any vents.
- **Environment:** Keep the system away from direct sunlight, heat sources, and excessive moisture.

TROUBLESHOOTING

Problem	Possible Solution
No sound from sound bar.	<p>Ensure power is connected and the unit is on.</p> <p>Verify the correct input source is selected (HDMI, Optical, Bluetooth).</p> <p>Check cable connections between the sound bar and TV.</p> <p>Increase the volume on both the sound bar and TV.</p>
Subwoofer not producing sound.	<p>Ensure the subwoofer is powered on and its indicator light is solid.</p> <p>Verify the subwoofer is wirelessly paired with the sound bar. If not, refer to the pairing instructions in the full manual.</p> <p>Adjust the subwoofer level using the remote control.</p>
Remote control not working.	<p>Check and replace batteries if necessary.</p> <p>Ensure there are no obstructions between the remote and the sound bar.</p> <p>Point the remote directly at the sound bar's sensor.</p>
Bluetooth device won't pair.	<p>Ensure the sound bar is in Bluetooth pairing mode.</p> <p>Delete "Klipsch RSB-11" from your device's Bluetooth list and try pairing again.</p> <p>Move your device closer to the sound bar.</p>

SPECIFICATIONS

Feature	Detail
Model Name	RSB-11

Feature	Detail
Speaker Type	Surround Sound
Surround Sound Channel Configuration	2.1
Special Feature	Wireless
Recommended Uses	For Televisions, Home Theaters, Gaming Setups
Compatible Devices	Smartphone, Laptop, TV
Subwoofer Diameter	8 Inches
Controller Type	Remote Control
Item Weight	17.6 Pounds (total system)
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters (approx. 33 feet)
Connectivity Protocol	HDMI, Optical
Product Dimensions (Sound Bar)	3.2 x 3.2 x 44 inches
Power Source	Corded Electric
Speaker Maximum Output Power	1 Watt (RMS, typical)
Mounting Type	Bar Mount (Tabletop or Wall Mountable)

WARRANTY INFORMATION

This Klipsch product is covered by a limited manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Klipsch website for detailed terms and conditions regarding coverage, duration, and claims procedures. Keep your proof of purchase for warranty service.

SUPPORT

For further assistance, technical support, or to view the complete product manual, please visit the official Klipsch support website:

www.klipsch.com/support

You may also find helpful FAQs and community forums on their website.

