

[Manuals.plus](#) /

> [ECONTROLLY](#) /

> ECONTROLLY AK59-00145A Remote Control Instruction Manual for Samsung Blu-Ray DVD Players

## ECONTROLLY AK59-00145A

# ECONTROLLY AK59-00145A Remote Control Instruction Manual

For Samsung Blu-Ray DVD Players

## PRODUCT OVERVIEW

---

This manual provides instructions for the ECONTROLLY AK59-00145A replacement remote control, designed for use with various Samsung Blu-Ray DVD Player models.



Image: Front view of the AK59-00145A remote control, showing all buttons and layout.

### Compatible Models:

- BDE5300, BDE5300/ZA, BDE5300ZA
- BDE5400, BDE5400/ZA, BDE5400ZA
- BDE5700, BDE5700/ZA, BDE5700ZA
- BDE5900, BDE5900/ZA, BDE5900ZA
- BDEM53, BDEM53/ZA, BDEM53ZA
- BDEM57, BDEM57C, BDEM57C/ZA, BDEM57CZA, BDEM57ZA, BDEM57/ZA
- BDEM59

This remote is designed for immediate use without any programming or pairing required. Simply insert batteries to begin operation.

## SETUP

---

### Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA 1.5V alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the

markings inside the compartment.

4. Replace the battery cover by sliding it back into place until it clicks securely.

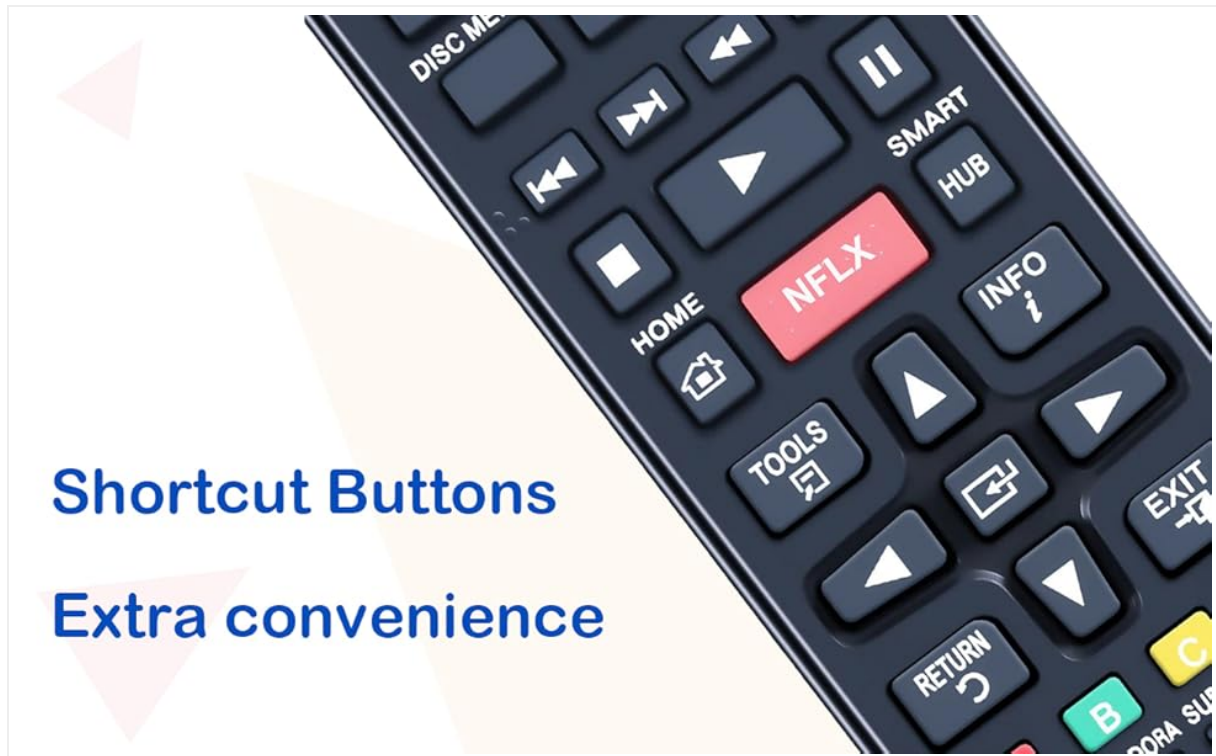


Image: Visual guide demonstrating how to remove the battery cover and insert two AAA batteries into the remote control.

No additional setup or programming is required. The remote control is ready for use once batteries are installed.

## OPERATING INSTRUCTIONS

---

To operate your Samsung Blu-Ray DVD Player, point the remote control directly at the player. Ensure there are no obstructions between the remote and the device.

### Key Functions:

- **Power Button (Power Icon):** Turns the Blu-Ray DVD Player on or off.
- **Source Button:** Selects the input source.
- **Volume Buttons (VOL +/-):** Adjusts the volume. *Note: These buttons may only control Samsung TVs and are not programmable for other brands.*
- **Number Pad (0-9):** For direct track selection or input.
- **Disc Menu / Title Menu / Popup :** Navigates disc menus.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Controls media playback.
- **Home Button:** Accesses the player's home screen.
- **Smart Hub Button:** Opens the Smart Hub interface for apps and services.
- **Netflix Button:** Direct access to the Netflix application.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** For menu navigation and selection.
- **Tools / Info Buttons:** Accesses additional functions or information.
- **Return / Exit Buttons:** Navigates back or exits current menus.
- **Color Buttons (A, B, C, D):** Provides access to specific functions within certain applications or menus.
- **Audio / Pandora / Subtitle / Full Screen Buttons :** Controls audio tracks, Pandora app, subtitles, and screen display modes.

## MAINTENANCE

---

## Battery Replacement:

Replace batteries when the remote's response becomes sluggish or stops functioning. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

## Cleaning:

Wipe the remote control with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

## Storage:

Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure batteries are correctly installed with proper polarity.
  - Replace old batteries with new AAA alkaline batteries.
  - Check for any obstructions between the remote control and the Blu-Ray DVD Player.
  - Ensure you are within the effective operating range (approximately 8-10 meters or 26-33 feet).
- **Specific buttons not working:**
  - Clean the remote control surface, especially around the non-functioning buttons, to remove any debris.
  - Note that volume and TV power buttons are typically designed for Samsung TVs only and are not programmable for other brands.

## SPECIFICATIONS

---

Feature	Specification
Model Name	AK59-00145A
Brand	ECONTROLLY
Connectivity Technology	Infrared
Compatible Devices	Samsung Blu-Ray DVD Players
Maximum Range	Approximately 33 Feet (10 meters)
Battery Type	2 x AAA 1.5V Alkaline Batteries (not included)
Material	ABS Environmental Protection Material
Dimensions (L x W x H)	Approx. 5"L x 2"W x 0.5"H
Weight	Approx. 1 Ounce

# ECONTROLLY Replace AK59-00145A Remote Control

**Compatible with Samsung Blu-ray DVD Player**

Models: BDE5300 BDE5300/ZA BDE5300ZA  
BDE5400 BDE5400/ZA BDE5400ZA BDE5700

BDE5700/ZA BDE5700ZA BDE5900 BDE5900/ZA  
BDE5900ZA BDEM53 BDEM53/ZA BDEM53ZA

BDEM57 BDEM57C BDEM57C/ZA BDEM57CZA  
BDEM57ZA BDEM57/ZA BDEM59



Image: Diagram showing the approximate length, width, and thickness of the AK59-00145A remote control.

## WARRANTY AND SUPPORT

Specific warranty information for this ECONTROLLY AK59-00145A remote control is not detailed within this manual. For warranty claims, technical support, or further assistance, please refer to the product packaging or contact the seller directly through your purchase platform.