

ECONTROLLY BN59-01179B

ECONTROLLY Replacement Remote Control BN59-01179B for Samsung TVs

INSTRUCTION MANUAL

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your ECONTROLLY BN59-01179B replacement remote control. This remote is designed to be compatible with various Samsung TV models, including those originally using BN59-01179A and BN59-01179B remotes. Please refer to the 'Specifications' section for a list of compatible models.

The remote control is engineered for ease of use, requiring no programming or pairing. Simply install the batteries, and it is ready for operation.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA 1.5V alkaline batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards and remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.





This image shows the rear of the remote control with the battery compartment open, illustrating where to insert two AAA batteries.

2.2 Initial Use

This replacement remote control is pre-programmed and does not require any additional setup or pairing with your Samsung TV. Once the batteries are correctly installed, the remote is ready for immediate use.

3. OPERATING INSTRUCTIONS

The ECONTROLLY BN59-01179B remote control provides full functionality for compatible Samsung TVs. Below is a guide to the main buttons and their functions:





This image displays the front of the ECONTROLLY BN59-01179B remote control, showing all buttons including power, volume, channel, number pad, and special function keys.

- **TV Power (Red button, top left):** Turns the TV on or off.
- **STB Power (Red button, top right):** Turns the Set-Top Box (STB) on or off.
- **Source:** Changes the input source (e.g., HDMI1, HDMI2, AV).
- **STB Guide / STB Menu:** Accesses the guide or menu for the connected Set-Top Box.
- **Number Pad (0-9):** Directly enters channel numbers.
- **PRE-CH:** Returns to the previous channel.
- **VOL (+/-):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV sound.
- **CH (up/down):** Changes the TV channel.
- **CH LIST:** Displays the channel list.
- **MENU:** Opens the TV's main menu.
- **GUIDE:** Displays the electronic program guide.
- **SMART HUB:** Accesses the Samsung Smart Hub for apps and streaming services.
- **INFO:** Displays information about the current program or input.
- **TOOLS:** Accesses quick settings or tools menu.
- **Directional Pad (Up, Down, Left, Right) & Enter:** Navigates through menus and confirms selections.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **Colored Buttons (A, B, C, D):** These buttons have various functions depending on the TV model or current application.
- **E-MANUAL:** Accesses the TV's electronic manual.
- **SEARCH:** Opens the search function.
- **KEYPAD:** Displays an on-screen keypad.
- **P.SIZE:** Adjusts the picture size/aspect ratio.
- **MTS:** Selects Multi-channel Television Sound options.

- **CC:** Toggles Closed Captions on or off.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop):** Controls media playback.

4. MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** While made from durable ABS material, avoid dropping the remote control to prevent internal damage.

5. TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective operating range (up to 33 feet) and pointing the remote directly at the TV.
- **Specific buttons not working:**
 - Clean the remote control surface, especially around the problematic buttons, to ensure no debris is interfering.
 - If only certain buttons are unresponsive after checking batteries and line of sight, the remote may be damaged.
- **Intermittent operation:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

If these steps do not resolve the issue, please refer to the 'Warranty and Support' section for further assistance.

6. SPECIFICATIONS

Brand	ECONTROLLY
Model Name	BN59-01179A, BN59-01179B

Connectivity Technology	Infrared (IR)
Compatible Devices	Samsung Televisions (various models including UN46ES7100, UN55ES6820FXZA, UN55ES7150F, UN55HU9000F, UN60ES7150F, UN55ES7003F, UN55ES6900, etc.)
Power Source	2 x AAA 1.5V Alkaline Batteries (not included)
Maximum Range	33 Feet (10 meters)
Material	ABS
Color	Black
Dimensions (L x W x H)	Approximately 5"L x 1"W x 0.25"H (12.7 cm x 2.54 cm x 0.64 cm)





This image provides the dimensions of the remote control, showing its length as 23 cm (9.06 inches) and width as 4.5 cm (1.77 inches).

7. WARRANTY AND SUPPORT

For warranty information or technical support regarding your ECONTROLLY replacement remote control, please contact the seller directly through your purchase platform. They will be able to provide assistance with product-specific inquiries, returns, or replacements as per their policies.