

## ECONTROLLY EN-31201A

# ECONTROLLY EN-31201A Replacement Remote Control User Manual for Hisense TVs

Model: EN-31201A

## INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY EN-31201A replacement remote control. This remote is designed to be compatible with various Hisense TV models, offering a direct replacement experience without the need for complex programming. Please read this manual carefully to ensure proper setup and operation of your new remote control.

The ECONTROLLY EN-31201A is compatible with the following Hisense TV models:

- F24V77C, F24V86C, F46V89C, F55V89C
- LEDN32K15US, LHD32K20AUS, LHD32K26US, LHD37V87US, LHDN32V66AUS
- LTDN23K15US, LTDN24K16US, LTDN24K20US, LTDN24V87US
- LTDN39V77US, LTDN39V78US, LTDN40K26US, LTDN40V87US
- LTDN42V68US, LTDN42K20US, LTDN42K26US, LTDN46K20US
- LTDN55V89GUS, LTDN42V77US, LTDN46V86US, LTD24V86US

## SETUP INSTRUCTIONS

The ECONTROLLY EN-31201A remote control is designed for immediate use with compatible Hisense TV models. No programming or pairing is required.

### 1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. **Note: Batteries are not included.**
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





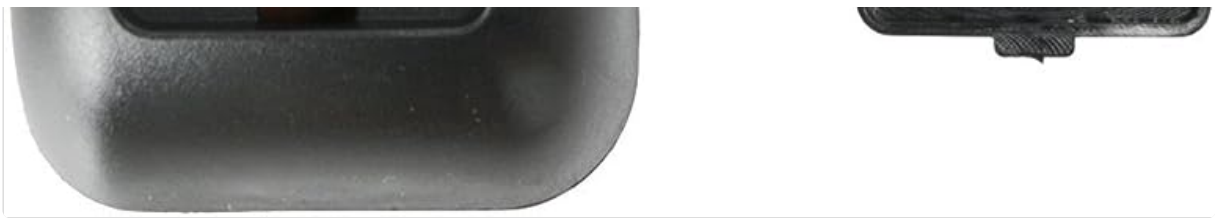


Image: Rear view of the ECONTROLLY EN-31201A remote control, showing the open battery compartment and a detached battery cover. This illustrates where to insert the two AAA batteries.

## 2. First Use

Once batteries are installed, the remote control is ready for use. Point the remote directly at your Hisense TV and press the **Power** button to turn on the television.

## OPERATING INSTRUCTIONS

The ECONTROLLY EN-31201A remote control features standard buttons for navigating your Hisense TV. Below is a general guide to common functions:



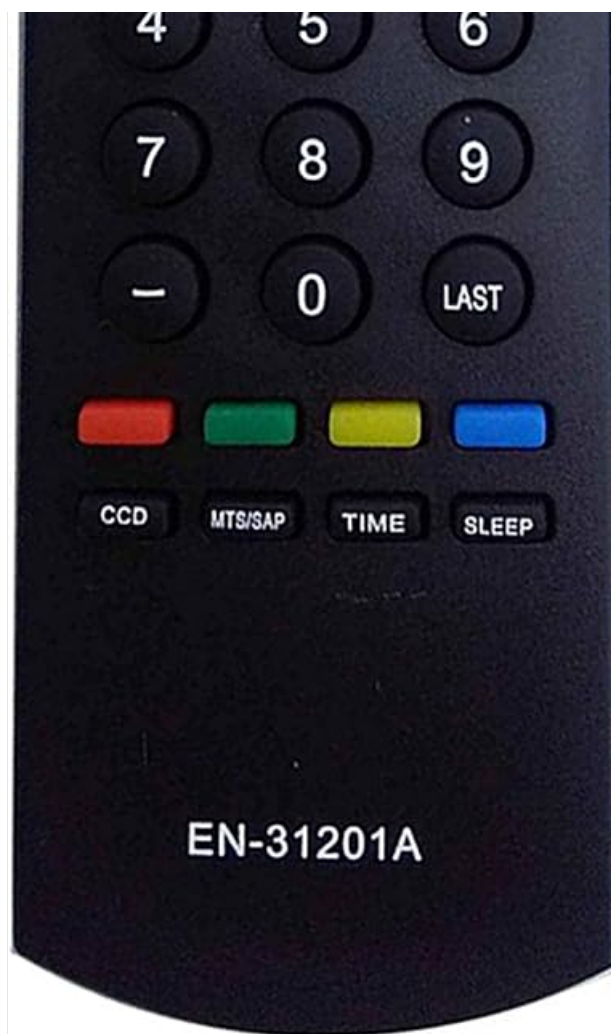


Image: Front view of the ECONTROLLY EN-31201A remote control, displaying all buttons and their labels. This image provides a visual reference for button identification.

- **Power (Red Button):** Turns the TV on or off.
- **TV:** Switches to TV mode.
- **Input:** Cycles through available input sources (HDMI, AV, Component, VGA).
- **AV, COMP, HDMI, VGA:** Direct access buttons for specific input sources.
- **Aspect:** Adjusts the screen aspect ratio.
- **Guide:** Displays the electronic program guide (if available).
- **Picture:** Accesses picture settings.
- **Sound:** Accesses sound settings.
- **Volume Up/Down (Triangle Buttons):** Adjusts the volume level.
- **Mute:** Mutes or unmutes the TV sound.
- **Channel Up/Down (Triangle Buttons):** Changes the TV channel.
- **Menu:** Opens the TV's main menu.
- **Exit:** Closes the current menu or on-screen display.
- **Navigation Buttons (Up, Down, Left, Right Arrows):** Navigates through menus and options.
- **Enter:** Confirms a selection in menus.
- **Number Buttons (0-9):** Directly enters channel numbers.
- **Last:** Returns to the previously viewed channel.
- **CCD (Closed Captioning Display):** Toggles closed captions.
- **MTS/SAP (Multi-channel Television Sound/Secondary Audio Program):** Selects audio modes.

- **Time:** Displays time-related functions (if available).
- **Sleep:** Sets a sleep timer for the TV.

For specific functions or advanced settings, refer to your Hisense TV's original user manual.

## MAINTENANCE

### Battery Replacement

Replace batteries when the remote control's responsiveness decreases or it stops functioning. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

### Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

## TROUBLESHOOTING

| Problem                                 | Possible Cause                                                                                                                                                                                                                            | Solution                                                                                                                                                                                                                                                                                               |
|-----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote control is not working.          | <ul style="list-style-type: none"><li>• Dead or incorrectly inserted batteries.</li><li>• Obstruction between remote and TV.</li><li>• Remote control sensor on TV is blocked.</li><li>• Remote control is too far from the TV.</li></ul> | <ul style="list-style-type: none"><li>• Replace batteries with new AAA batteries, ensuring correct polarity.</li><li>• Remove any objects blocking the line of sight between the remote and the TV.</li><li>• Ensure the TV's remote sensor is not covered.</li><li>• Move closer to the TV.</li></ul> |
| Certain buttons are unresponsive.       | <ul style="list-style-type: none"><li>• Low battery power.</li><li>• Button malfunction.</li></ul>                                                                                                                                        | <ul style="list-style-type: none"><li>• Replace batteries.</li><li>• Ensure the button is pressed firmly. If the issue persists, the remote may require replacement.</li></ul>                                                                                                                         |
| TV does not respond to remote commands. | <ul style="list-style-type: none"><li>• TV is off or unplugged.</li><li>• Remote is not compatible with the TV model.</li></ul>                                                                                                           | <ul style="list-style-type: none"><li>• Ensure the TV is powered on and plugged in.</li><li>• Verify your TV model is listed in the compatible models section of this manual.</li></ul>                                                                                                                |

## SPECIFICATIONS

- **Model:** EN-31201A
- **Brand:** ECONTROLLY
- **Product Dimensions:** 7 x 2 x 0.65 inches
- **Item Weight:** 0.81 ounces
- **Batteries Required:** 2 x AAA (not included)
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Various Hisense Television models (refer to Introduction for full list)
- **Special Feature:** Ergonomic design

## WARRANTY AND SUPPORT

---

Specific warranty information for the ECONTROLLY EN-31201A remote control is not provided in this manual. For details regarding warranty coverage or technical support, please refer to the product packaging or contact the retailer from whom the product was purchased. You may also visit the ECONTROLLY official website for further assistance.