

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› User Manual for ECONTROLLY GB004WJSA Replacement Remote Control

ECONTROLLY GB004WJSA Replaced NEW REMTOE

User Manual for ECONTROLLY GB004WJSA Replacement Remote Control

Model: GB004WJSA Replaced NEW REMTOE

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY GB004WJSA Replacement Remote Control, designed as a direct replacement for various Sharp Smart TV models. This remote requires no programming; simply insert batteries to begin use.

Compatible Sharp TV Models:

- LC40LE830U, LC40LE830UA, LC40LE830UB, LC40LE832U, LC40LE832UB, LC40LE835, LC40LE835U
- LC-42LE540, LC42LE540U, LC-42LE540U
- LC-46LE540, LC46LE540U, LC-46LE540U, LC46LE830U, LC46LE830UB, LC46LE830UC, LC46LE832U, LC46LE832UB, LC46LE832UC, LC46LE835, LC46LE835U
- LC-52C6400U, LC-52LE640U, LC52LE830U, LC52LE832U, LC52LE835, LC52LE835U
- LC-60C6400U, LC60C7450U, LC60C8470U, LC60LE632U, LC60LE633U, LC-60LE640U, LC60LE655U, LC-60LE655U, LC60LE657U, LC60LE745, LC60LE745U, LC60LE755U, LC60LE830U, LC60LE831U, LC60LE832U, LC60LE832UB, LC60LE835, LC60LE835U, LC60LE845, LC60LE845U, LC60LE847U
- LC70C6400U, LC-70C6400U, LC70C7450U, LC70C8470U, LC70LE632U, LC70LE633U, LC70LE640U, LC-70LE640U, LC70LE655U, LC-70LE655U, LC70LE657U, LC70LE732U, LC70LE733U, LC70LE734U, LC70LE735U, LC70LE745U, LC70LE845U, LC70LE8470U, LC70LE847U, LC70UD1U, LC-70UD1U
- LC80LE632U, LC-80LE632U, LC80LE633U, LC-80LE633U, LC80LE657U, LC80LE844U, LC80LE844UB
- LC90LE745U

2. SETUP

2.1. Battery Installation

The ECONTROLLY GB004WJSA remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align with the markings inside the

compartment.

4. Slide the battery compartment cover back into place until it clicks securely.

Note: This remote control does not require any programming. Once batteries are installed, it is ready for immediate use with compatible Sharp Smart TVs.



Figure 1: Front view of the ECONTROLLY GB004WJSA Replacement Remote Control, showing its button layout.

3. OPERATION

The GB004WJSA remote functions identically to your original Sharp TV remote. Point the remote directly at your television's infrared receiver for optimal performance.

3.1. Key Button Functions

Button	Function
POWER	Turns the TV on or off.
DISPLAY (SOURCE)	Displays current input source or cycles through available sources.
TV / STB / DVD-VCR / AUDIO	Selects the device mode for controlling TV, Set-Top Box, DVD/VCR, or Audio equipment.
MUTE	Mutes or unmutes the TV audio.
VOL +/-	Adjusts the volume level.
CH +/-	Changes the TV channel.
INPUT	Cycles through available input sources (HDMI, AV, Component, etc.).
Number Pad (0-9)	Direct channel selection.

Button	Function
MENU	Opens the TV's main menu.
ENTER	Confirms selections within menus.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menu options.
EXIT	Exits the current menu or on-screen display.
RETURN	Goes back to the previous screen or menu.
Smart Central	Accesses the Sharp Smart Central platform.
NETFLIX	Direct access to the Netflix application.
FAV APP	Accesses favorite applications.
Color Buttons (A, B, C, D)	Context-sensitive functions within menus or applications.
Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip)	Controls media playback.
REC	Initiates recording (if supported by TV/connected device).

4. MAINTENANCE

4.1. Cleaning the Remote

To maintain the remote's appearance and functionality, clean it periodically:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

4.2. Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3. Storage

If the remote will not be used for an extended period, remove the batteries to prevent leakage, which can damage the remote.

5. TROUBLESHOOTING

5.1. Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh AAA batteries.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor.
- **Distance:** Ensure you are within the effective operating range of the TV's infrared sensor.
- **TV Sensor:** Verify that the TV's infrared sensor is not blocked or dirty.

5.2. Intermittent Response

- **Weak Batteries:** Replace batteries even if the remote occasionally works. Low battery power can cause inconsistent performance.
- **Interference:** Strong light sources (like direct sunlight or fluorescent lights) can sometimes interfere with infrared signals. Try operating the remote in different lighting conditions.

6. SPECIFICATIONS

Feature	Detail
Model Number	GB004WJSA Replaced NEW REMTOE
Brand	ECONTROLLY
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounces
Batteries Required	2 AAA batteries (not included)
Color	Black
Compatible Devices	Television (Specific Sharp Smart TV models listed in Introduction)
Special Feature	Ergonomic

7. WARRANTY AND SUPPORT

For any questions regarding the ECONTROLLY GB004WJSA Replacement Remote Control, or for support with its operation, please contact the seller or manufacturer directly through your purchase platform. Specific warranty details may vary by retailer or region.

Please refer to your purchase documentation for contact information and warranty terms.

© 2024 ECONTROLLY. All rights reserved. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01LRYHPYQ>

More documents and user manuals: <https://manuals.plus/>