

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TRIXIE](#) /

› [TRIXIE Telescope Playing Rod 45763 User Manual](#)

TRIXIE 45763

TRIXIE Telescope Playing Rod User Manual

Brand: TRIXIE | Model: 45763

INTRODUCTION

The TRIXIE Telescope Playing Rod is an interactive toy designed to engage your pet in playful activity. This lightweight, extractable rod is made of durable fiberglass and features a soft handle for comfortable grip. It comes with different exchangeable toys to keep your pet entertained. The rod's length is adjustable from 40 cm to 98 cm, allowing for versatile play.

Key Features:

- Lightweight, extractable telescope rod
- Constructed from durable fiberglass
- Soft handle for comfortable and secure hold
- Includes different exchangeable toys for variety
- Adjustable length from 40 cm to 98 cm



Image: The TRIXIE Telescope Playing Rod, featuring its extendable design and an attached toy, ready for interactive play.

SETUP

1. **Unpacking:** Carefully remove the playing rod and its accessories from the packaging. Inspect all components for any signs of damage.
2. **Attaching a Toy:** Select one of the provided exchangeable toys. Locate the attachment point at the end of the rod. Securely fasten the toy to the rod. Ensure it is firmly attached to prevent detachment during play.
3. **Adjusting Rod Length:** The rod is telescopic. To extend, gently pull the sections apart until the desired length (between 40 cm and 98 cm) is achieved. To retract, push the sections back together.

OPERATING INSTRUCTIONS

The TRIXIE Telescope Playing Rod is designed for interactive play between you and your pet. Always supervise your pet during play to ensure their safety.

- **Engage Your Pet:** Gently wave the rod to make the attached toy move in an enticing manner, mimicking prey.
- **Vary Movement:** Use different speeds and patterns of movement to keep your pet engaged and stimulated.
- **Safety First:** Do not allow your pet to chew on the rod itself. If the toy becomes damaged or detached, replace it immediately. Avoid swinging the rod forcefully near your pet's face or eyes.
- **Storage After Play:** After each play session, retract the rod to its shortest length and store it in a safe place out of your pet's reach to prevent unsupervised play and potential damage.

MAINTENANCE

- **Cleaning:** The fiberglass rod can be wiped clean with a damp cloth. The attached toys can be spot cleaned as needed. Do not immerse the rod in water.
- **Inspection:** Regularly inspect the rod and toys for any signs of wear, tear, or damage. Pay close attention to the attachment points and the integrity of the rod sections.
- **Storage:** Store the playing rod in a dry, cool place away from direct sunlight and out of reach of pets when not in use.

TROUBLESHOOTING

Toy detaches during play:

Ensure the toy is securely fastened to the rod's attachment point before play. If the attachment mechanism is damaged, discontinue use and replace the toy or rod.

Rod sections are stiff or difficult to extend/retract:

Check for any dirt or debris between the rod sections. Clean the rod thoroughly. Avoid forcing the sections, as this may cause damage. If the issue persists, the rod may be damaged internally.

Rod appears bent or damaged:

Discontinue use immediately. A damaged rod can pose a safety risk to your pet. Replace the product.

SPECIFICATIONS

Model Number:	45763
Brand:	TRIXIE
Material:	Fibreglass
Adjustable Length:	40 cm - 98 cm
Item Weight:	0.01 Kilograms
Pet Toy Type:	Teaser Wand
Recommended Use:	Exercise, Playing
Indoor/Outdoor Use:	Indoor

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official TRIXIE website or contact your retailer. Keep your proof of purchase for any warranty claims.

This product is designed for pet play and is not intended for human use. Always supervise your pet during play.