



Manuals.plus /

- › National Geographic /
- › National Geographic Genius Season 1: Einstein DVD Instruction Manual

National Geographic 2333911

National Geographic Genius Season 1: Einstein DVD Instruction Manual

Model: 2333911

INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your National Geographic Genius Season 1: Einstein DVD set. Please read this manual thoroughly before use to ensure optimal viewing experience and longevity of your product.

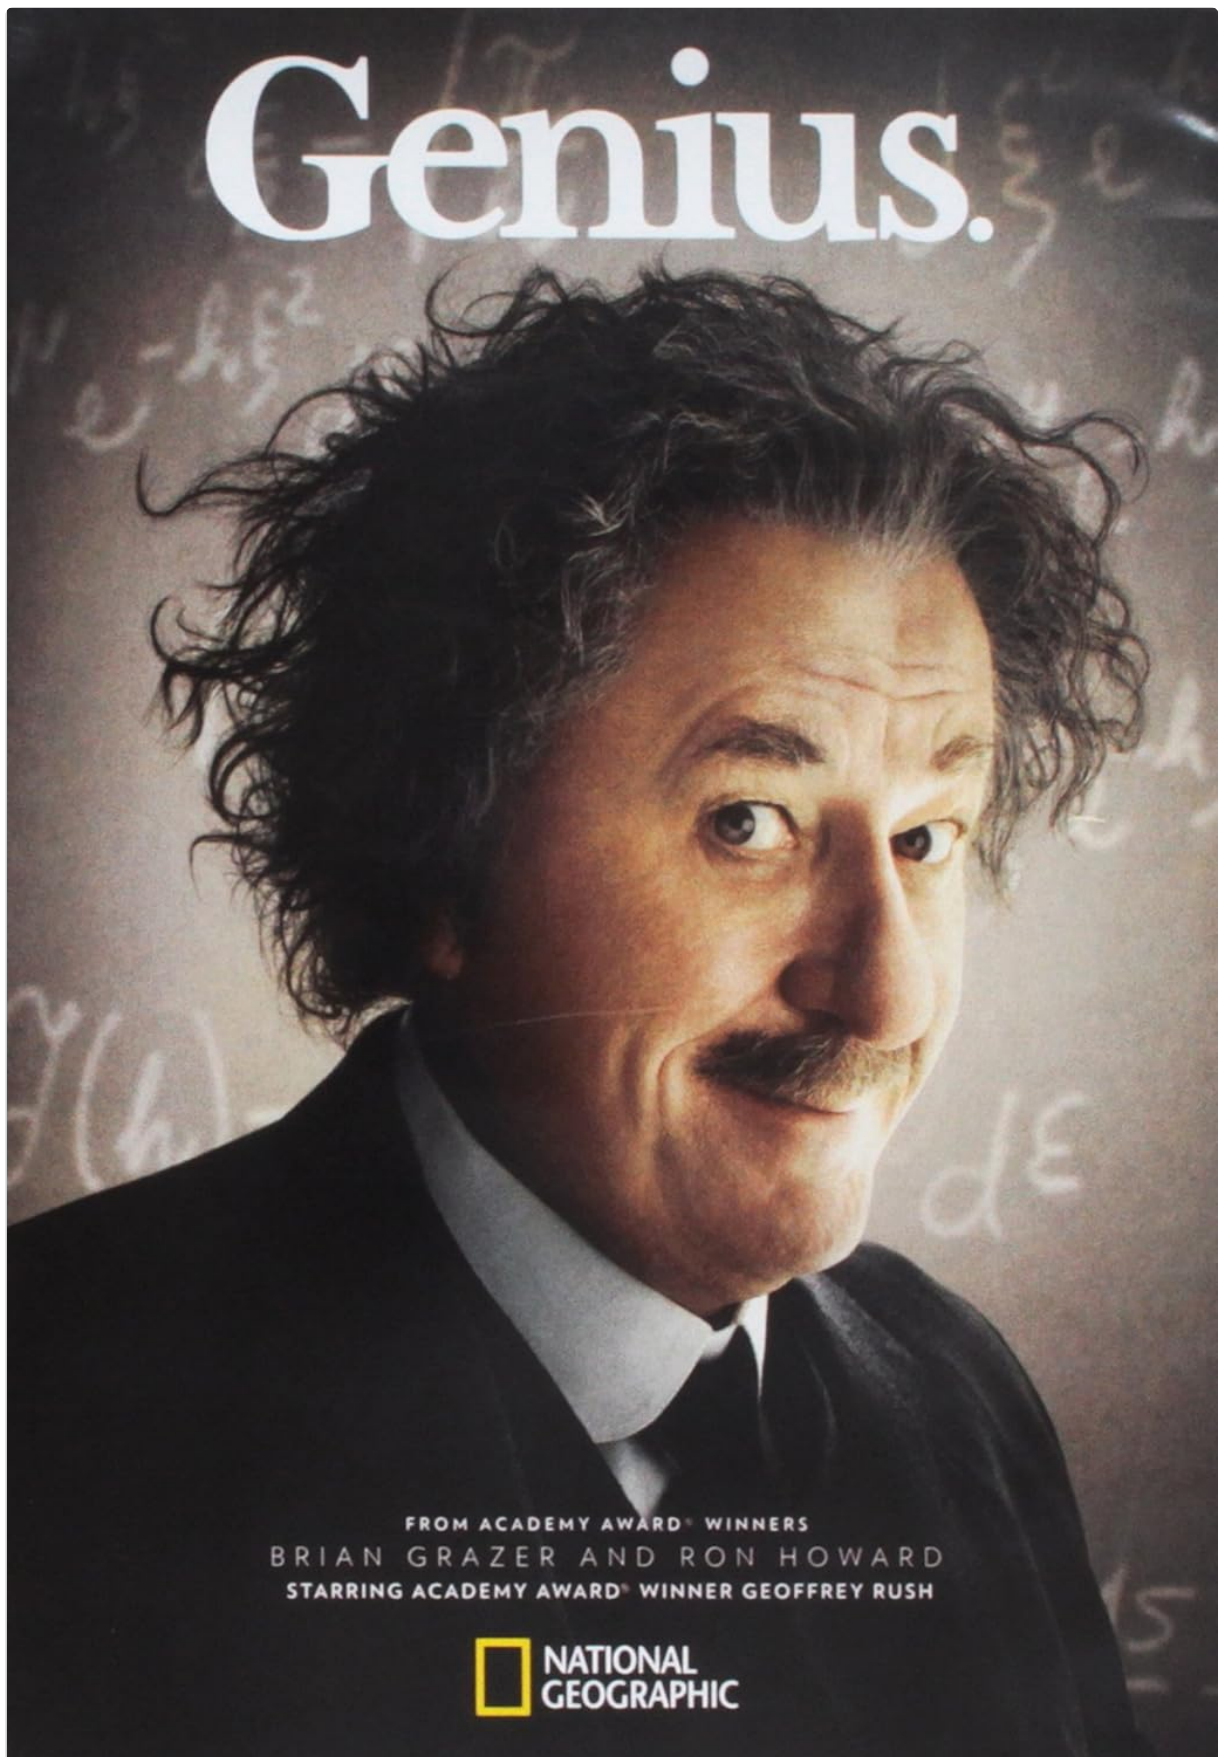


Image: Front cover of the Genius Season 1: Einstein DVD set, depicting Geoffrey Rush in character as Albert Einstein with a chalkboard background featuring scientific equations.

1. SETUP

To begin watching your Genius Season 1: Einstein DVD set, follow these steps:

1. **Connect your DVD Player:** Ensure your DVD player is correctly connected to your television or display device according to its own instruction manual. This typically involves connecting video (HDMI, composite, component) and audio cables.
2. **Power On:** Turn on your television and DVD player. Select the correct input source on your television (e.g., HDMI 1, AV).
3. **Insert Disc:** Gently open the DVD player tray or slot. Take one of the Genius Season 1: Einstein DVDs from its case, holding it by the edges to avoid touching the playback surface. Place the disc label-side up into the tray or slot.
4. **Close Tray:** Close the DVD player tray or allow the player to automatically draw the disc in.
5. **Automatic Playback:** The DVD should begin playing automatically or display a main menu.

2. OPERATING INSTRUCTIONS

Navigate and control your viewing experience using your DVD player's remote control.

- **Main Menu:** Upon disc insertion, the main menu will typically appear. Use the arrow keys on your remote to highlight options such as "Play All," "Episode Selection," "Scene Selection," "Languages," or "Subtitles." Press the "Enter" or "OK" button to select.
- **Playback Controls:**
 - **Play (▶):** Starts or resumes playback.
 - **Pause (||):** Temporarily stops playback. Press Play to resume.
 - **Stop (■):** Stops playback and returns to the beginning of the disc or main menu.
 - **Fast Forward (⇒):** Advances playback quickly.
 - **Rewind (⇐):** Reverses playback quickly.
 - **Skip (→ / ↵):** Jumps to the next or previous chapter/track.
- **Language and Subtitle Selection:** Access these options from the main menu or by pressing the "Audio" or "Subtitle" button on your remote during playback. Available languages include English, and subtitles are available in English, French, and Spanish.
- **Episode Selection:** The Genius Season 1 set contains multiple episodes across its four discs. Use the "Episode Selection" or "Scene Selection" menu to choose specific episodes or scenes.

3. MAINTENANCE

Proper care will extend the life of your DVDs and ensure consistent playback quality.

- **Handling:** Always hold discs by their outer edges or the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If a disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., microfiber) from the center outwards. Do not use abrasive materials or harsh chemical cleaners. For stubborn marks, a small amount of water or a specialized disc cleaning solution can be used.
- **Storage:** Store discs in their original cases, away from direct sunlight, extreme temperatures, and high humidity. Laying discs flat or stacking them without cases can lead to warping or scratching.
- **Avoid Damage:** Do not bend discs, apply stickers, or write on the playback surface.

4. TROUBLESHOOTING

If you encounter issues, try the following solutions:

| Problem | Solution |
|------------------------------------|---|
| Disc does not play or load. | <ul style="list-style-type: none">• Ensure the disc is inserted correctly (label side up).• Check if the disc is clean and free of scratches or smudges. Clean if necessary.• Verify your DVD player is powered on and connected to the correct TV input.• Try playing another DVD to confirm the player is functioning. |
| No audio or video during playback. | <ul style="list-style-type: none">• Check all audio/video cables between the DVD player and TV.• Ensure the TV's volume is not muted and is turned up.• Confirm the correct input source is selected on your TV.• Check the audio settings on your DVD player and TV. |
| Disc skips or freezes. | <ul style="list-style-type: none">• Clean the disc thoroughly as described in the Maintenance section.• Inspect the disc for deep scratches or damage. Severely damaged discs may not play correctly.• Ensure the DVD player is on a stable surface to prevent vibrations. |

5. SPECIFICATIONS

| Feature | Detail |
|--------------------|---|
| Title | Genius Season 1: Einstein |
| Brand | National Geographic |
| Model Number | 2333911 |
| ASIN | B01LTIOJGW |
| Media Format | NTSC, Subtitled |
| Run Time | 90 minutes (per disc) |
| Number of Discs | 4 |
| Release Date | April 17, 2018 |
| Actors | Emily Watson, Geoffrey Rush, Johnny Flynn |
| Subtitles | English, French, Spanish |
| Audio Language | English (Dolby Digital 5.1) |
| Studio | 20th Century Fox |
| Product Dimensions | 0.7 x 7.5 x 5.4 inches |
| Item Weight | 4.96 ounces |

6. WARRANTY AND SUPPORT

For specific warranty information or technical support regarding your Genius Season 1: Einstein DVD set, please refer to the packaging or contact the retailer or distributor from whom the product was purchased. General product support may also be available through the official National Geographic or 20th Century Fox customer service channels.

Please retain your proof of purchase for any warranty claims.