

ECONTROLLY N-TV REMOTE BN59-00673A

Instruction Manual for ECONTROLLY BN59-00673A Replacement Remote Control

Model: N-TV REMOTE BN59-00673A

INTRODUCTION

This manual provides instructions for the ECONTROLLY BN59-00673A Replacement Remote Control, designed for various Samsung TV models. This remote control is a direct replacement and requires no programming for operation. Simply install batteries to begin use.

PACKAGE CONTENTS

- 1 x ECONTROLLY BN59-00673A Replacement Remote Control

Note: AAA batteries are not included and must be purchased separately.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, illustrating the battery insertion process.

Once batteries are installed, the remote control is ready for immediate use with compatible Samsung TV models. No additional programming or pairing is required.

OPERATING INSTRUCTIONS

The ECONTROLLY BN59-00673A remote control features standard buttons for navigating your Samsung TV. Below are common functions:





Image: Front view of the remote control, displaying all functional buttons.

Button	Function
POWER	Turns the TV on or off.
TV	Switches the TV to TV mode.
ON/OFF (Lightbulb icon)	Controls the TV's light sensor or other specific functions depending on TV model.
Number Buttons (0-9)	Direct channel selection.
VOL +/-	Adjusts the volume level.
CH +/-	Changes the channel up or down.
MUTE	Mutes or unmutes the TV sound.
SOURCE	Selects the input source (HDMI, AV, Component, etc.).
MENU	Opens the TV's main menu.
Directional Pad (Up, Down, Left, Right)	Navigates through menus and options.
ENTER (Center button)	Confirms selections.
RETURN / EXIT	Goes back to the previous screen or exits the current menu.
INFO	Displays information about the current program or input.
CH LIST	Displays the channel list.
TOOLS	Accesses quick settings or tools menu.
W.LINK	Wireless Link function, if supported by TV.

Button	Function
Color Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions within menus or applications.
CC	Activates/deactivates Closed Captions.
MTS	Multi-channel Television Sound (audio language/mode).
DMA	Direct Media Access, if supported by TV.
E.MODE	Picture/Sound Mode selection.
P.SIZE	Picture Size/Aspect Ratio adjustment.
FAV.CH	Accesses Favorite Channels.
Playback Controls (Rewind, Play/Pause, Fast Forward, Stop)	Controls media playback on compatible devices or TV functions.

MAINTENANCE

Cleaning the Remote Control

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote control's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or improper operation. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote control is not working.	• Batteries: Check if batteries are inserted correctly with correct polarity (+/-). Replace old or dead batteries with new AAA alkaline batteries. • Line of Sight: Ensure there are no obstructions between the remote control and the TV's infrared receiver. Point the remote directly at the TV. • Distance: Make sure you are within the effective operating range of the remote control. • TV Compatibility: Verify that your Samsung TV model is listed as compatible with the BN59-00673A remote control.

Problem	Possible Cause / Solution
Some buttons are not responding.	• Batteries: Low battery power can cause intermittent button response. Replace batteries. • Stuck Buttons: Check if any buttons are physically stuck or jammed. • TV Functionality: Some buttons may only function with specific TV models or in certain modes (e.g., Smart Hub buttons if your TV does not have Smart Hub).

SPECIFICATIONS

Feature	Detail
Model Number	BN59-00673A (N-TV REMOTE BN59-00673A)
Brand	ECONTROLLY
Compatible Devices	Samsung Televisions (various models including LN40A550P3FXZA, HL50A650, etc.)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounce

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question