

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› New AKB72914238 Remote Control for LG TV Sub 42PJ350 42PJ350-UB 50PJ350 AKB73615322 AKB72914201 AKB72914207 AKB72914209

ECONTROLLY NEW TV REMOTE AKB72914238

User Manual

ECONTROLLY AKB72914238 Remote Control

INTRODUCTION

This manual provides instructions for the ECONTROLLY AKB72914238 Replacement Remote Control, designed for use with various LG TV models. This remote control is a direct replacement and requires no programming for operation.

Package Contents:

- 1 x ECONTROLLY AKB72914238 Remote Control

COMPATIBILITY

This remote control is compatible with the following LG TV models:

- LG TV 42PJ350
- LG TV 42PJ350-UB
- LG TV 50PJ350
- Substitutes for AKB72914201, AKB72914238, AKB72914207, AKB72914209, AKB73615322

SETUP

To begin using your ECONTROLLY AKB72914238 remote control, follow these simple steps:

1. Battery Installation:

Locate the battery compartment on the back of the remote control. Slide the battery cover downwards to open it.



Image: Rear view of the remote control with the battery cover removed, revealing the battery slots.

Insert two (2) new AAA alkaline batteries into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.

Close the battery cover by sliding it back into place until it clicks securely.

2. Initial Use:

No programming is required. Once batteries are installed, the remote control is ready for immediate use with compatible LG TV models.

OPERATING INSTRUCTIONS

The ECONTROLLY AKB72914238 remote control features standard buttons for navigating your LG TV. Refer to the image below for button layout and descriptions.





Image: Front view of the ECONTROLLY AKB72914238 remote control, displaying all functional buttons.

Remote Control Button Functions

Button	Function
POWER (●)	Turns the TV On or Off.
ENERGY SAVING	Adjusts the TV's energy saving mode.
AV MODE	Cycles through various AV modes.
INPUT	Selects the input source (HDMI, AV, Component, etc.).
TV	Switches to TV mode.
Number Buttons (0-9)	Directly selects TV channels.
LIST	Displays the channel list.
FLASHBK	Returns to the previously viewed channel.
VOL +/-	Adjusts the volume level.
CH +/-	Changes the TV channel up or down.
MUTE	Mutes or unmutes the TV sound.
MENU	Opens the main TV menu.
Q.MENU	Opens the Quick Menu for common settings.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menu options.
ENTER	Confirms a selection in menus.
BACK	Returns to the previous screen or menu.
INFO	Displays information about the current program or input.
EXIT	Exits the current menu or function.
Color Buttons (Red, Green, Yellow, Blue)	Perform specific functions depending on the TV menu or application.

Button	Function
Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward)	Controls playback of media content.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote control. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.
- **Avoid Extreme Conditions:** Do not expose the remote control to direct sunlight, high temperatures, humidity, or water. Avoid dropping the remote or subjecting it to strong impacts.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

Common Issues and Solutions

Problem	Solution
Remote control is not working.	◦ Ensure batteries are inserted correctly with the correct polarity (+/-). ◦ Replace old batteries with new AAA alkaline batteries. ◦ Check for any obstructions between the remote control and the TV's infrared receiver. ◦ Ensure you are within the effective range of the TV's IR receiver.
Some buttons are not responding.	◦ Check if the button is stuck or dirty. Clean the remote as per maintenance instructions. ◦ Ensure the remote is pointed directly at the TV's IR sensor. ◦ Verify that the TV model is listed under the compatible models.
Remote control works intermittently.	◦ Batteries may be low. Replace them with new ones. ◦ Ensure there is no strong light source (like direct sunlight or bright fluorescent lights) interfering with the IR signal.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	AKB72914238 (NEW TV REMOTE AKB72914238)
Brand	ECONTROLLY
Connectivity Technology	Infrared (IR)
Compatible Devices	LG Televisions (Specific models listed in Compatibility section)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches (approx.)
Item Weight	3.2 ounces (approx.)
Special Feature	Ergonomic design

© 2024 ECONTROLLY. All rights reserved.

For support, please refer to your product's purchase documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question