

## JustFine LYSB01LWJ9GF4

# JustFine Replacement Remote Control Instruction Manual

Compatible with Samsung BD-F5700/ZA, AK59-00173A, BDHM57C, BDF6700ZA Blu-Ray Disc Players

## INTRODUCTION

---

This document provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your JustFine replacement remote control. This remote is designed to be compatible with various Samsung Blu-Ray Disc Player models, including BD-F5700/ZA, AK59-00173A, BDHM57C, and BDF6700ZA.

Please read this manual carefully to ensure proper use and to maximize the lifespan of your remote control.

## SETUP

---

### 1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



**Figure 1:** Back of the remote control, illustrating the battery compartment location. The text visible on the remote indicates that if the backlight button is set to 'ON', battery consumption will be higher.

**2. Initial Use**

This replacement remote control is pre-programmed and does not require any additional programming. Once batteries are installed, it is ready for immediate use with compatible Samsung Blu-Ray Disc Players.

## OPERATING INSTRUCTIONS

---

The remote control provides full functionality for your compatible Samsung Blu-Ray Disc Player. Point the remote directly at the player's infrared sensor for optimal performance.

- **Power Button:** Turns the Blu-Ray player on or off.
- **Playback Controls:** Includes Play, Pause, Stop, Fast Forward, Rewind, and Skip (Chapter/Track) buttons for media control.
- **Navigation Pad:** Up, Down, Left, Right arrows, and an Enter/OK button for menu navigation and selection.
- **Menu/Home:** Accesses the player's main menu or home screen.
- **Volume Controls:** Adjusts the audio output level.
- **Number Pad:** For direct input of track numbers or other numerical selections.
- **Function Buttons:** Additional buttons may be present for specific player features (e.g., Disc Menu, Title, Tools, Info). Refer to your Blu-Ray player's original manual for specific functions of these buttons.

## MAINTENANCE

---

### Cleaning the Remote

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or solvents, as these can damage the remote's finish or internal components.

### Battery Care

- Replace batteries when the remote's response becomes sluggish or inconsistent.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.
- As indicated on the remote, if a backlight feature is present and set to 'ON', battery life will be consumed more quickly. Consider turning off backlighting if not essential to extend battery life.

## TROUBLESHOOTING

---

### Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh batteries if necessary.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the Blu-Ray player's infrared sensor.
- **Distance:** Ensure you are within the effective operating range of the remote control (typically up to 20 feet).
- **Player Sensor:** Verify that the Blu-Ray player's infrared sensor is clean and not covered.

### Specific Buttons Not Working

If only certain buttons are unresponsive, ensure you are using the remote with a compatible Samsung Blu-Ray Disc Player model. While this remote is a replacement, some advanced functions might vary slightly

depending on the specific player model.

## SPECIFICATIONS

<b>Brand</b>	JustFine
<b>Model Number</b>	LYSB01LWJ9GF4
<b>Compatible Devices</b>	Samsung DVD/Blu-ray Players (BD-F5700/ZA, AK59-00173A, BDHM57C, BDF6700ZA)
<b>Color</b>	Black
<b>Product Dimensions</b>	4.53 x 1.57 x 1.38 inches
<b>Item Weight</b>	2.39 ounces
<b>Max Number of Supported Devices</b>	1

## WARRANTY INFORMATION

This JustFine replacement remote control comes with a **30-day quality warranty**. We also offer a money-back guarantee and hassle-free returns within this period. Please retain your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

Should you encounter any problems or have questions regarding your remote control, please do not hesitate to contact us. Our customer support team is available to assist you.

**Contact:** Please refer to your purchase platform or packaging for specific email contact details.