

[Manuals.plus](#) /

› [UAC](#) /

› Universal Air Conditioner BM 9193C HVAC Blower Motor - Instruction Manual

UAC BM 9193C

Universal Air Conditioner BM 9193C HVAC Blower Motor - Instruction Manual

Model: BM 9193C

INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of the UAC BM 9193C HVAC Blower Motor. The UAC brand is recognized for manufacturing aftermarket air conditioning parts that meet or exceed original equipment (OE) specifications, ensuring reliable performance and a precise fit. This blower motor is a critical component of your vehicle's heating, ventilation, and air conditioning (HVAC) system, responsible for circulating air through the cabin.

PRODUCT OVERVIEW

The UAC BM 9193C is an aftermarket HVAC blower motor designed for specific vehicle applications. It features a durable construction and is engineered to deliver consistent airflow for optimal climate control within your vehicle.



Figure 1: Front view of the UAC BM 9193C HVAC Blower Motor, showing the fan cage and motor housing.



Figure 2: Rear view of the UAC BM 9193C HVAC Blower Motor, highlighting the electrical connector and mounting points.

WHAT'S IN THE BOX

Upon opening the package, you should find the following components:

- One (1) UAC BM 9193C HVAC Blower Motor
- Any necessary AC parts for installation (as specified by the manufacturer)

Please inspect all components for any signs of damage during shipping. If any parts are missing or damaged, contact your seller or UAC customer support immediately.

INSTALLATION (SETUP)

Installation of an HVAC blower motor typically involves working with electrical components and accessing confined spaces within the vehicle's dashboard or engine bay. Due to the complexity and potential safety risks, **professional**

installation by a certified automotive technician is highly recommended.

If you choose to perform the installation yourself, ensure you have the necessary tools, technical knowledge, and a vehicle-specific repair manual. Always follow these general safety guidelines:

- **Disconnect the Vehicle Battery:** Before beginning any work, disconnect the negative terminal of your vehicle's battery to prevent electrical shorts and accidental activation of electrical systems.
- **Locate the Blower Motor:** Refer to your vehicle's service manual for the exact location of the blower motor. It is commonly found under the dashboard on the passenger side.
- **Remove Obstructions:** You may need to remove trim panels, glove compartments, or other components to gain access to the blower motor.
- **Disconnect Wiring and Hoses:** Carefully disconnect the electrical connector(s) and any associated hoses or ducts from the old blower motor.
- **Remove Old Blower Motor:** Unfasten the mounting screws or clips holding the old blower motor in place and carefully remove it.
- **Install New Blower Motor:** Position the new UAC BM 9193C blower motor in the housing, ensuring it seats correctly. Secure it with the original mounting screws or clips.
- **Reconnect Wiring and Hoses:** Reconnect all electrical connectors and hoses/ducts, ensuring a secure and proper fit.
- **Reassemble Vehicle Components:** Reinstall any trim panels, glove compartments, or other components that were removed.
- **Reconnect Battery:** Reconnect the negative terminal of your vehicle's battery.
- **Test System:** Start the vehicle and test the HVAC system to ensure the blower motor operates correctly at all fan speeds and that air flows properly through the vents.

Warning: Improper installation can lead to electrical issues, damage to the blower motor or vehicle, or personal injury. If you are unsure about any step, consult a professional.

OPERATION

The UAC BM 9193C HVAC Blower Motor operates as an integral part of your vehicle's climate control system. Once installed, its operation is controlled directly by your vehicle's HVAC controls (fan speed knob/buttons). When you select a fan speed, the blower motor receives an electrical signal to rotate its fan cage, drawing air from outside or recirculating cabin air, and pushing it through the evaporator (for cooling) or heater core (for heating) and then out through the vehicle's vents.

- **Fan Speed Control:** Adjust the fan speed using your vehicle's dashboard controls. The blower motor will respond by increasing or decreasing its rotational speed, thereby controlling the volume of air moved.
- **Airflow Direction:** The blower motor works in conjunction with your vehicle's blend doors and vent selectors to direct airflow to the desired areas (e.g., dashboard vents, floor vents, defrost).

Ensure that the air intake vents (often located at the base of the windshield) are clear of debris to allow for unrestricted airflow into the system.

MAINTENANCE

While the UAC BM 9193C HVAC Blower Motor is designed for durability and requires minimal direct maintenance, regular attention to related HVAC components can prolong its lifespan and ensure optimal performance of your vehicle's climate control system.

- **Cabin Air Filter Replacement:** Regularly check and replace your vehicle's cabin air filter according to your vehicle manufacturer's recommendations. A clogged cabin air filter restricts airflow, forcing the blower motor to work harder,

which can lead to premature wear or failure.

- **Keep Air Intakes Clear:** Ensure that the external air intake vents (typically at the base of the windshield) are free from leaves, dirt, and other debris. Blockages can reduce airflow and introduce foreign objects into the blower motor assembly.
- **Listen for Unusual Noises:** Pay attention to any unusual noises (e.g., squealing, grinding, rattling) coming from the blower motor area. These could indicate a failing motor, debris in the fan cage, or worn bearings. Address such issues promptly.
- **Check Electrical Connections:** Periodically, or if experiencing intermittent operation, inspect the electrical connections to the blower motor for corrosion or looseness.

TROUBLESHOOTING

If you experience issues with your vehicle's HVAC blower motor, consider the following common problems and potential solutions. Always consult a professional technician if you are unsure about diagnosing or repairing automotive electrical systems.

Problem	Possible Cause	Solution
Blower Motor Not Working at Any Speed	Blown fuse, faulty blower motor resistor, faulty blower motor, wiring issue.	Check vehicle's fuse box for a blown fuse related to the HVAC system. Inspect blower motor resistor. Test blower motor for power and ground. Consult a professional.
Blower Motor Only Works on High Speed	Faulty blower motor resistor.	Replace the blower motor resistor. This component controls fan speeds.
Weak Airflow from Vents	Clogged cabin air filter, obstructions in air ducts, failing blower motor.	Replace cabin air filter. Check for debris in air intake or ducts. Inspect blower motor for proper operation.
Unusual Noises (Squealing, Grinding, Rattling)	Debris in fan cage, worn blower motor bearings, loose mounting.	Inspect fan cage for debris and remove if present. If noise persists, the motor bearings may be failing, requiring replacement. Ensure motor is securely mounted.
Intermittent Operation	Loose electrical connection, failing blower motor, intermittent resistor issue.	Check all electrical connections for tightness and corrosion. Test blower motor and resistor for consistent operation.

Always ensure the vehicle's battery is disconnected before performing any inspections or repairs on electrical components.

SPECIFICATIONS

The following are key specifications for the UAC BM 9193C HVAC Blower Motor:

Attribute	Detail
Brand	UAC (Universal Air Conditioner)
Model Name	UAC (BM 9193C) HVAC Blower Motor

Attribute	Detail
Item Model Number	BM 9193C
Manufacturer Part Number	BM 9193C
Item Weight	3.61 Pounds (approximately 1.64 kg)
Product Dimensions	8 x 8 x 8 inches (approximately 20.32 x 20.32 x 20.32 cm)
UPC	711307424559
Country Of Origin	China
First Available Date	September 17, 2016

WARRANTY INFORMATION

UAC parts are manufactured and tested to meet or exceed OE specifications, reflecting the brand's commitment to quality and durability. For specific warranty terms and conditions applicable to your UAC BM 9193C HVAC Blower Motor, please refer to the warranty documentation included with your purchase or contact the authorized seller from whom you purchased the product. Warranty coverage typically addresses manufacturing defects and material flaws under normal use.

It is important to retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

Should you require technical assistance, have questions regarding installation, or need to inquire about warranty services for your UAC BM 9193C HVAC Blower Motor, please contact your authorized retailer or the manufacturer directly. For general information about UAC products, you may visit the official UAC website. Always provide your product model number (BM 9193C) and proof of purchase when seeking support.

Online Resources:

- [UAC Brand Page on Amazon](#)
- Consult your vehicle's specific service manual for detailed installation and system diagrams.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question