

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [kwmobile](#) /

› [kwmobile Wooden LED Alarm Clock User Manual](#)

kwmobile 38876

kwmobile Wooden LED Alarm Clock User Manual

Model: 38876

INTRODUCTION

Thank you for purchasing the kwmobile Wooden LED Alarm Clock. This digital clock combines modern design with practical features, making it a perfect addition to any room. It displays time, date, and temperature, and offers multiple activation modes for convenience. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance of your device.

PACKAGE CONTENTS

- 1 x kwmobile Wooden LED Alarm Clock
- 1 x USB Power Cable (Power adapter not included)
- 1 x User Manual (English/German)



Image: The kwmobile Wooden LED Alarm Clock shown with its included USB power cable. The clock displays 13:37 and 24°C.

SETUP

Powering the Device

The alarm clock can be powered in two ways:

1. **USB Power:** Connect the provided USB cable to the DC 5V port on the back of the clock and plug the other end into a USB power adapter (not included) or a computer USB port. This is the recommended method for continuous operation.
2. **Battery Power:** For portable use, insert 3 AAA batteries (not included) into the battery compartment on the back of the clock. Note that battery operation is for a limited duration due to energy-saving features.



Image: Rear view of the alarm clock, highlighting the battery compartment and control buttons labeled SET, UP, and DOWN, along with the DC 5V input.

OPERATING INSTRUCTIONS

Basic Display Modes

The clock can display time, date, and temperature. Press the **SET** button to cycle through display modes:

- **dP-1:** Time and Temperature display alternately.
- **dP-2:** Time, Date, and Temperature display alternately.
- **dP-3:** Time display only.



Image: The alarm clock displaying 7:12 and 23°C, positioned on a wooden bedside table next to a pillow and a vase with flowers.



Image: The alarm clock displaying 7:13 and 23°C, placed on a grey desk alongside notebooks and a pencil, with a potted plant in the background.

Setting Time and Date

1. Press and hold the **SET** button until the display flashes.
2. Use the **UP** and **DOWN** buttons to adjust the value.
3. Press **SET** again to confirm and move to the next setting (Year, Month, Day, 12/24 Hour Format, Hour, Minute).
4. Once all settings are adjusted, press **SET** to exit the setting mode.

Setting Alarms

The clock supports up to three independent alarms (A1, A2, A3).

1. In normal display mode, press the **UP** button to toggle alarm ON/OFF. An alarm icon will appear when active.
2. To set an alarm time, press and hold the **UP** button until "A1" flashes.
3. Use **UP** and **DOWN** to adjust the hour, then press **SET**.
4. Adjust the minute, then press **SET**.

5. Repeat for A2 and A3 if desired.

Sound and Touch Activation

To conserve energy, especially when running on batteries, the display can be set to turn off automatically and reactivate with sound or touch.

- **Touch Activation:** Gently tap the top of the clock to activate the display.
- **Clap Activation:** Make a sound (e.g., clap your hands) near the clock to activate the display.



Image: A hand gently touching the top of the alarm clock, illustrating the touch activation feature. The clock displays 13:37 and 24°C.

1.



2.



Image: Two hands clapping in front of the alarm clock, demonstrating the sound activation feature. The clock displays 13:37 and 24°C, with sound waves indicated.

MAINTENANCE

- Clean the clock surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the clock to direct sunlight, extreme temperatures, or high humidity.
- If using batteries, remove them if the clock will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Display is dim or off.	Check power connection (USB cable). If on battery power, batteries may be low or depleted. Replace batteries. The clock might be in energy-saving mode. Tap or clap to activate.

Problem	Possible Cause / Solution
Clock not responding to touch/clap.	Ensure the sound/touch activation feature is enabled (refer to operating instructions). Check power supply.
Alarm does not sound.	Ensure the alarm is set and activated (alarm icon visible). Check alarm volume settings (if applicable, though not mentioned in features).

SPECIFICATIONS

Brand	kwmobile
Model Number	38876
Color	Birch - White
Dimensions (L x W x H)	15 x 7 x 4.2 cm
Weight	220 g
Material	Synthetic materials
Display Type	Digital
Special Features	Temperature display, Calendar display, Alarm
Power Source	Battery powered (USB cable included for external power)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official kwmobile website. Keep your proof of purchase for any warranty claims.

© 2024 kwmobile. All rights reserved.
For more products, visit [kwmobile's Amazon Store](#).

Documents - kwmobile – 38876

no relevant documents