

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Simple Houseware](#) /

› [Simple Houseware Under Sink 2-Tier Heavy Duty Expandable Rack Organizer Instruction Manual](#)

## Simple Houseware BO-014-1

# Simple Houseware Under Sink 2-Tier Heavy Duty Expandable Rack Organizer

Model: BO-014-1 | Brand: Simple Houseware

## INTRODUCTION

This instruction manual provides detailed guidance for the assembly, operation, and maintenance of your Simple Houseware Under Sink 2-Tier Heavy Duty Expandable Rack Organizer. Please read this manual thoroughly before use to ensure proper setup and to maximize the product's functionality.

## SAFETY INFORMATION

- Ensure all components are securely fastened during assembly.
- Do not overload the shelves. Each tier supports a maximum of 22 lbs (10 kg).
- Keep small parts away from children to prevent choking hazards.
- Avoid placing corrosive or excessively hot items directly on the shelves.
- Position the organizer on a stable, level surface to prevent tipping.

## PACKAGE CONTENTS

Verify that all the following components are included in your package:


- Metal Frame (2 side frames, 2 expandable horizontal bars)
- Large Shelf Panels (3 pieces)
- Small Shelf Panels (4 pieces)
- Assembly Screws and Nuts
- Instruction Manual

## SETUP AND ASSEMBLY

Follow these steps to assemble your under-sink organizer:


1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Ensure all listed components are present.
2. **Assemble the Frame:** Attach the two side frames to the expandable horizontal bars. The bars slide into the designated holes on the side frames. Secure them using the provided screws and nuts. Ensure the counter-sunk holes on the bars face outwards for proper shelf panel placement.
3. **Adjust Width:** Extend the horizontal bars to the desired width (15.75" to 25") to fit your under-sink cabinet. Ensure the frame is stable and even.
4. **Install Shelf Panels:** Place the large and small perforated shelf panels onto the horizontal bars. The panels can be positioned and removed as needed to accommodate plumbing pipes or taller items. There are 4 adjustable height levels for the shelves.

# ENSURE IT FITS

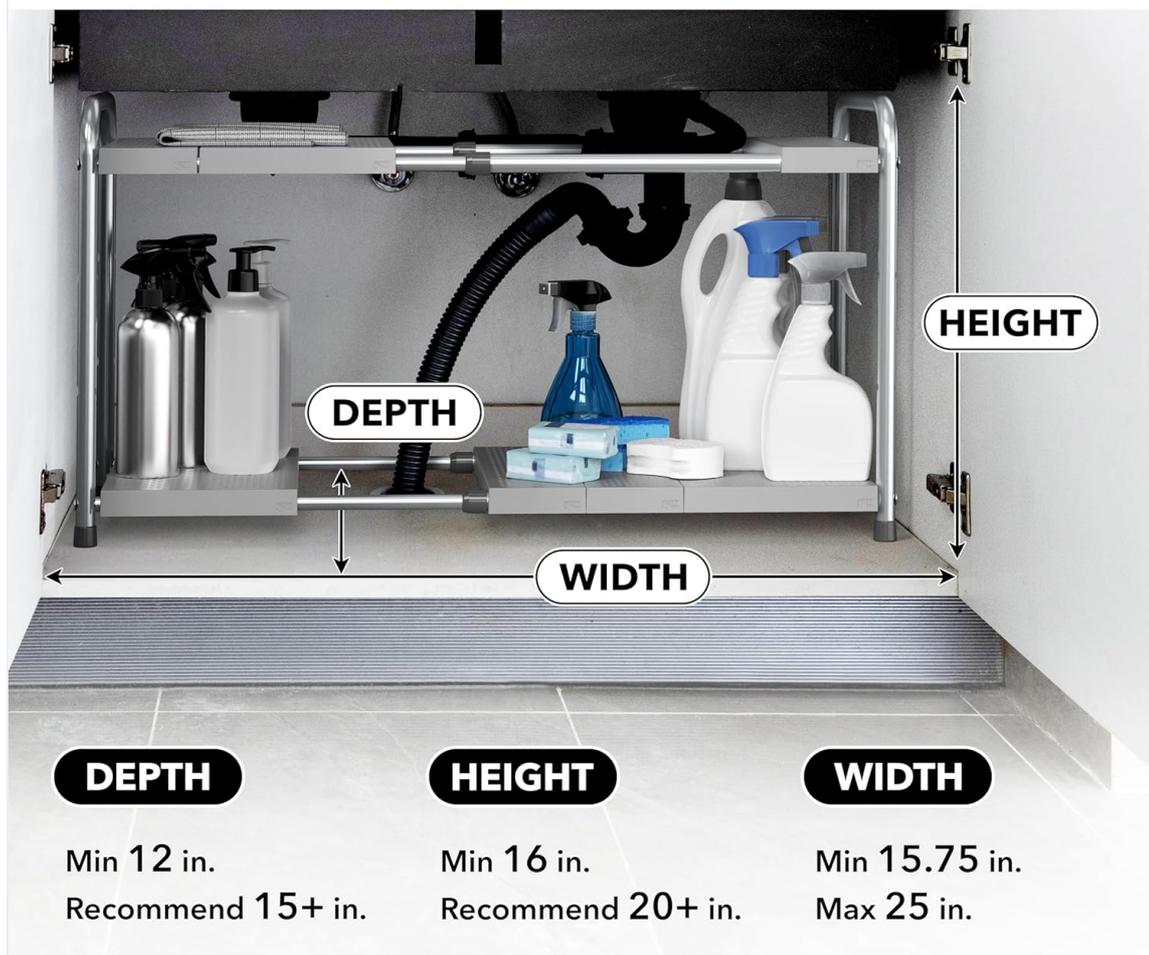

*Image: Assembly diagram illustrating the frame setup and shelf panel placement.*

5. **Final Placement:** Carefully slide the assembled organizer into your under-sink cabinet. Adjust the shelf panels as necessary to fit around pipes and maximize storage space.

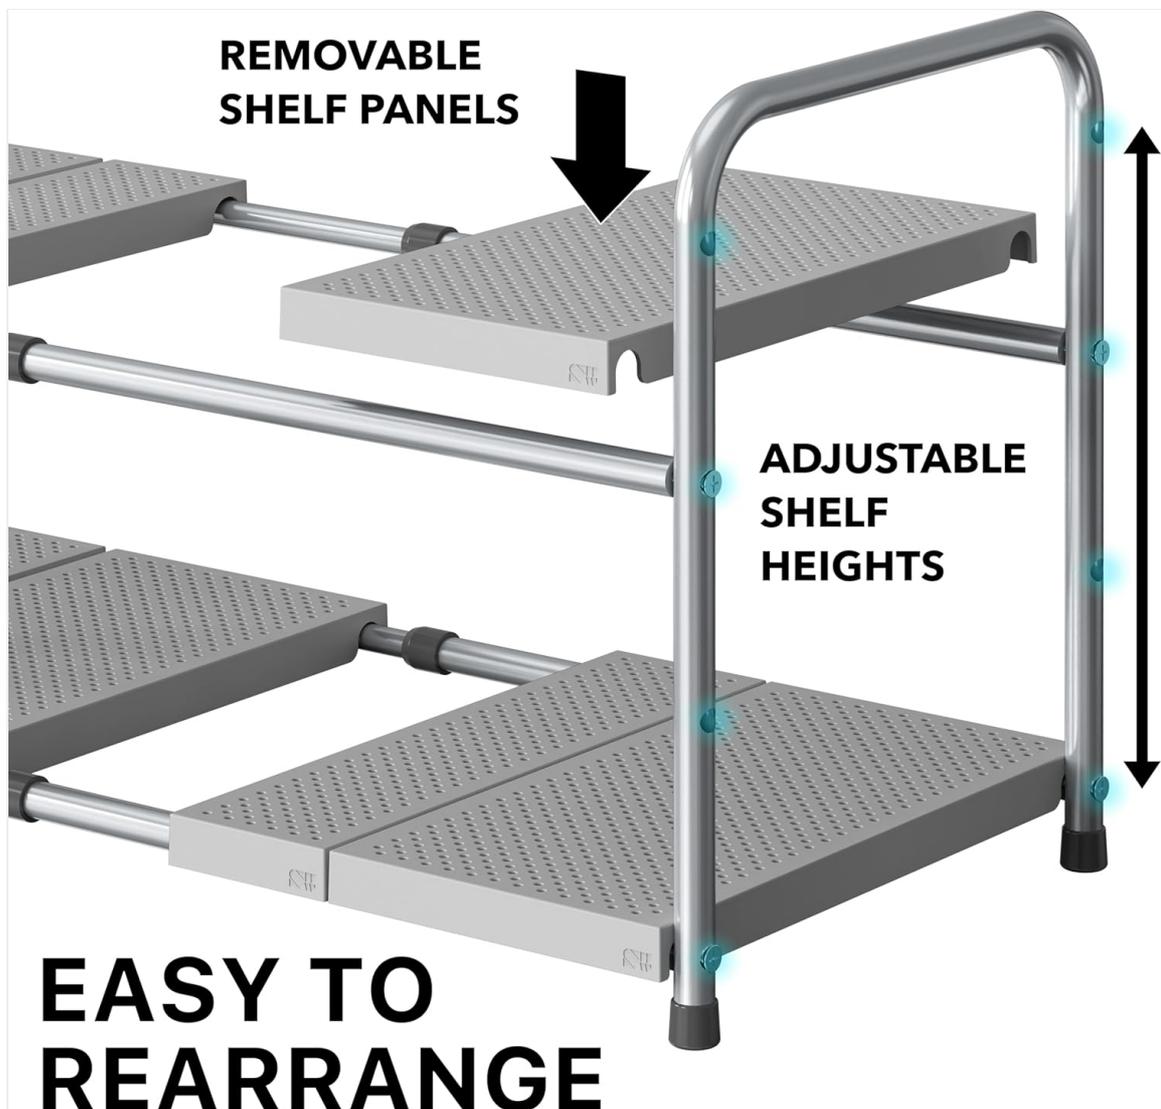


*Image: Close-up of the adjustable shelf heights and removable panels.*

## OPERATING INSTRUCTIONS

The Simple Houseware Under Sink Organizer is designed for flexible use:

- **Adjustable Width:** The organizer's width can be adjusted from 15.75 inches to 25 inches to fit various cabinet sizes. Simply loosen the screws on the horizontal bars, slide to the desired width, and re-tighten.
- **Adjustable Shelf Height:** The shelf panels can be placed at 4 different height levels on the side frames. This allows for customization to accommodate items of varying heights.
- **Removable Panels:** Individual shelf panels can be easily removed or repositioned to create openings for plumbing pipes, garbage disposals, or other obstacles, ensuring a tailored fit for your specific under-sink area.

# FLEXIBLE LAYOUT TAILORED FIT

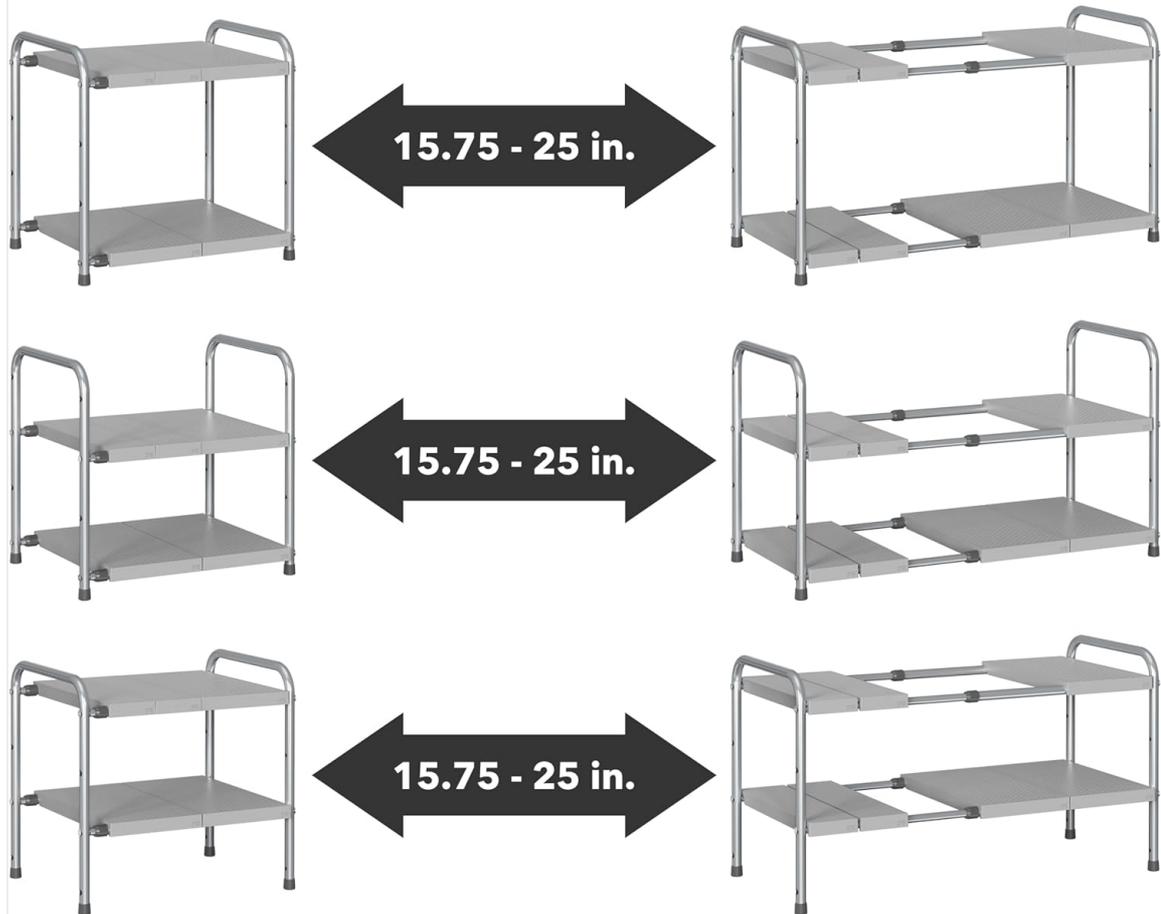

*Image: The organizer's width can be adjusted to fit various cabinet sizes.*



Image: Examples of flexible layouts to accommodate pipes and items.

## MAINTENANCE

To ensure the longevity and cleanliness of your organizer:

- **Cleaning:** Wipe down the metal frame and perforated shelves with a damp cloth and mild detergent. Avoid abrasive cleaners that may damage the finish.
- **Drying:** Ensure all parts are thoroughly dry after cleaning to prevent rust or water spots.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.

## TROUBLESHOOTING

Issue	Possible Cause	Solution
Organizer is wobbly.	Screws are loose or not fully tightened.	Ensure all screws are securely tightened. Check that the frame is evenly extended.

Issue	Possible Cause	Solution
Shelf panels do not fit.	Incorrect panel placement or frame not adjusted correctly.	Verify the frame width is appropriate for your space. Reposition or remove panels to accommodate pipes.
Items slide off shelves.	Uneven surface or excessive weight.	Ensure the organizer is on a level surface. Do not exceed the 22 lbs weight limit per tier.

## SPECIFICATIONS

- **Model:** BO-014-1
- **Material:** Metal
- **Color:** Silver
- **Product Dimensions:** 11.75"D x 15.75"-25"W x 15.25"H
- **Shelf Type:** Tiered Shelf
- **Number of Shelves:** 2 (with 7 removable panels)
- **Weight Capacity:** 22 lbs per tier
- **Special Features:** 4 Adjustable Shelf Height Levels, 7 Removable Shelf Panels, Expandable Width from 15.75" to 25"
- **Assembly Required:** Minimal assembly for initial setup

## PRODUCT VIDEOS

### Product Overview Video

Your browser does not support the video tag.

*Video: A comprehensive overview of the Simple Houseware Under Sink Organizer, demonstrating its features and benefits.*

## WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Simple Houseware website. Keep your purchase receipt for any warranty claims.