



Manuals.plus /

› CUSIMAX /

› Cusimax 140W Mini Coffee Grinder User Manual

CUSIMAX CMCG-140B

Cusimax 140W Mini Coffee Grinder User Manual

Model: CMCG-140B

INTRODUCTION

This manual provides important information for the safe and efficient operation of your Cusimax 140W Mini Coffee Grinder. Please read it thoroughly before first use and retain it for future reference.



Image: The Cusimax 140W Mini Coffee Grinder, black in color, with a transparent lid and a power button on top. A pile of ground coffee is next to it.

SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before cleaning or when not in use.
- Do not immerse the motor base in water or any other liquid.
- Keep hands and utensils out of the grinding chamber during operation to prevent injury.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Supervise children to ensure they do not play with the appliance.
- Do not use the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any manner.

- This appliance is for household use only. Do not use outdoors.
- Do not use for ice cubes or wet materials.
- Overheat protection is built-in to prolong service life. Allow the unit to cool down if it stops due to overheating.

PRODUCT COMPONENTS

- Transparent Lid
- Stainless Steel Blades
- Stainless Steel Grinding Bowl
- Motor Base with Non-slip Feet
- Power Cord with Cable Tidy



Image: Top-down view of the grinder's interior, showing coffee beans surrounding the central stainless steel blade assembly.

SETUP

1. Unpack the grinder and all its components.
2. Wipe the exterior of the unit with a damp cloth. Ensure the grinding bowl and blades are clean and dry before first use.
3. Place the grinder on a stable, flat, and dry surface.
4. Ensure the power cord is easily accessible and not tangled.

OPERATING INSTRUCTIONS

Grinding Coffee Beans, Nuts, or Spices

1. Ensure the grinder is unplugged before adding ingredients.
2. Fill the stainless steel grinding bowl with up to 40g of coffee beans, nuts, or spices. Do not overfill.
3. Place the transparent lid securely onto the grinder. Ensure it is properly seated to activate the micro-switch.
4. Plug the grinder into a suitable power outlet (220-240V, 50/60Hz).
5. Press and hold the power button on the lid to start grinding. The grinder will operate as long as the button is pressed.
6. Observe the grinding process through the transparent lid. For fine grounds, grind for approximately 40 seconds. For coarser grounds, grind for a shorter duration.
7. Release the power button to stop grinding.
8. Unplug the grinder from the power outlet.
9. Carefully remove the lid and pour out the ground contents.



Image: Top-down view of the grinder's interior, showing finely ground coffee powder covering the blades.

Note: The grinder features a pulse switch, allowing you to control the grinding consistency by pressing and releasing the button in short bursts.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your grinder.

1. Always unplug the grinder before cleaning.
2. Clean the outside and inside of the grinding bowl with a dry cloth. A small brush can be used to remove stubborn coffee grounds from around the blades.
3. Do not rinse the grinding bowl or motor base under water. The unit is not submersible.
4. Wipe the transparent lid with a damp cloth and dry thoroughly.
5. Ensure all parts are completely dry before storing.

Storage

Store the coffee grinder in a dry cupboard. The power cable can be wrapped around the cable tidy underneath the device for neat storage.



Image: Bottom view of the Cusimax coffee grinder, illustrating the integrated cable tidy mechanism for convenient cord storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not turn on.	Not plugged in; Lid not properly seated; Overheat protection activated.	Ensure unit is securely plugged into a working outlet. Check that the lid is firmly in place. If unit was recently used, allow it to cool down for 15-20 minutes.
Grinding is inconsistent.	Too many ingredients; Not grinding long enough; Ingredients are too hard/wet.	Do not exceed 40g capacity. Grind for a longer duration for finer results. Ensure only dry ingredients are used. Shake the grinder gently during operation to redistribute contents.
Motor sounds strained.	Overfilled; Ingredients are too hard.	Reduce the amount of ingredients. Ensure only recommended ingredients (coffee beans, nuts, spices) are used. Do not use for ice cubes or wet materials.

SPECIFICATIONS

Model: CMCG-140B

Power: 140W

Voltage: 220-240V, 50/60Hz

Number of Blades: 2

Blade Material: Stainless Steel

Capacity: 40g

Body Material: ABS

Switch Type: Micro-switch

Dimensions: 13 x 13 x 19 cm (approx.)

Item Weight: 800 g (approx.)

WARRANTY AND SUPPORT

CUSIMAX offers a **30-day money-back guarantee** and an **18-month warranty** for this product.

For warranty claims, technical support, or any inquiries, please contact CUSIMAX customer service through their official channels or the retailer from whom the product was purchased.

Please retain your proof of purchase for warranty validation.

