

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [QUMOX](#) /

› [QUMOX L165U 2.4GHz Wireless Gamepad Instruction Manual](#)

QUMOX L165U

QUMOX L165U 2.4GHz Wireless Gamepad Instruction Manual

Model: L165U

INTRODUCTION

Thank you for purchasing the QUMOX L165U 2.4GHz Wireless Gamepad. This high-quality game controller is designed for use with PC and Android devices, offering a reliable 2.4GHz wireless connection for an enhanced gaming experience. Please read this manual carefully to ensure proper setup and operation of your new gamepad.



● **Piattaforma hardware
Computer desktop**

● **Sistema operativo
Android**

● **Tecnologia di
connettività
Bluetooth**

Figure 1: QUMOX L165U Gamepad with included USB adapter and OTG connection kit.

PACKAGE CONTENTS

Ensure all items are present in your package:

- 1x QUMOX L165U Gamepad
- 1x 2.4GHz USB Wireless Adapter
- 1x OTG Connection Kit (Micro USB to USB-A adapter)

SETUP

1. Battery Installation

The QUMOX L165U Gamepad is powered by 2 AAA batteries (not included). To install the batteries:

1. Locate the battery compartment on the back of the gamepad.
2. Slide open the battery cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery cover securely.



Figure 2: Open battery compartment for AAA battery installation.

2. Connecting to a PC

1. Plug the 2.4GHz USB Wireless Adapter into an available USB port on your PC.
2. Turn on the gamepad by pressing the 'START' button. The gamepad will automatically attempt to connect.
3. The PC should recognize the gamepad and install necessary drivers automatically.
4. If the gamepad does not connect, press the 'MODE' button on the gamepad to cycle through connection modes until it is recognized by your PC.

3. Connecting to an Android Device (with OTG support)

1. Connect the OTG Connection Kit to your Android device's Micro USB port.
2. Plug the 2.4GHz USB Wireless Adapter into the USB-A end of the OTG Connection Kit.
3. Turn on the gamepad by pressing the 'START' button. The gamepad will automatically attempt to connect.
4. Your Android device should recognize the gamepad.
5. If the gamepad does not connect, press the 'MODE' button on the gamepad to cycle through connection modes until it is recognized by your Android device.



Figure 3: OTG Connection Kit for Android device connectivity.

OPERATING INSTRUCTIONS

Once connected, your QUMOX L165U Gamepad is ready for use. The layout is standard for most game controllers.



Figure 4: Top view of the QUMOX L165U Gamepad, highlighting button layout.

- **Directional Pad (D-Pad):** For precise directional input.
- **Analog Joysticks:** Two analog sticks for 360-degree movement and camera control.
- **Action Buttons (A, B, X, Y):** Standard action buttons for in-game commands.
- **Shoulder Buttons (L1, R1) & Triggers (L2, R2):** Located on the top of the gamepad for additional actions.
- **SELECT/BACK Button:** Typically used for menu navigation or specific in-game functions.
- **START Button:** Used to pause games or confirm selections.
- **MODE Button:** Cycles through different operating modes (e.g., Android, PC) if automatic detection fails.

Video Demonstration

Your browser does not support the video tag.

Video 1: A seller-provided overview of a 2-pack wireless controller, demonstrating its features and compatibility. While showing a similar product, it illustrates general wireless controller usage and setup.

Maintenance

- Cleaning:** Use a soft, dry cloth to clean the gamepad. Avoid using harsh chemicals or abrasive materials.
- Storage:** Store the gamepad in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** Remove batteries if the gamepad will not be used for an extended period to prevent leakage.

Troubleshooting

Problem	Possible Cause	Solution
Gamepad does not connect.	Low batteries, incorrect mode, adapter not properly inserted.	Replace batteries. Press the 'MODE' button to cycle through modes. Ensure USB adapter is fully inserted into PC or OTG adapter.
Buttons or joysticks are unresponsive.	Connection issue, game incompatibility, physical damage.	Reconnect the gamepad. Check game settings for controller support. If issue persists, contact support.
Android device does not recognize gamepad.	Android device lacks OTG support, OTG adapter issue.	Verify your Android device supports OTG. Ensure OTG adapter is functioning correctly.

Specifications

Feature	Detail
Model Number	L165U
Connectivity Technology	2.4GHz Wireless (via USB Adapter)
Compatible Devices	PC, Android (with OTG support)
Power Source	2x AAA Batteries
Item Weight	5.3 ounces
Package Dimensions	8.07 x 5.63 x 2.95 inches
Color	Black

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official QUMOX website. Keep your proof of purchase for any warranty claims.

