

- [Manuals.plus](#) /
- › [Princess](#) /
 - › Princess 152007 Deluxe Bread Maker Instruction Manual

Princess 01.152007.01.001

Princess 152007 Deluxe Bread Maker Instruction Manual

Model: 01.152007.01.001 | Brand: Princess

1. INTRODUCTION

Welcome to the instruction manual for your new Princess 152007 Deluxe Bread Maker. This appliance is designed to simplify the process of baking fresh, homemade bread, offering a variety of pre-programmed settings including a dedicated gluten-free program. With its compact design, stainless steel casing, and user-friendly digital display, you can enjoy perfectly baked bread with minimal effort. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure optimal performance of your bread maker.



2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

3. PRODUCT COMPONENTS

Your Princess 152007 Deluxe Bread Maker comes with the following components:

- **Bread Maker Unit:** The main appliance with control panel and baking chamber.
- **Non-stick Baking Pan:** Removable pan for baking bread.
- **Kneading Hook:** For mixing and kneading dough inside the pan.
- **Measuring Cup:** For accurate measurement of liquid ingredients.
- **Measuring Spoon:** For accurate measurement of smaller ingredients like yeast, salt, or sugar.
- **Kneading Hook Removal Tool:** A hook-shaped tool to easily remove the kneading hook from the baked bread.



Image 3.1: All included components of the bread maker, laid out for clear identification.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the bread maker and all accessories from the packaging. Retain the packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the baking pan, kneading hook, measuring cup, and measuring spoon with warm, soapy water. Rinse thoroughly and dry all parts completely. Wipe the exterior of the bread maker with a damp cloth.
3. **Placement:** Place the bread maker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the appliance.
4. **Insert Baking Pan:** Place the non-stick baking pan into the bread maker's chamber. Press down firmly until it clicks into place.
5. **Attach Kneading Hook:** Insert the kneading hook onto the shaft at the bottom of the baking pan. Ensure it is securely seated.
6. **Power Connection:** Plug the power cord into a grounded electrical outlet. The bread maker will emit a short beep, and the display will light up, indicating it is ready for operation.

5. OPERATING INSTRUCTIONS

5.1 Adding Ingredients

Always add ingredients in the order specified by your recipe, typically liquids first, followed by dry ingredients, and finally yeast. Ensure all ingredients are at room temperature for best results.



Image 5.1: A user adding dry ingredients into the bread maker's pan.

5.2 Program Selection

The Princess 152007 features 19 pre-programmed settings to accommodate various bread types and other preparations. Use the "MENU" button to cycle through the programs displayed on the digital screen. Programs include:

- Basic Bread
- French Bread
- Whole Wheat Bread
- Quick Bread
- Sweet Bread

- Gluten-Free Bread (dedicated program for gluten intolerance)
- Dough (for pizza, pasta, etc.)
- Jam
- Yogurt
- Cake
- And many more...

5.3 Crust Browning and Loaf Size

After selecting a program, you can adjust the crust browning level (Light, Medium, Dark) and loaf size (500g or 750g) using the respective buttons on the control panel. The display will show your selections.

5.4 Delay Timer and Keep Warm Function

- **Delay Timer:** Use the timer buttons to set a delayed start time for your bread. This allows you to add ingredients in the evening and wake up to freshly baked bread. The maximum delay time is typically 13 hours.
- **Keep Warm:** After baking is complete, the bread maker automatically enters a 60-minute "Keep Warm" cycle to ensure your bread remains warm and fresh until you are ready to serve it.

5.5 Starting and Stopping

Press the "START/STOP" button to begin the selected program. To stop a program at any time, press and hold the "START/STOP" button for a few seconds until the machine resets.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your bread maker and ensure consistent baking results.

- **Always unplug the appliance** and allow it to cool completely before cleaning.
- **Baking Pan and Kneading Hook:** The non-stick baking pan and kneading hook should be washed by hand only with warm, soapy water. Do not use abrasive cleaners or metal scouring pads, as this can damage the non-stick coating. Rinse thoroughly and dry completely before storing.
- **Exterior:** Wipe the exterior of the bread maker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Interior Chamber:** Use a soft, damp cloth to wipe the interior of the baking chamber. Remove any crumbs or residue.
- **Storage:** Store the bread maker in a clean, dry place. Its compact size and integrated handle make it easy to store.

7. TROUBLESHOOTING GUIDE

If you encounter issues with your bread maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Bread does not rise or rises too much.	Incorrect yeast amount, expired yeast, water temperature too hot/cold, incorrect flour type.	Ensure yeast is fresh and active. Use correct measurements. Water should be lukewarm (around 40-45°C). Use bread flour for best results.

Problem	Possible Cause	Solution
Bread is too dense or heavy.	Too much flour, not enough liquid, insufficient kneading.	Accurately measure ingredients. Ensure the kneading hook is properly installed.
Bread sticks to the pan.	Damaged non-stick coating, pan not properly cleaned.	Ensure the pan is clean and dry. Avoid using metal utensils that can scratch the coating.
Machine does not start.	Not plugged in, power outage, program not selected.	Check power connection. Ensure a program is selected and the START/STOP button is pressed.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	01.152007.01.001
Brand	Princess
Capacity	500g to 750g (for 8 to 12 slices of bread)
Power	500 Watts
Voltage	240 Volts
Material	Stainless Steel (housing)
Dimensions (L x W x H)	14 x 18 x 36 cm (product dimensions) / 22.5P x 33.8I x 27H cm (packaging dimensions)
Weight	3 Kilograms
Number of Programs	19 (including Gluten-Free)
Features	Integrated display, Delay timer, Transparent viewing window, Jam function, Variable crust browning, Removable kneading paddle, Non-stick coating, Keep warm function.

9. WARRANTY AND SUPPORT

Your Princess 152007 Deluxe Bread Maker comes with a 24-month manufacturer's warranty, covering defects in materials and workmanship under normal household use. Please retain your proof of purchase for warranty claims.

For technical support, service, or warranty inquiries, please contact Princess customer service through their official website or the retailer where the product was purchased. Do not attempt to repair the appliance yourself.

For more information, visit the official Princess website or refer to the contact details provided with your purchase documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01LX6ID4V>

More documents and user manuals: <https://manuals.plus/>