

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Aluratek](#) /
- › [Aluratek 8" Slim Digital Photo Frame User Manual](#)

Aluratek ASDPF08F

Aluratek 8" Slim Digital Photo Frame User Manual

Model: ASDPF08F

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Aluratek 8" Slim Digital Photo Frame (Model: ASDPF08F). Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience.


The Aluratek Digital Photo Frame is designed to display your treasured photos and memories with incredible image clarity and vibrant colors on its TFT true color LCD. It features built-in storage, memory card reader, and USB support for easy media transfer.

2. PRODUCT OVERVIEW

Familiarize yourself with the components and features of your digital photo frame.



Figure 2.1: Angled view of the Aluratek 8" Slim Digital Photo Frame displaying a wedding photo. The frame is black with a sleek design, suitable for any home or office environment.

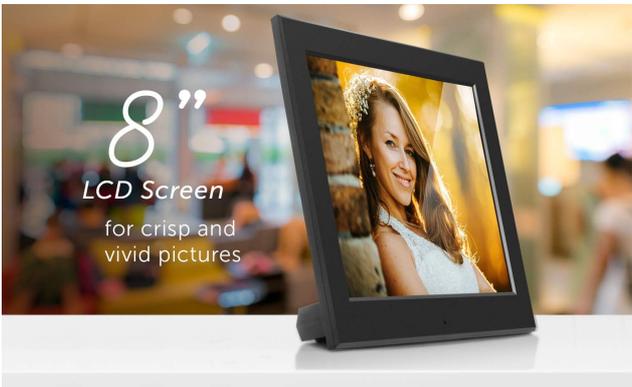

- 
 LCD Display
- 
 Photo Support
- 
 SD Card / USB Support
- 
 Photo Slideshow
- 
 Easy To Use
- 
 Clock & Calendar
- 
 Digital Signage Solution

Figure 2.2: Overview of the 8" LCD screen and key features including photo support, SD card/USB support, photo slideshow, easy to use, clock & calendar, and digital signage solution capabilities.



Figure 2.3: Two individuals interacting with the digital photo frame, demonstrating its use for sharing cherished memories. The frame is compact and easily viewable.



Figure 2.4: The slim profile of the digital photo frame, shown on a desk, highlighting its space-saving design suitable for various environments.



3. SETUP

- 1. Unpacking:** Carefully remove the digital photo frame and all accessories from the packaging. Ensure all components are present: Digital Photo Frame, Power Adapter, and User Manual.
- 2. Power Connection:** Connect the power adapter to the DC IN port on the back of the frame. Plug the other end of the adapter into a standard electrical outlet.
- 3. Stand Installation:** The frame comes with a built-in stand. Adjust the stand to your desired viewing angle.

- 4. Insert Media:** Insert an SD/SDHC memory card (up to 32 GB) or a USB flash drive into the corresponding slot on the frame. Ensure the media is inserted correctly.
- 5. Power On:** The frame will automatically power on once connected to power. If not, locate the power button (usually on the back or side) and press it.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

Use the control buttons (usually located on the back or side of the frame) to navigate through menus and settings. Common buttons include Menu, Enter, Up, Down, Left, and Right.

4.2 Photo Playback

- Automatic Slideshow:** Once media is inserted and the frame is powered on, the photo slideshow mode will begin automatically.
- Manual Selection:** Navigate to the "Photo" or "Browser" option in the main menu to manually select photos or folders to display.
- Slideshow Settings:** Access the settings menu to configure slideshow options such as display mode, transition effects, interval time, and repeat mode.

4.3 Clock & Calendar

The frame includes a built-in clock and calendar function. Access these features from the main menu. You can set the time, date, and display format within the settings.

4.4 Supported Media

The frame supports SD/SDHC memory cards up to 32 GB and USB flash drives. Ensure your photos are in a compatible format (e.g., JPEG, BMP, PNG).

5. MAINTENANCE

- Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a non-abrasive screen cleaner. Do not spray liquid directly onto the screen.
- Cleaning the Frame:** Wipe the frame's body with a dry, soft cloth. Avoid using harsh chemicals or abrasive cleaners.
- Storage:** When not in use for extended periods, store the frame in a cool, dry place away from direct sunlight and extreme temperatures.
- Power Off:** Always power off the device properly before disconnecting it from the power source or removing media.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty.	Ensure power adapter is securely connected to the frame and a working power outlet. Try a different outlet.
No photos displayed.	No media inserted or incompatible file format.	Insert a supported SD/SDHC card or USB drive with compatible image files (JPEG, BMP, PNG). Ensure media is inserted correctly.

Problem	Possible Cause	Solution
Images appear distorted or low quality.	Low resolution images or incorrect aspect ratio settings.	Use higher resolution images. Check display settings in the menu to adjust aspect ratio if available.
Buttons are unresponsive.	Temporary software glitch.	Unplug the power adapter, wait 10 seconds, then plug it back in to restart the frame.

7. SPECIFICATIONS

- **Model:** ASDPF08F
- **Screen Size:** 8 inches
- **Display Type:** TFT True Color LCD
- **Resolution:** 1024 x 768 (4:3 Aspect Ratio)
- **Supported Media:** SD / SDHC memory cards (up to 32 GB), USB Flash Drives
- **Supported Photo Formats:** JPEG, BMP, PNG (common formats)
- **Built-in Storage:** 4GB
- **Product Dimensions:** 6.5 x 7.87 x 0.99 inches (16.5 x 20 x 2.5 cm)
- **Item Weight:** 10.4 ounces (295 grams)
- **Power:** AC Adapter (Input: 100-240V, 50/60Hz)

8. WARRANTY AND SUPPORT

Aluratek products come with a limited warranty. Please refer to the warranty card included in your product packaging or visit the official Aluratek website for detailed warranty information and terms and conditions.

For technical support, troubleshooting assistance, or customer service inquiries, please visit the Aluratek support page or contact their customer service department. Contact information can typically be found on the Aluratek website or in your product's packaging.

Online Resources: www.aluratek.com